


ACC-73 Instruction

Step 1: Fold A08 and glue them on right place according to the orienting line, just glue.


Then fold A10, get D-ring through, and then stitch them in right place according to the orienting line.

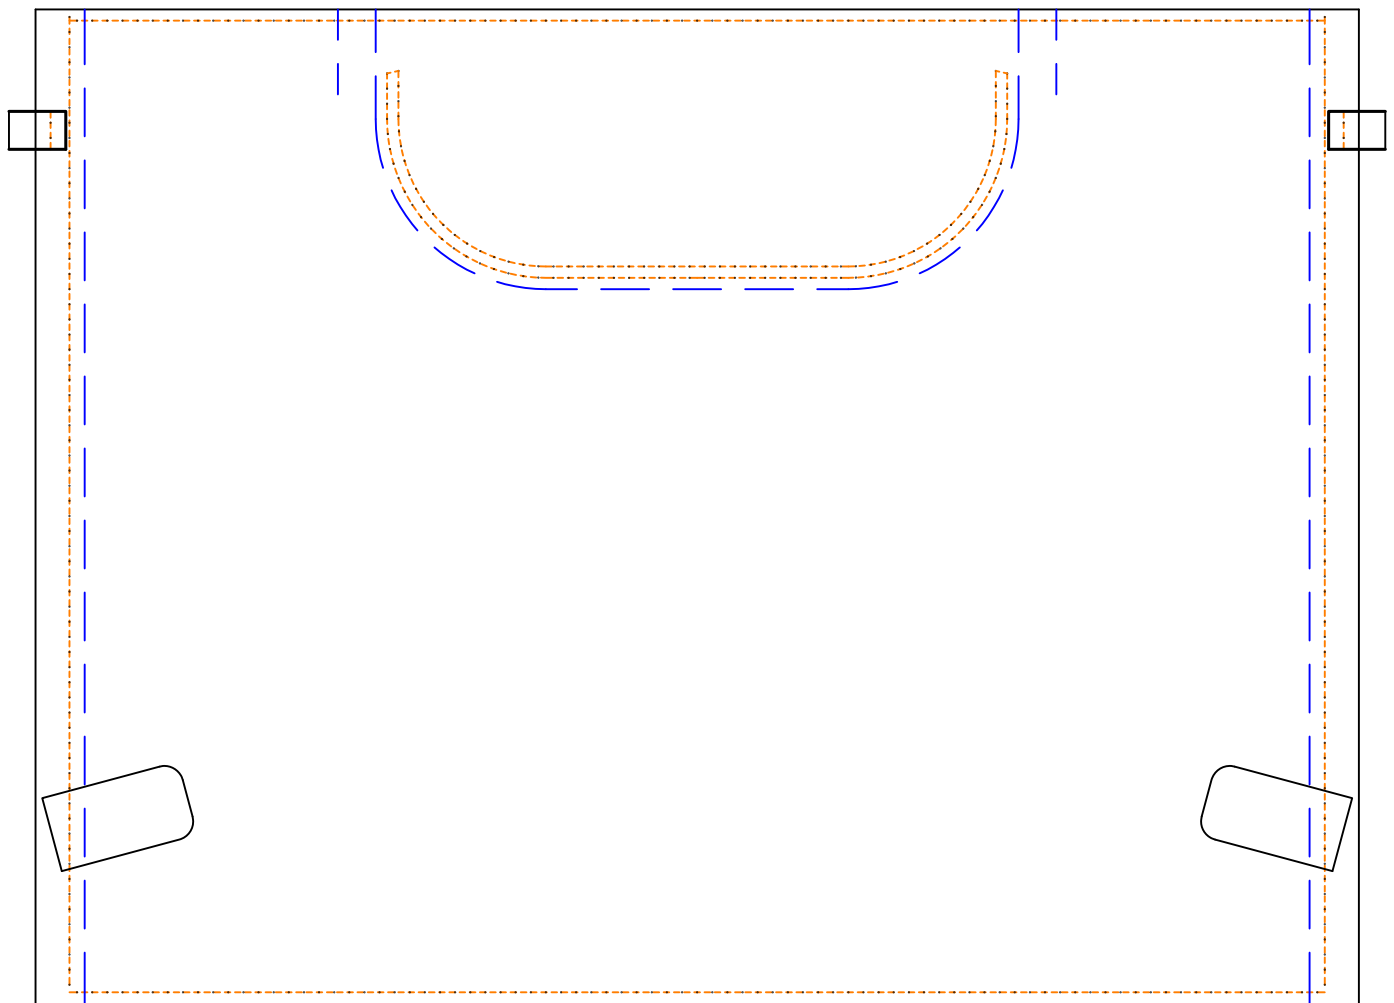


Step 2: Stitch A09 on right place according to the orienting line, please notice that only sew it on lining, then get the handle (A06) through the up 2 slots and get the shoulder belt (A07) through the down 2 slots, shoot rivets with A07 and the A04's lining.

After doing that, glue and sew 2 pieces of A04 together. Then sew 2 pieces of A04 with A06 and A07. Please notice that only sew the orange stitching lines, don't sew the green stitching lines.


Then the handle and shoulder belt were fixed firmly.

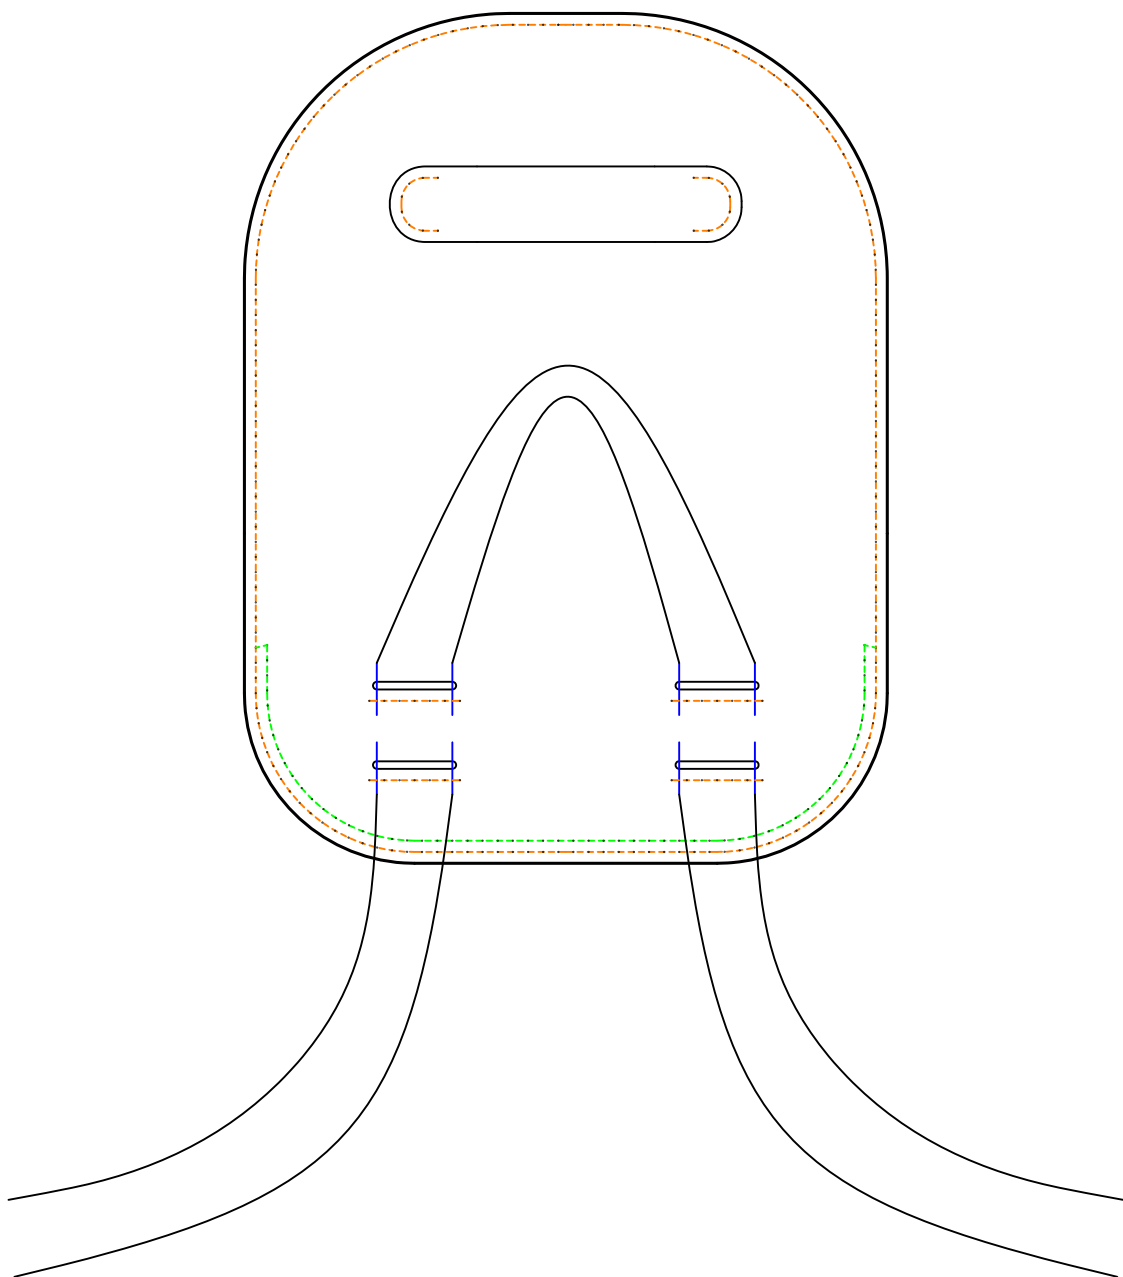


Step 3: Then sew A04 with A02, stitch the green lines.

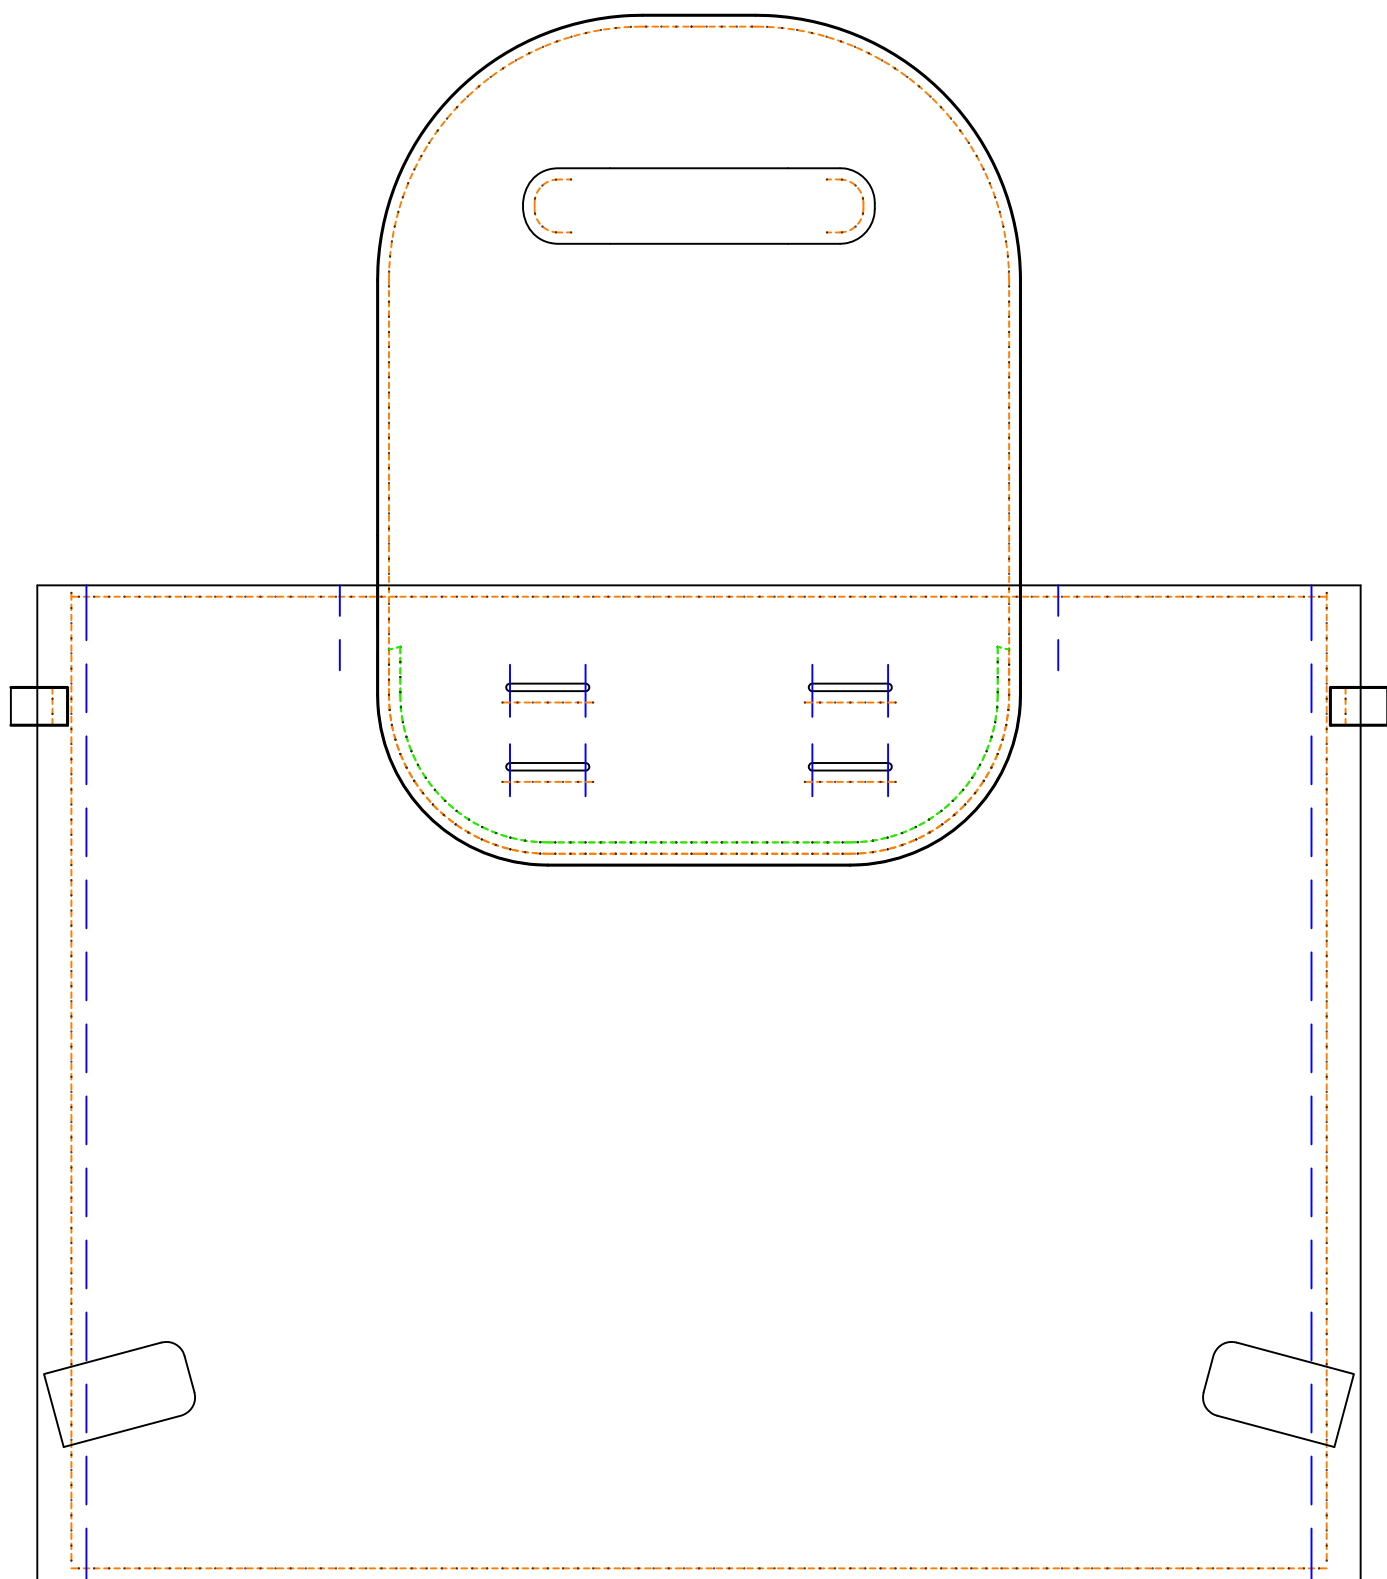

Step 4: Fold the A05 and stitch the 2 sides to form the inner pocket. Then, sew it on A02

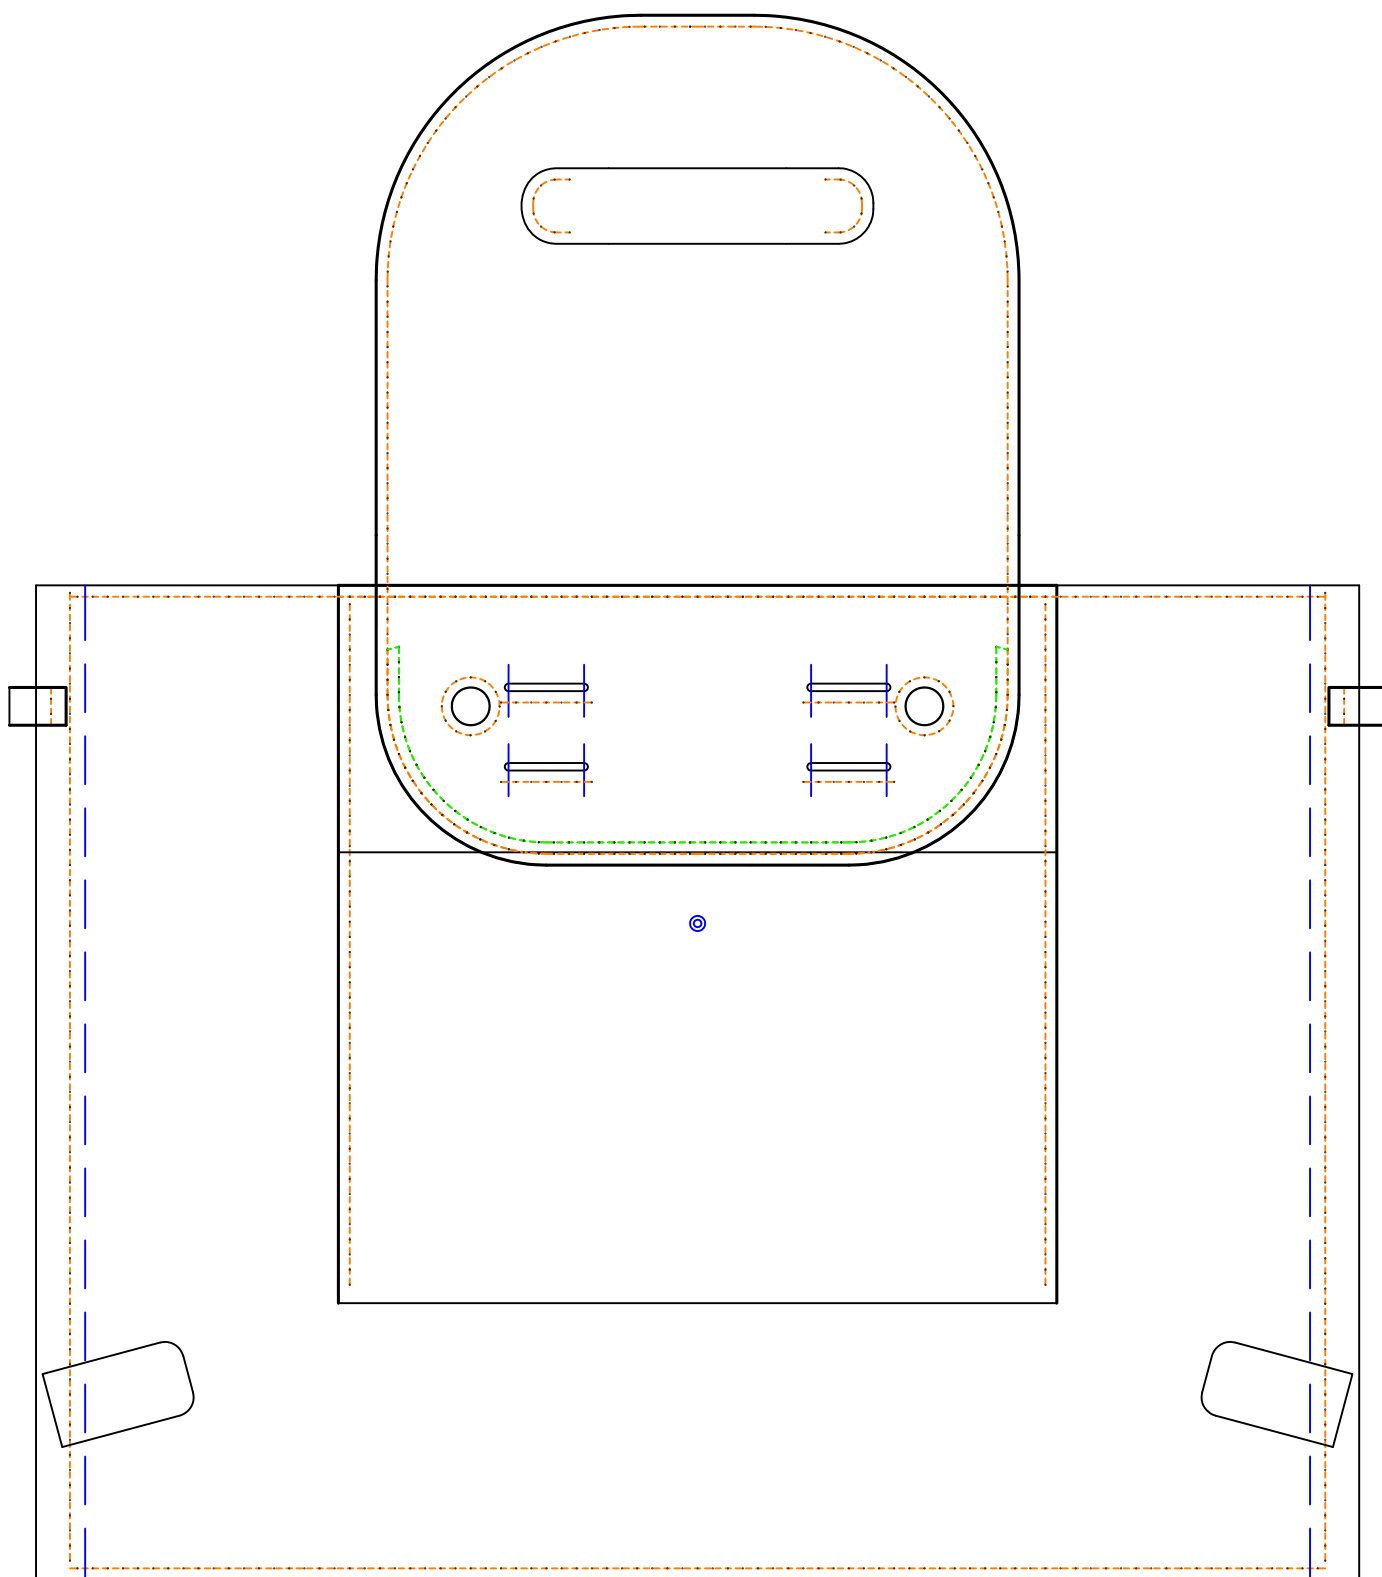

Step 5: Key step is coming. Glue and sew A02 with A01, Please DO notice that, A01's edge overlap A02.

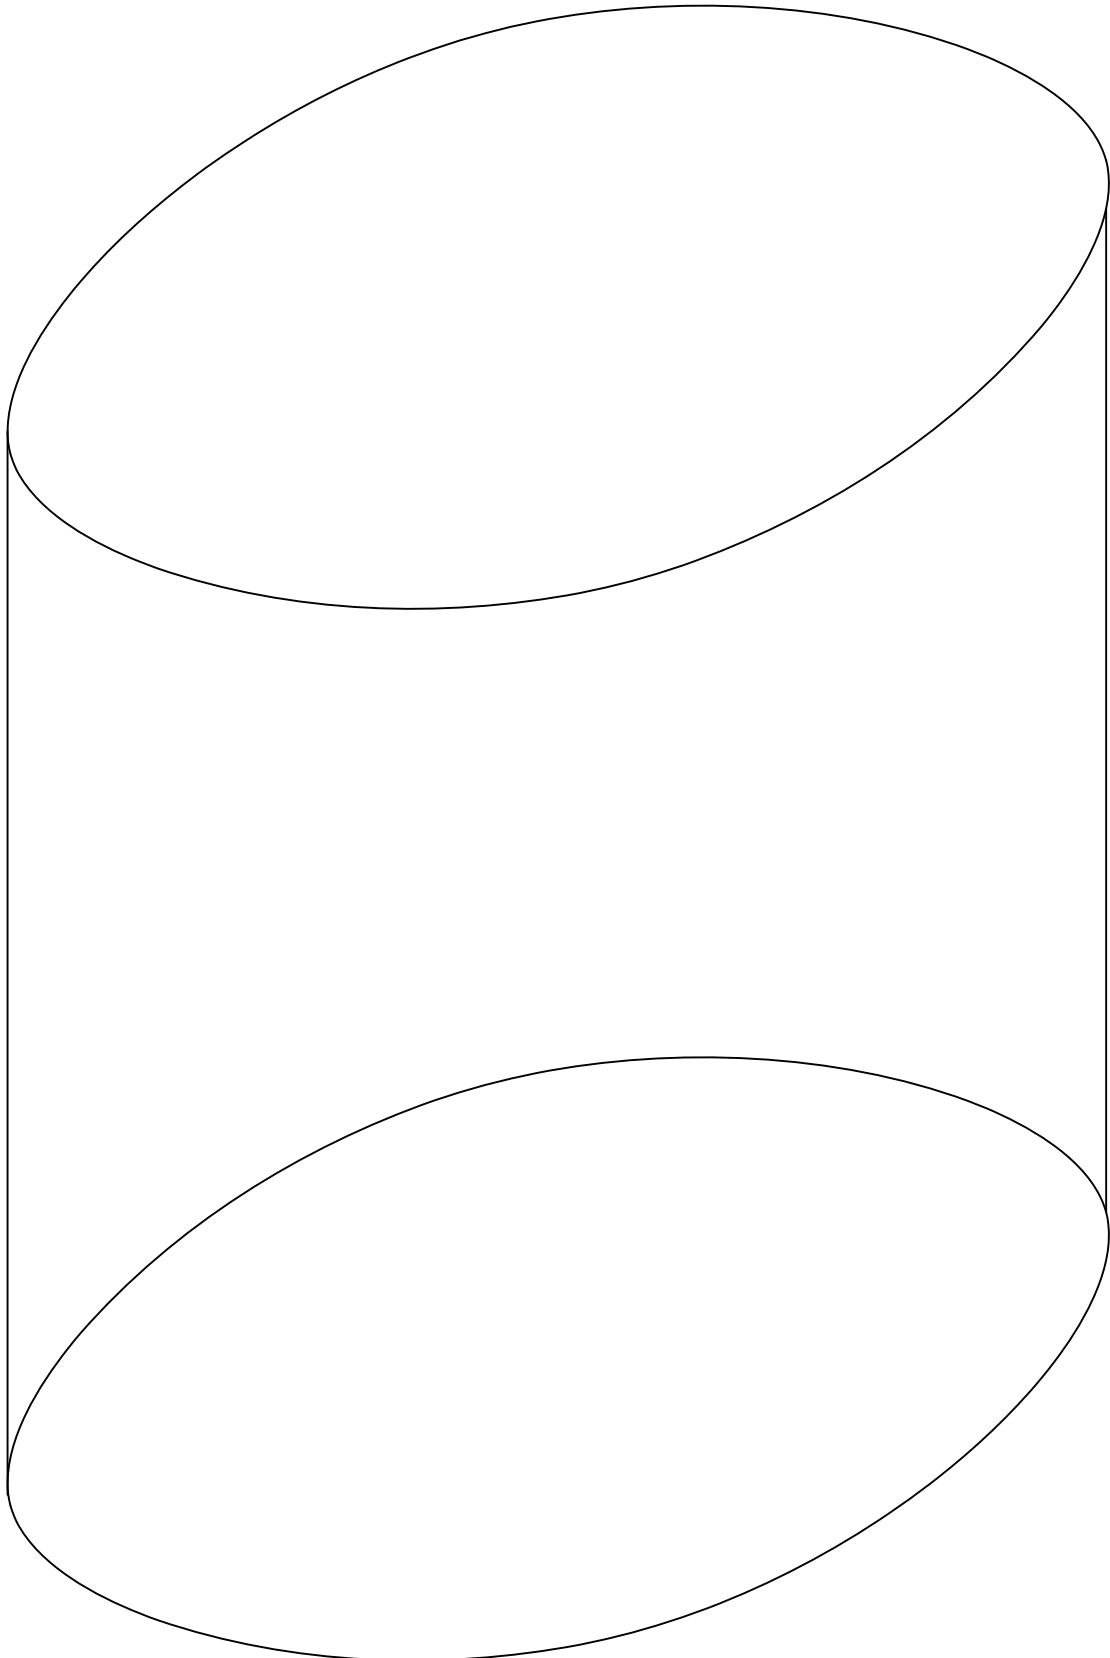

Step 6: Cut 2 pieces of A03, glue and sew them together, install 4 foot nails on. After doing that, fold the edge vertically (if you use vegetable tanned leather, wet before folding), then glue and sew it with Step 5's combination.
Then the bag is OK.

Notice:

- 1, You can burnish edges for aesthetic if you use vegetable tanned leather and use edge paint for aesthetic if you use chrome tanned leather;
- 2, 1oz=0.4mm;
- 3, Here is the line instruction.

