


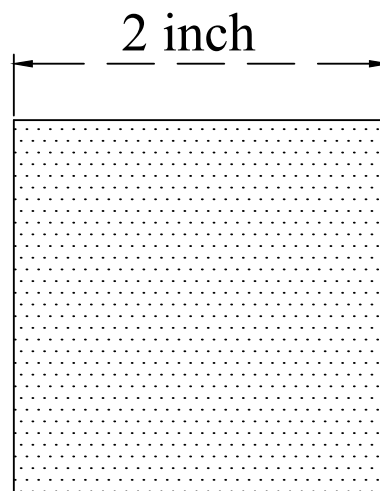



Calibration Page

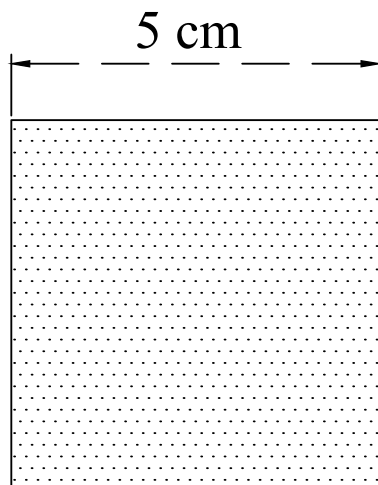

Assembly Instructions

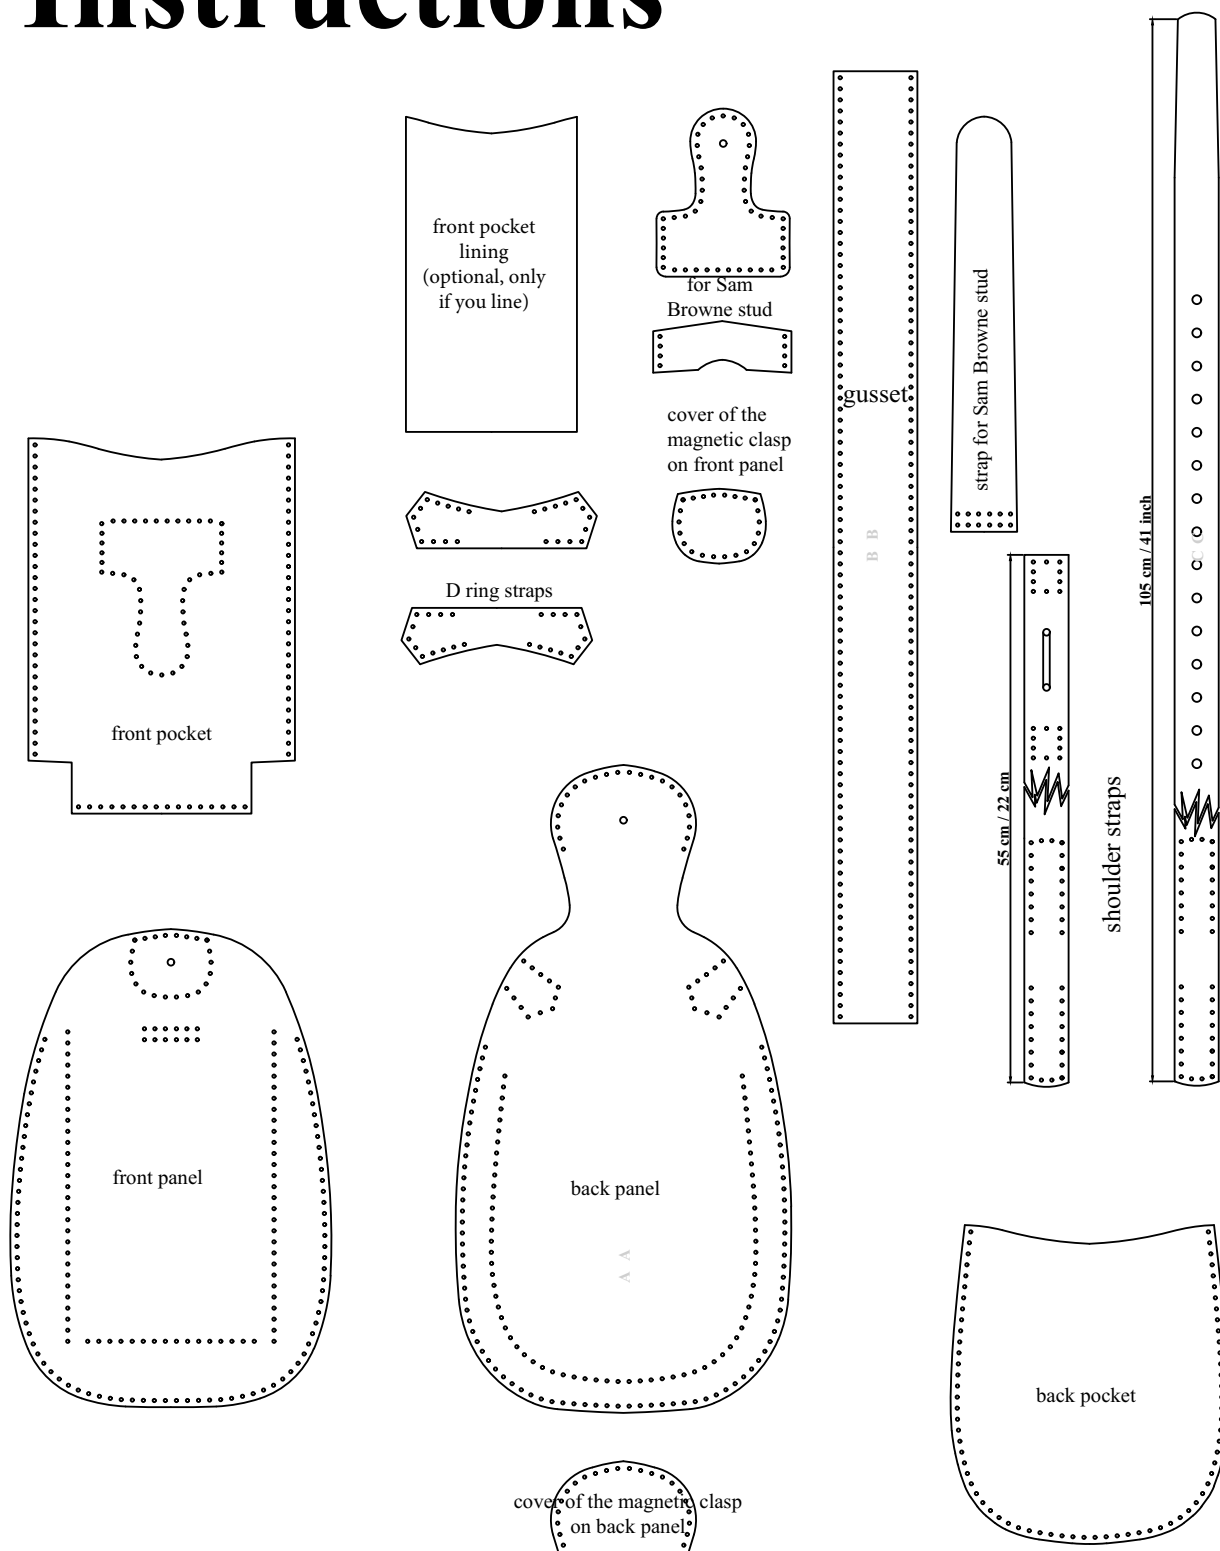


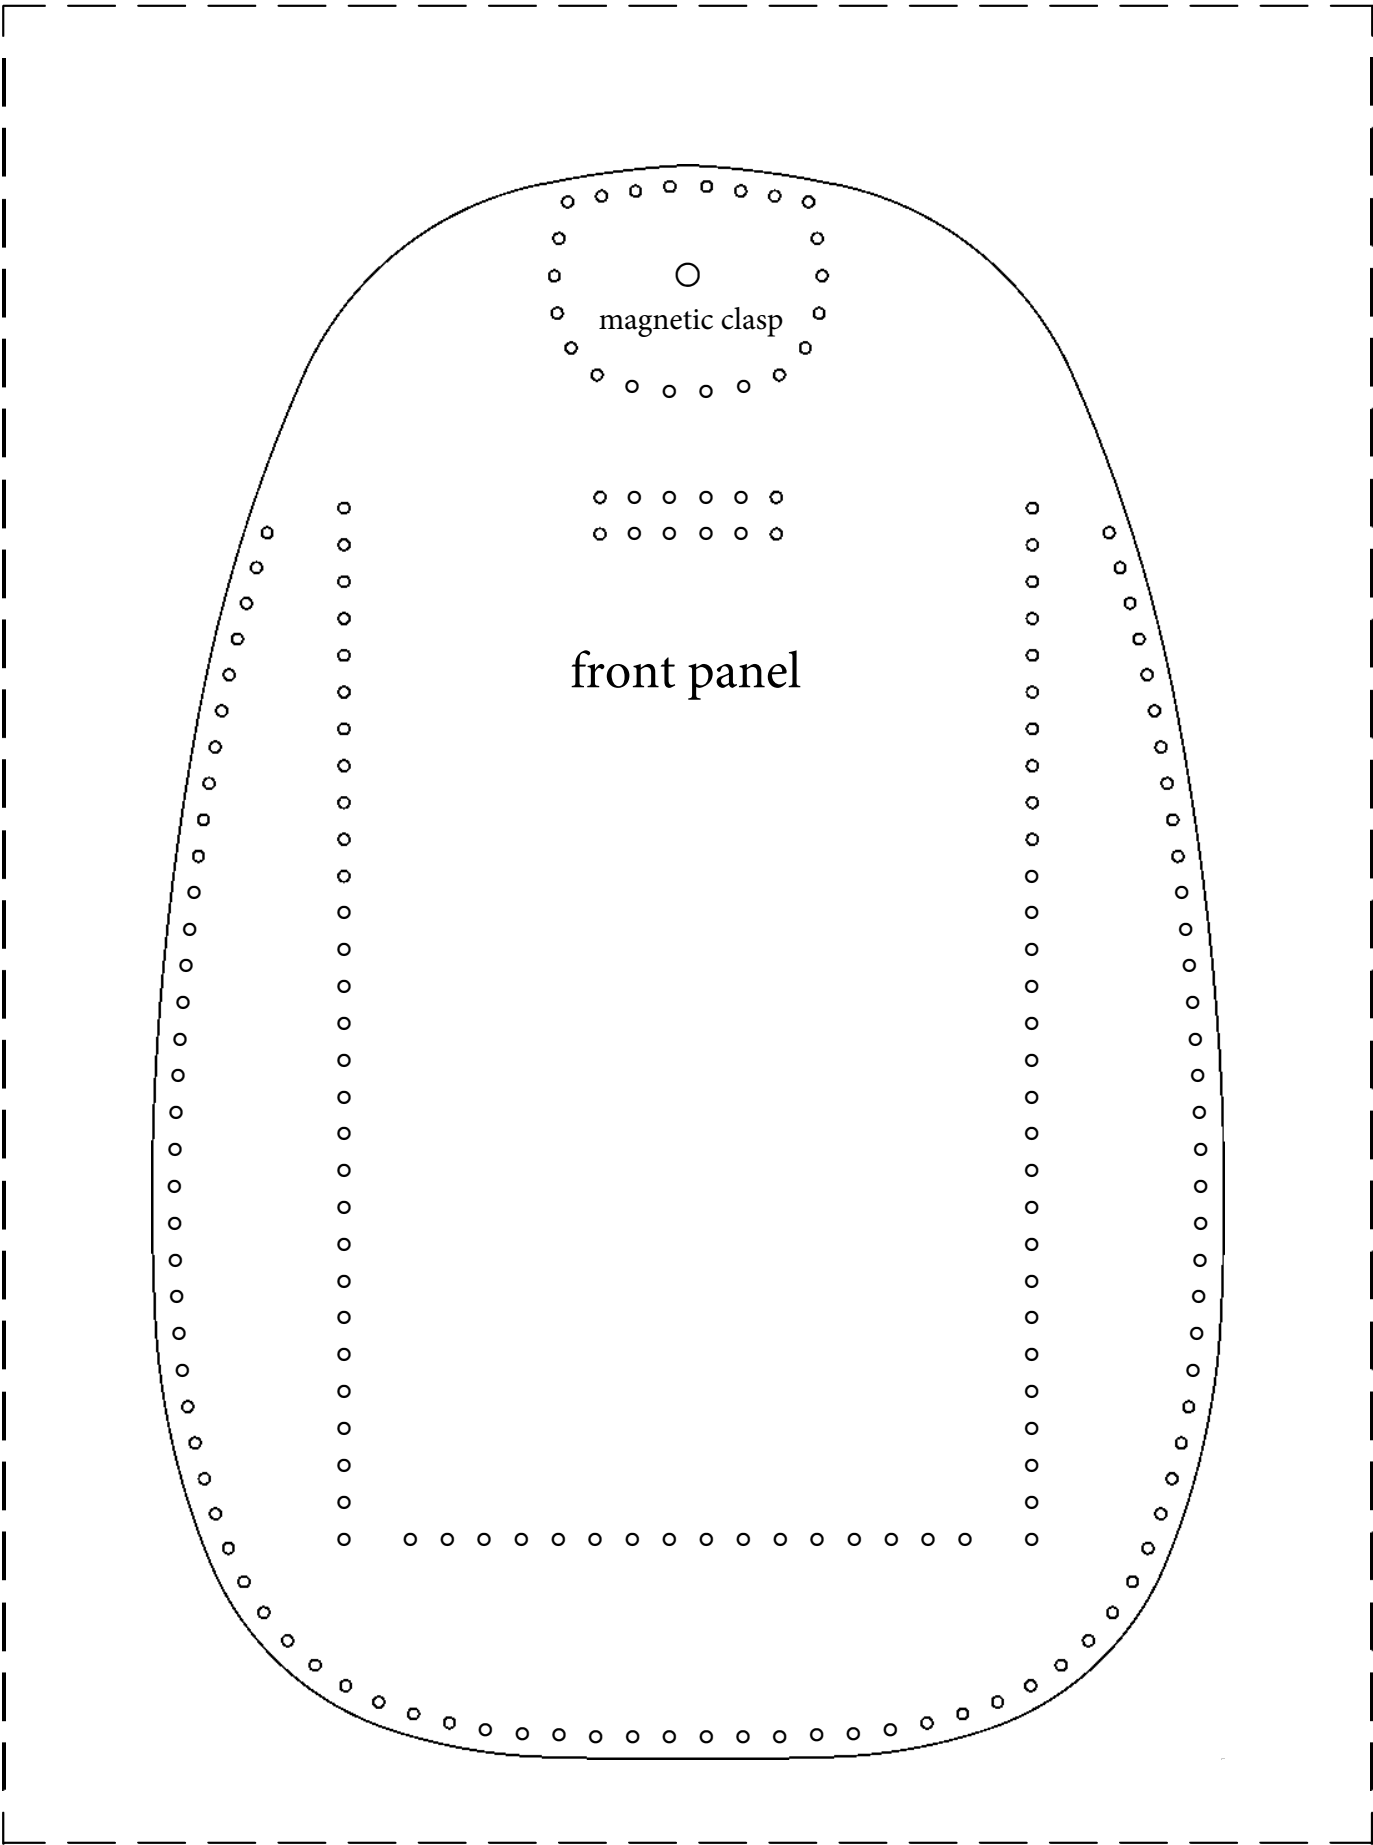

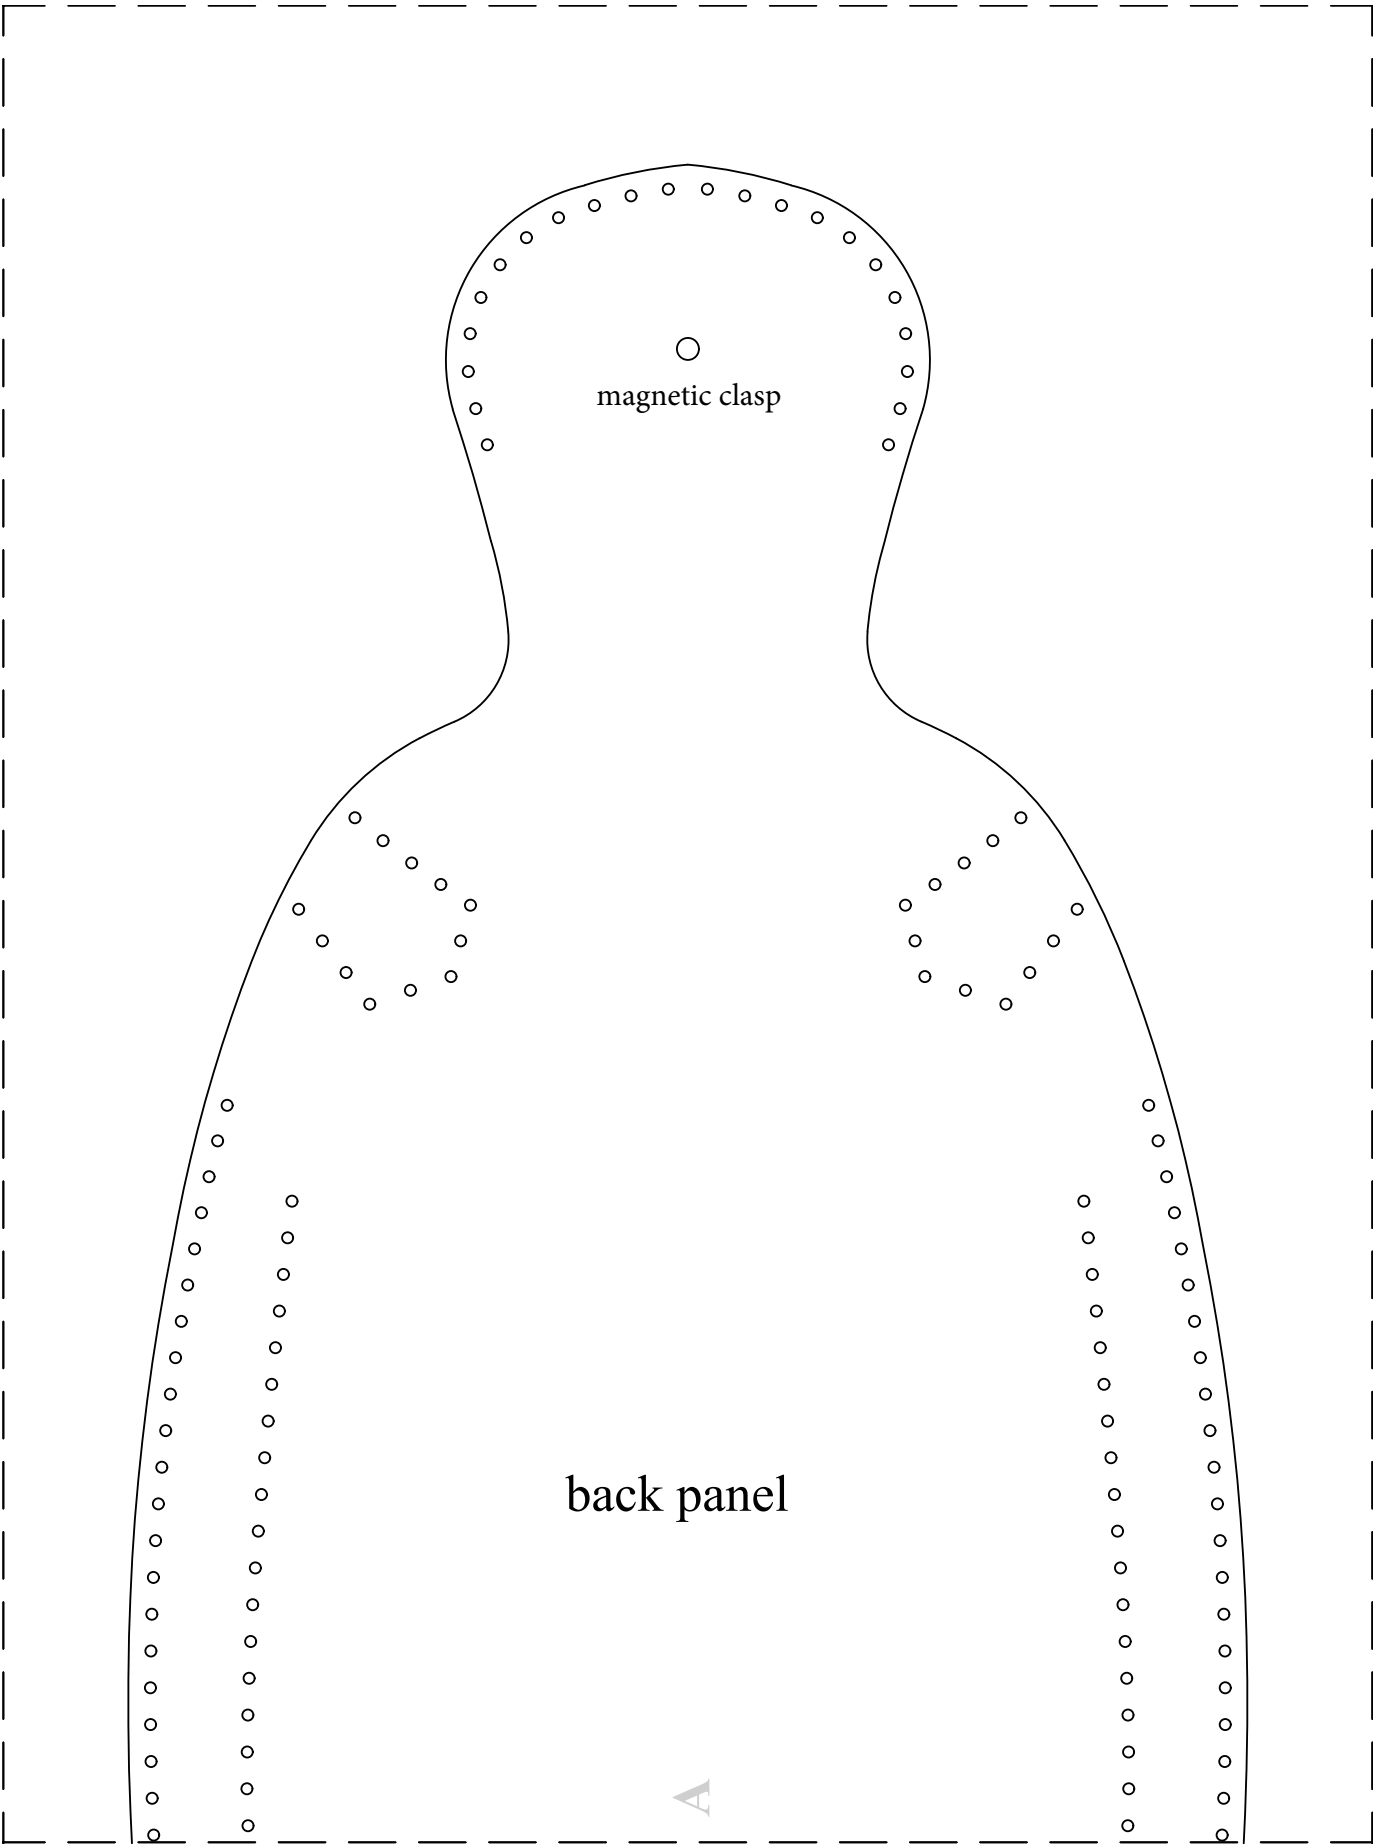




back panel

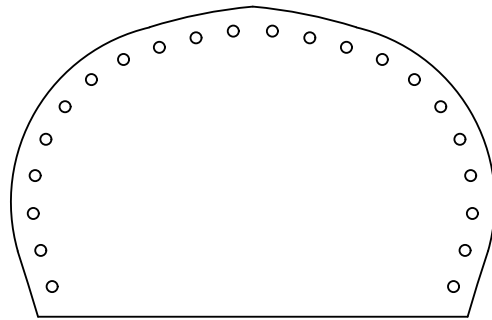


cover of the magnetic
clasps on back panel

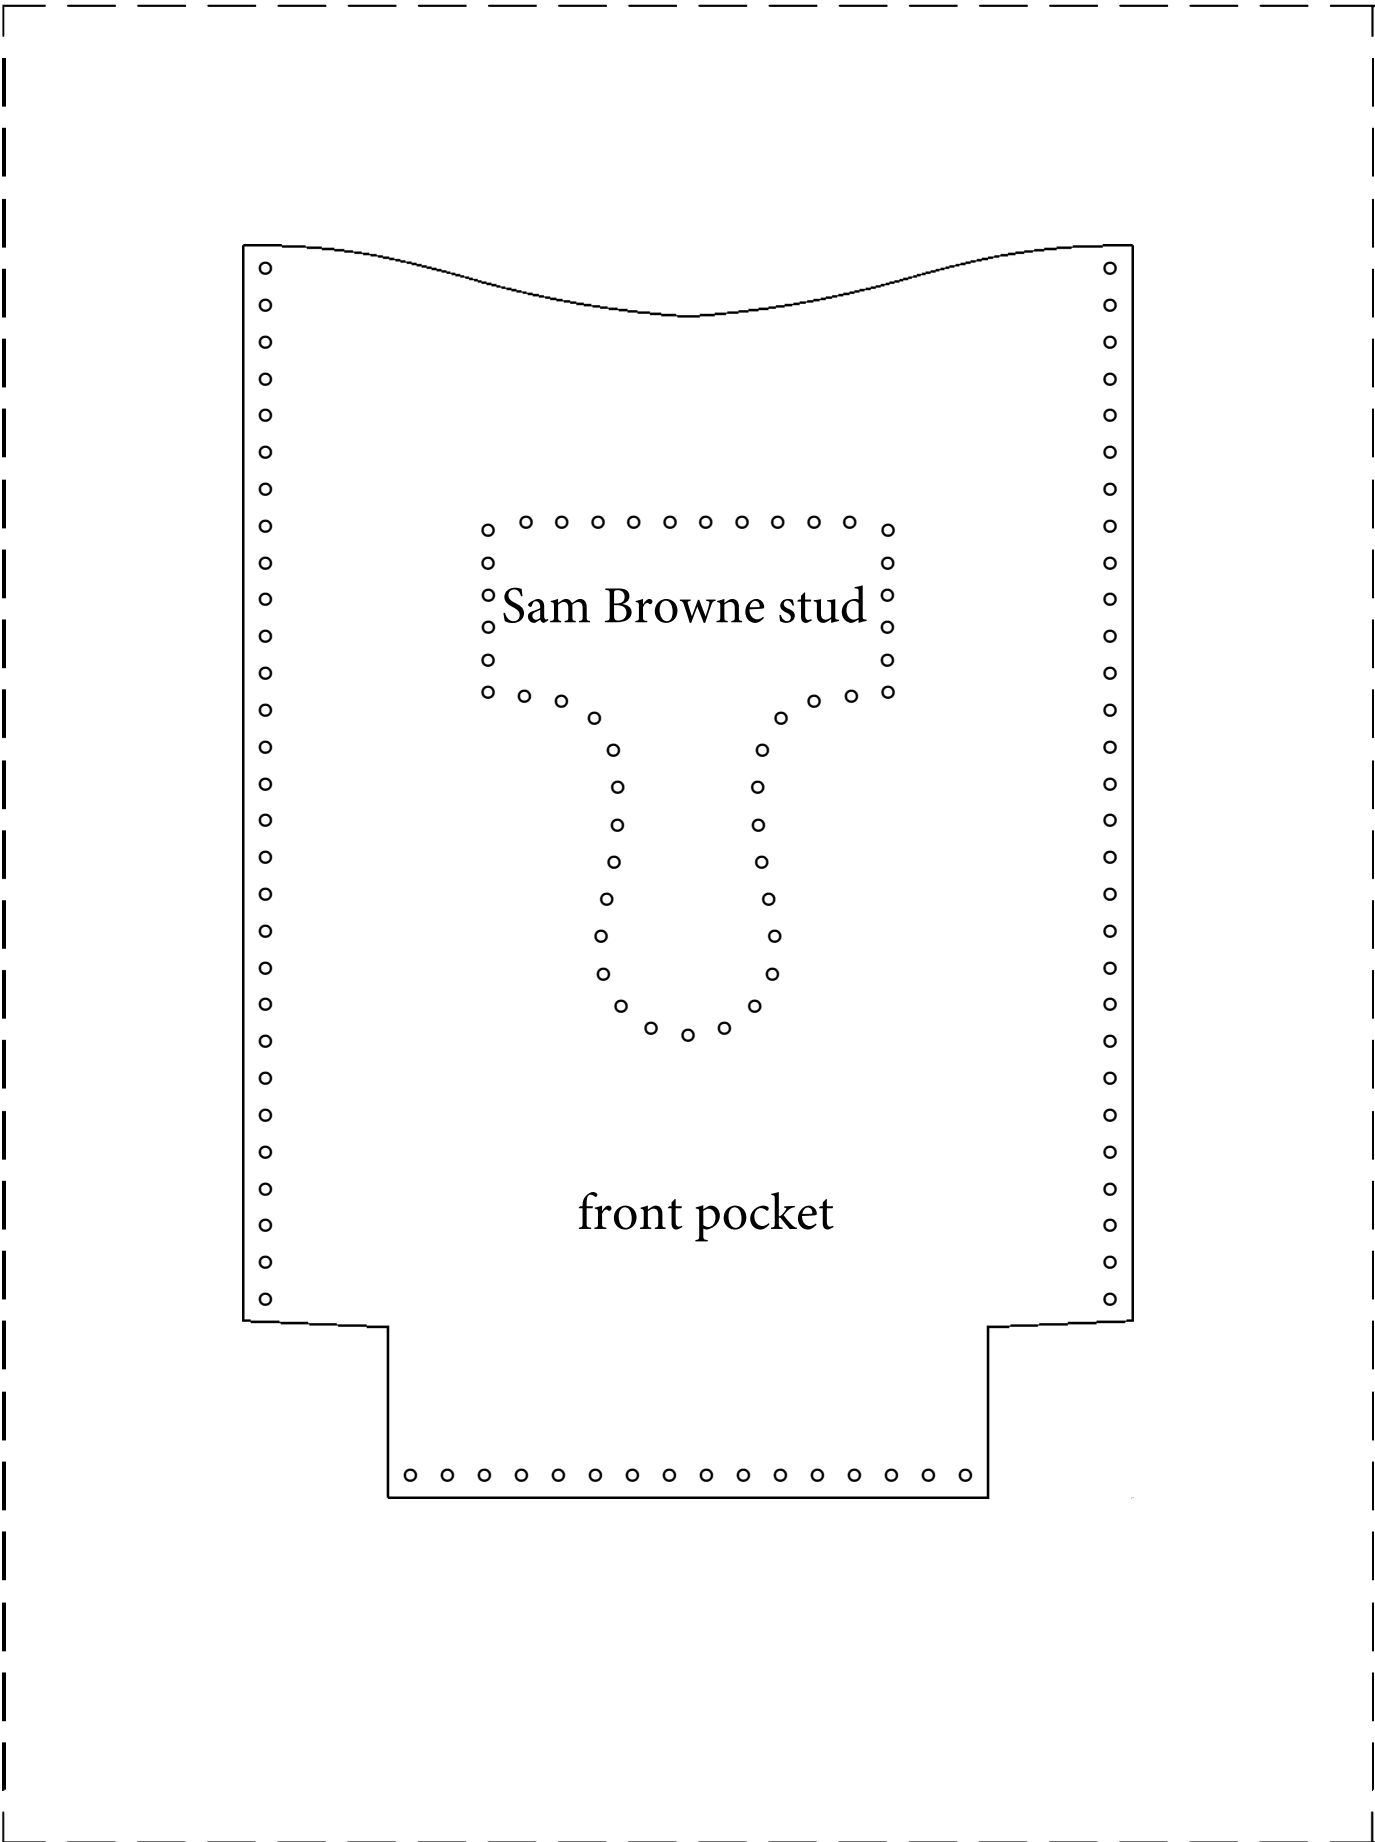


Sam Browne stud


front pocket

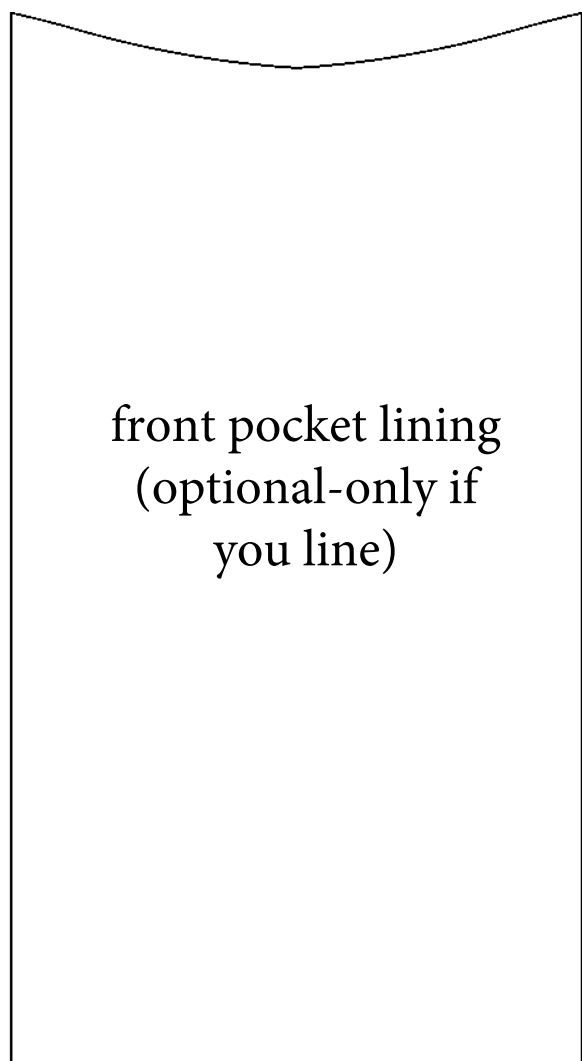

front pocket lining
(optional-only if
you line)


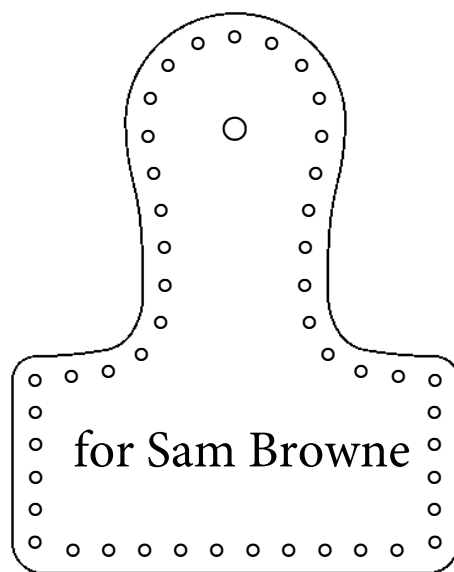


for Sam Browne

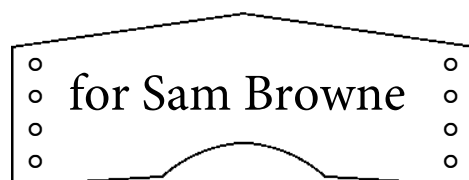



for Sam Browne

cover of the magnetic
clasp on front panel

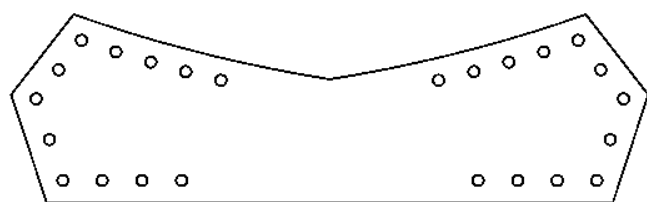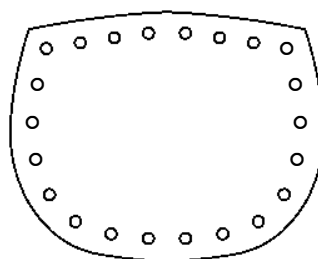


D ring straps

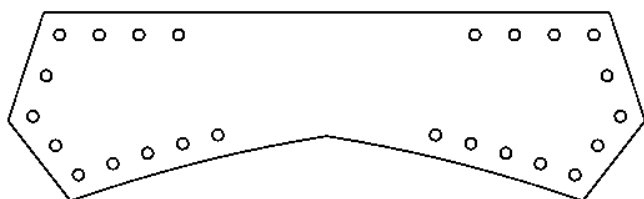

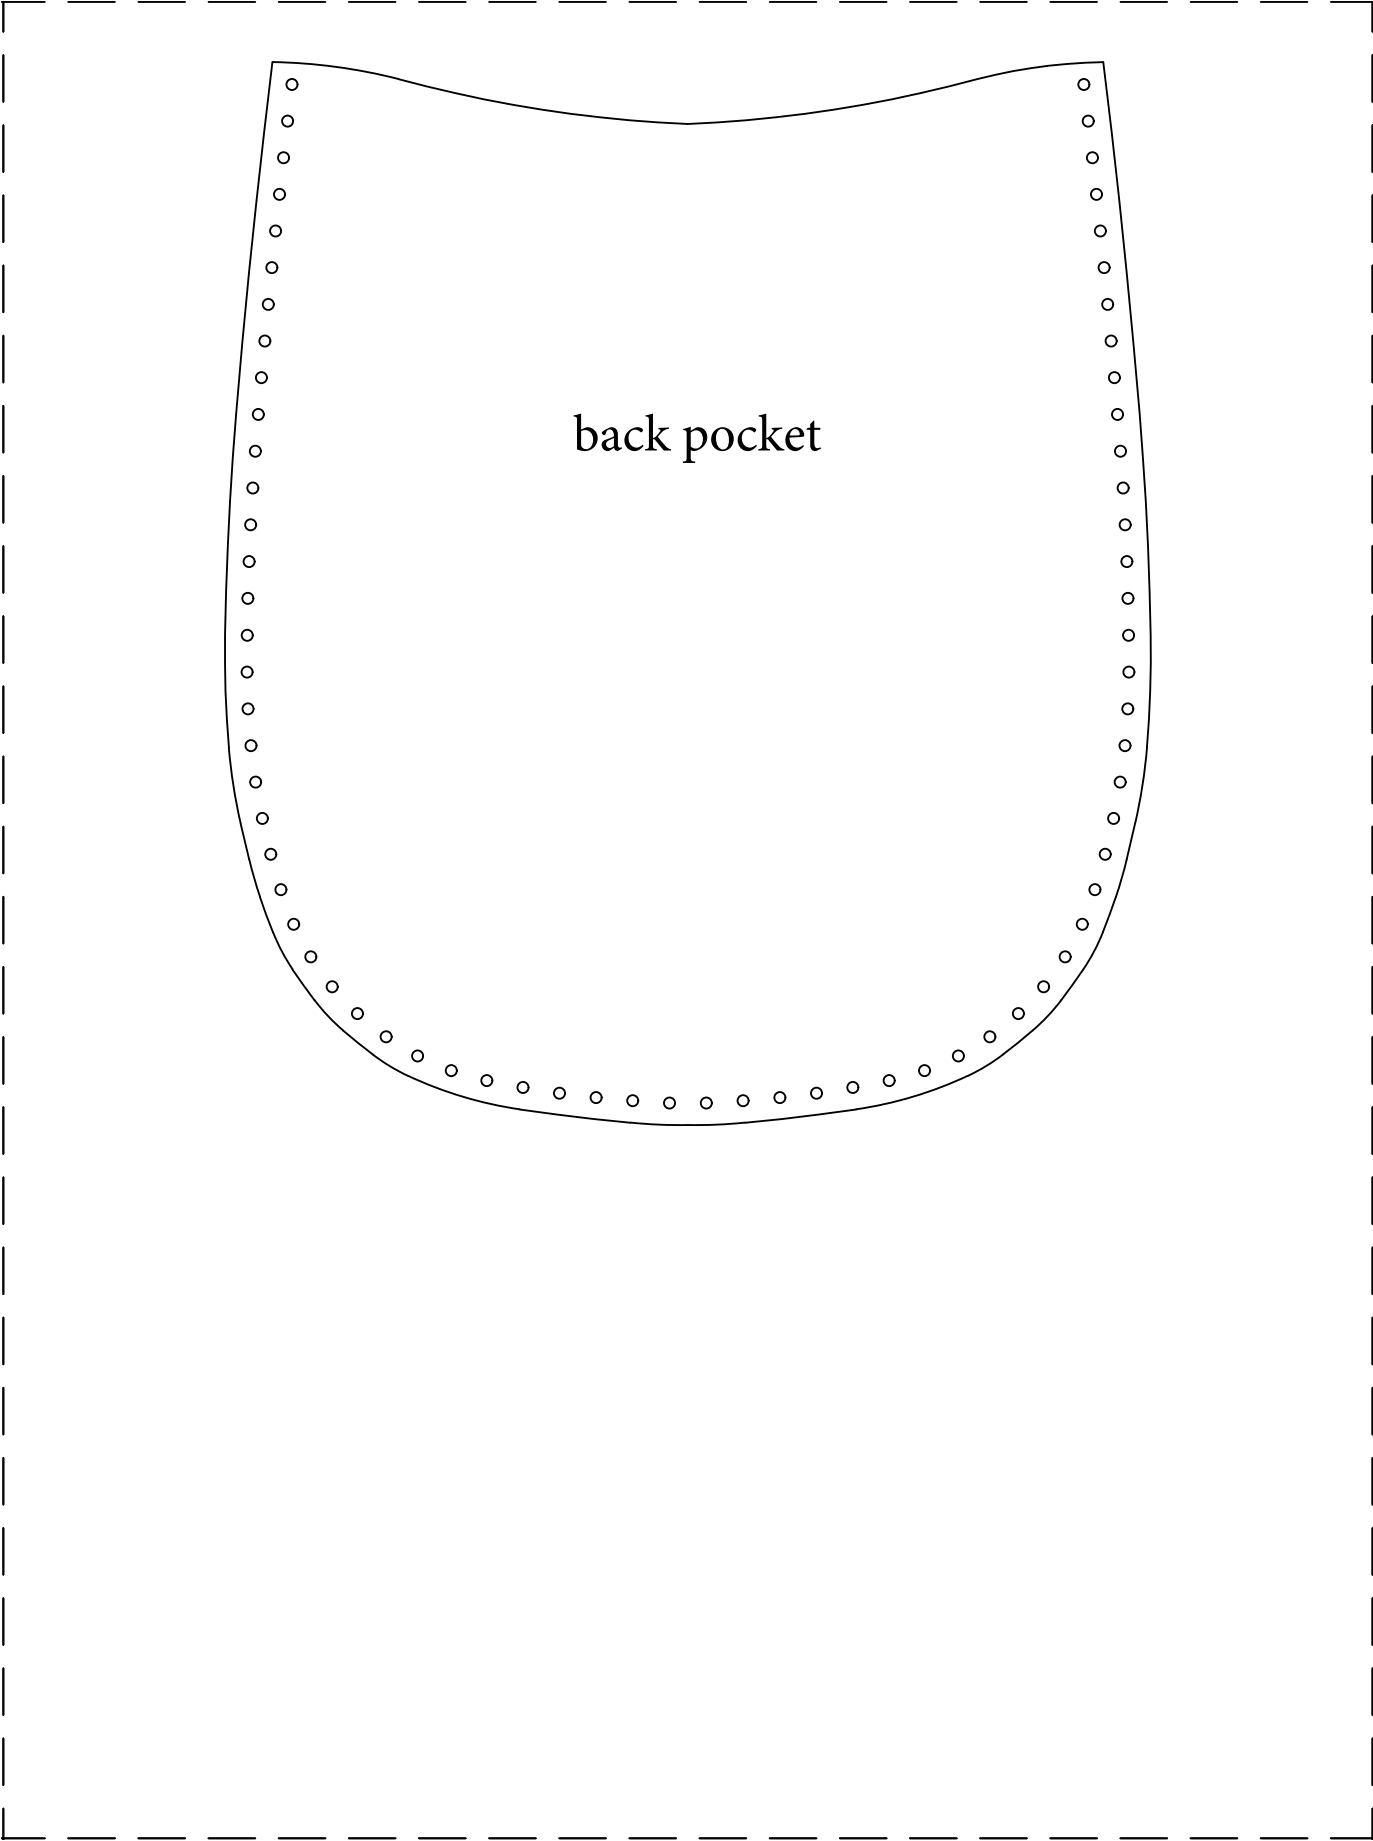

back pocket

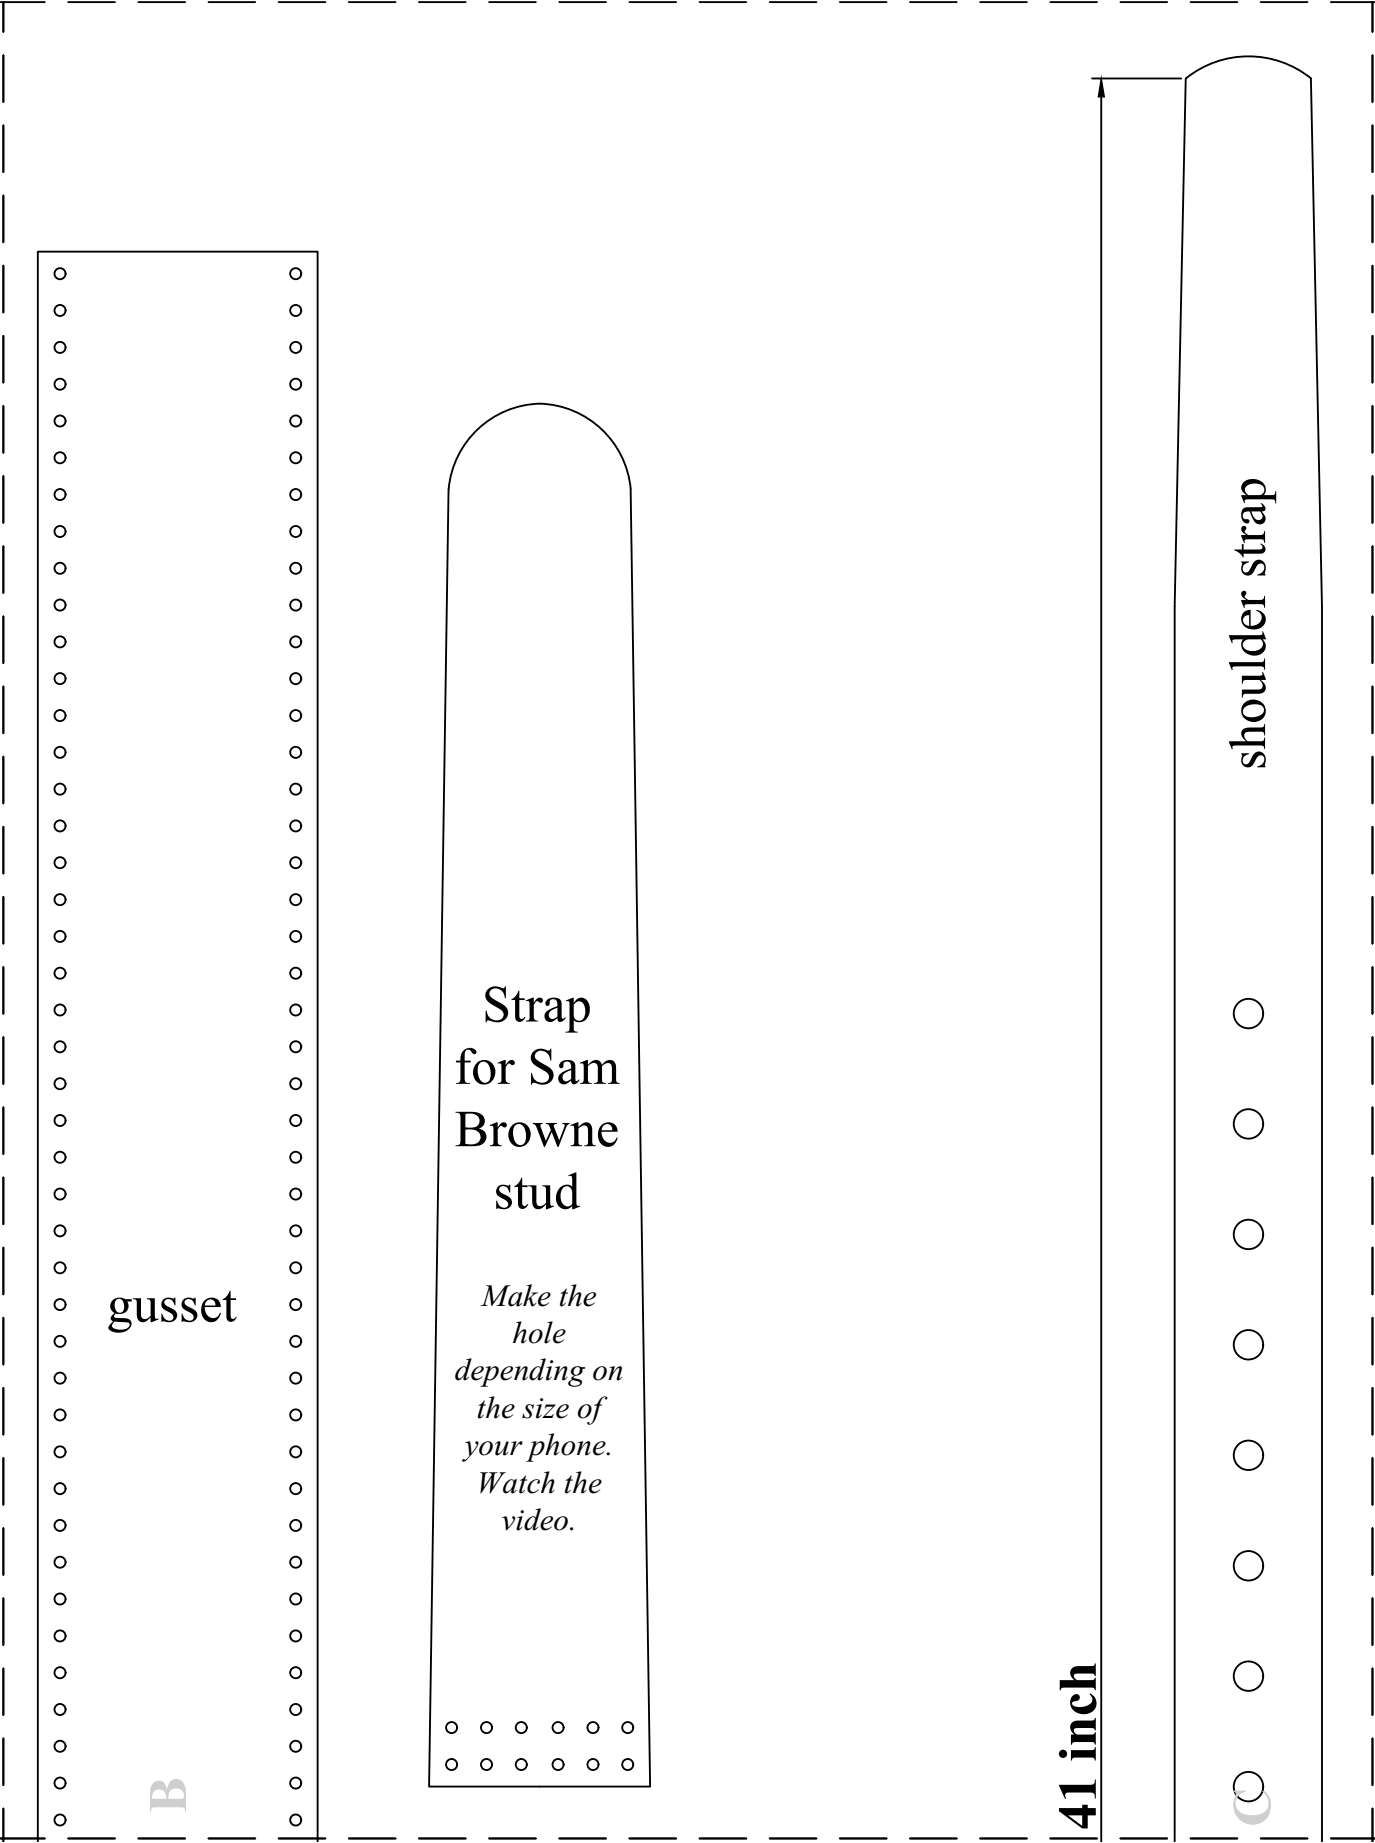


gusset

B

Strap
for Sam
Browne
stud

*Make the
hole
depending on
the size of
your phone.
Watch the
video.*



41 inch

shoulder strap



C

