


PROJECT PATTERN CAMERA CASE

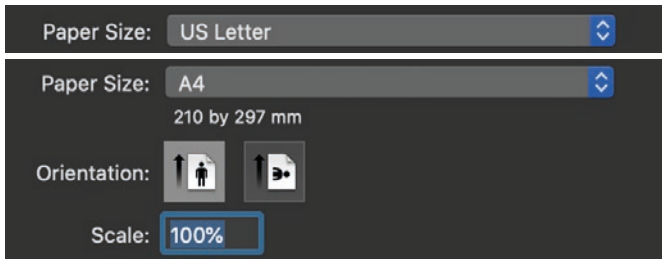

Printing Instruction

The pattern is designed to be printable. We took into consideration the standard printer margin for letter & A4 sized papers.

Select "US letter" or "A4" under paper size. Make sure portrait mode is selected.

Be sure to click "scale: 100%" to ensure that the page is going to print to scale.

Recommended Leather Weight

1.6mm~2.0mm (4~5oz)

Instruction

1. Trace the pattern onto the leather and rough cut it.
2. Apply the Diamond Leather Finish to the front of the leather using the Foam Brush. Once dry, cut out the individual pieces.
3. Cut the lining leather slightly larger than the patterns for the body, cover, and side panels.
4. Use the French Edge Skiver to thin out the body, cover, and belt loop.



5. Punch holes in the body using the 1-Prong Lacing Chisels and install the tuck clasps, starting with the base.
6. Apply glue to the back of the body, cover, side panels, and lining leather.
7. Glue the leather to the lining, using the curve of the mallet as a gauge to ensure the body and cover panels adhere smoothly along the curves.
8. Trim excess leather along the pattern. Apply Diamond Edge Base Coats to the edges and allow them to dry completely. For the side panels, apply only to the upper edge marked by the red lines.
9. Use a Sanding Stick to even out the edges, and use an Edge Beveler to bevel all leather panels.
10. Mix the Edge Color in a silicone bottle and apply it to the leather edges until smooth and glossy.
11. Use the Wing Divider to mark stitching line positions with a 3mm wide guideline.
12. Use a 2mm Diamond Stitching Chisel and a round drive punch to punch holes in the body, cover, belt loop, and D-ring tabs. Adjust hole spacing for the curved areas of the body using a single Diamond Chisel along marked points.
13. On the side panels, punch holes in the upper end (red line area) with the Diamond Chisel. At the lower end (gray line area), lightly tap to mark stitching holes without pushing all the way through. Place the side panels on a Cork Punching Board and use a Diamond Stitching Awl to pierce the gray line holes at a 45-degree angle.
14. Insert tabs through the Roller Dees, align with holes, and secure with rivets.
15. Stitch decorative lines on the cover first, then stitch the main body and cover together, adding belt loops at the center.
16. Stitch decorative lines on the upper edge of the body, then stitch side panels to the body with the side panel edge perpendicular to the body edge.
17. Install the tuck clasp on the cover, then attach the strap to the D-ring to complete.



/ivan.leathercraft





@ivanleathercraft

Share your projects with us using the hashtag #IVANVIDEOMONDAY & by tagging @ivanleathercraft on Instagram & Facebook

COPYRIGHT © 2024 IVAN LEATHERCRAFT CO., LTD. ALL RIGHTS RESERVED

PRINTABLE TEMPLATE

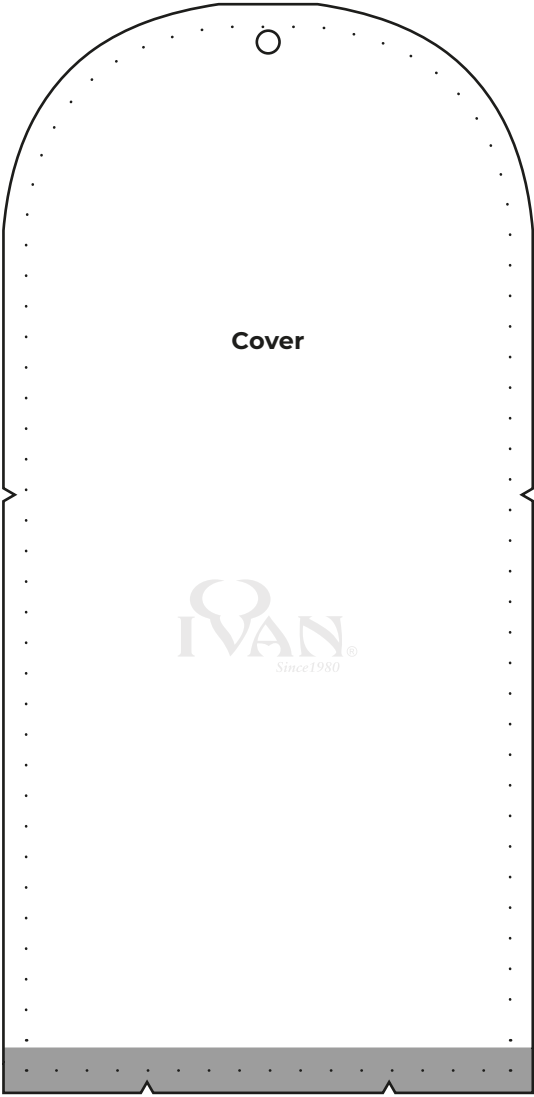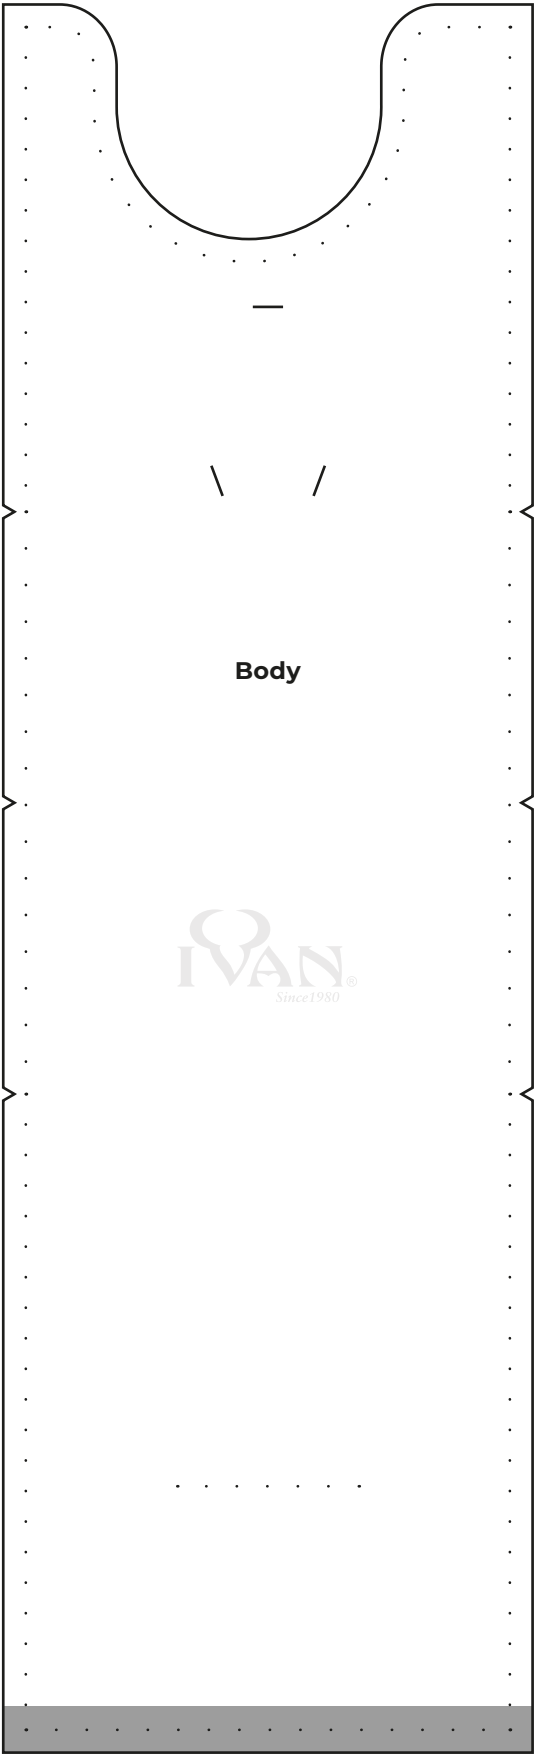

Measure this ruler against you own to make sure the pattern is to scale.

CAMERA CASE


Tools & material available on www.ivan.tw

 /ivan.leathercraft  @ivanleathercraft

Share your projects with us using the hastag #IVANVIDEOMONDAY & by tagging @ivanleathercraft on Instagram & Facebook

COPYRIGHT © 2024 IVAN LEATHERCRAFT CO., LTD. ALL RIGHTS RESERVED

PRINTABLE TEMPLATE

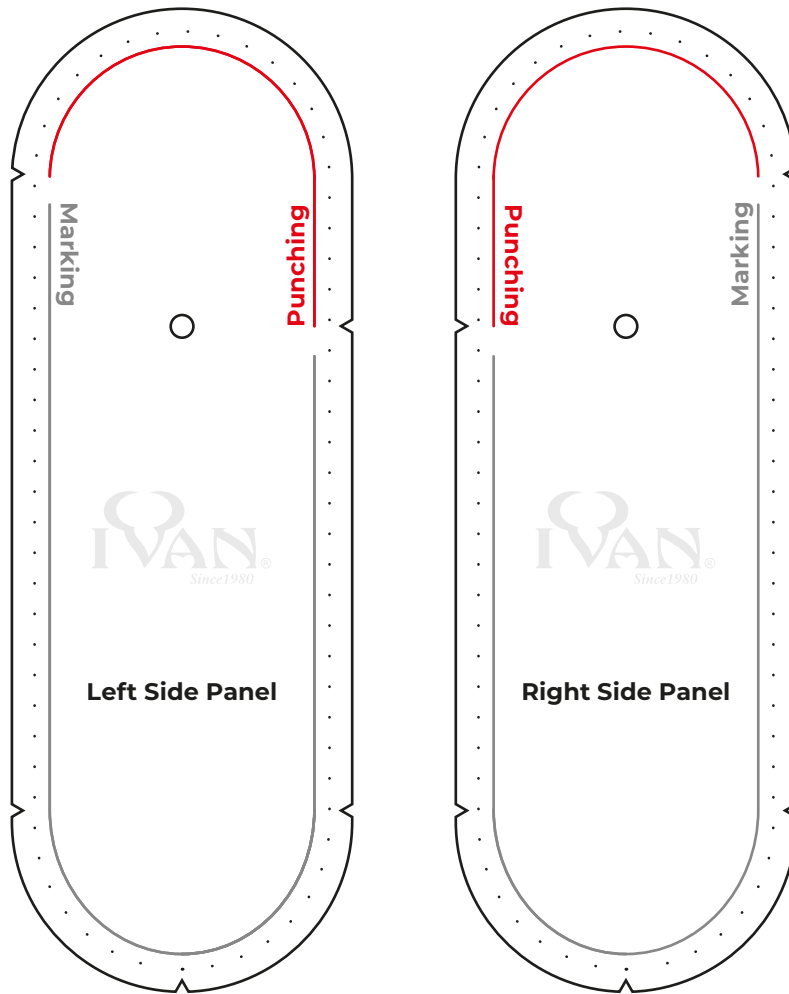

Measure this ruler against you own to make sure the pattern is to scale.

[f /ivan.leathercraft](https://www.facebook.com/ivan.leathercraft) [@ivanleathercraft](https://www.instagram.com/ivanleathercraft)

Share your projects with us using the hashtag #IVANVIDEOMONDAY & by tagging @ivanleathercraft on Instagram & Facebook

COPYRIGHT © 2024 IVAN LEATHERCRAFT CO., LTD. ALL RIGHTS RESERVED