

# VIKINGS LEATHERDESIGN

TOTE BAG

---



MODEL SERIAL NO  
VK172

DIFFICULTY LEVEL  
INTERMEDIATE

PDF  
PATTERN



VIDEO  
TUTORIAL




## TOOLS YOU NEED

- 4mm hole puncher (pricking iron)
- hammer
- knife
- printer
- waxed thread
- about Leather of 0.4 meter
- rec. thickness between 1.8-2.0 mm, check drawing
- few rivets
- 2x 25 mm Buckle
- 1 x Magnet 14-16mm

## CHECK BEFORE START


- Set your printer on A4/US letter format and actual size
- Measure each page with ruler

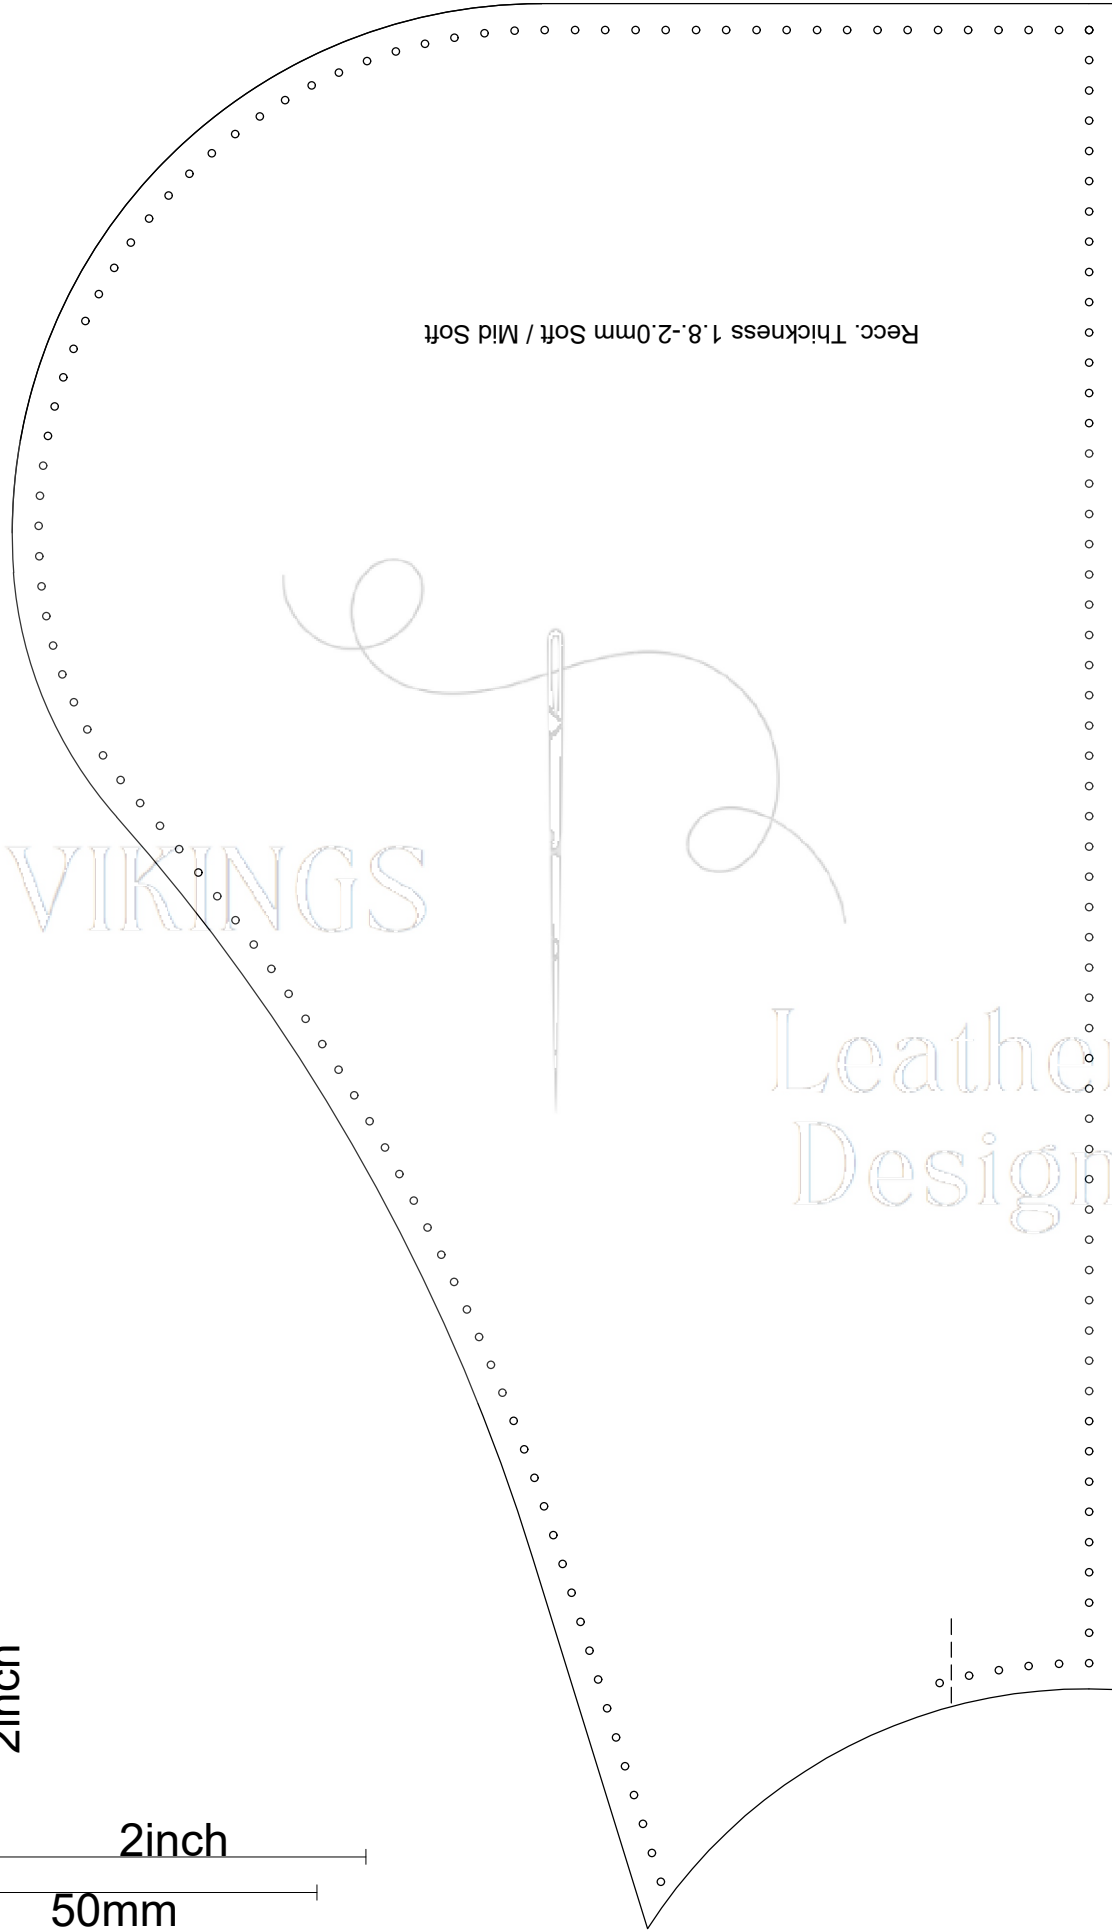


Rec. Thickness 1.8-2.0mm Soft / Mid Soft

VIKINGS

Leather  
Design

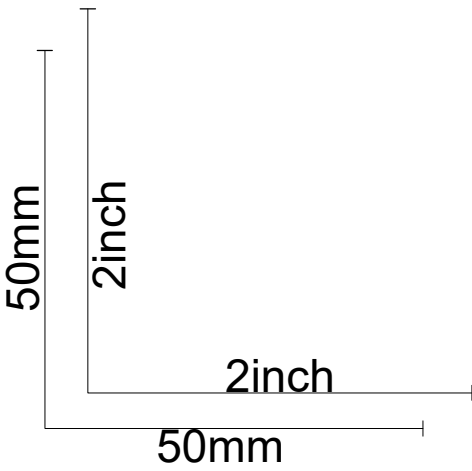


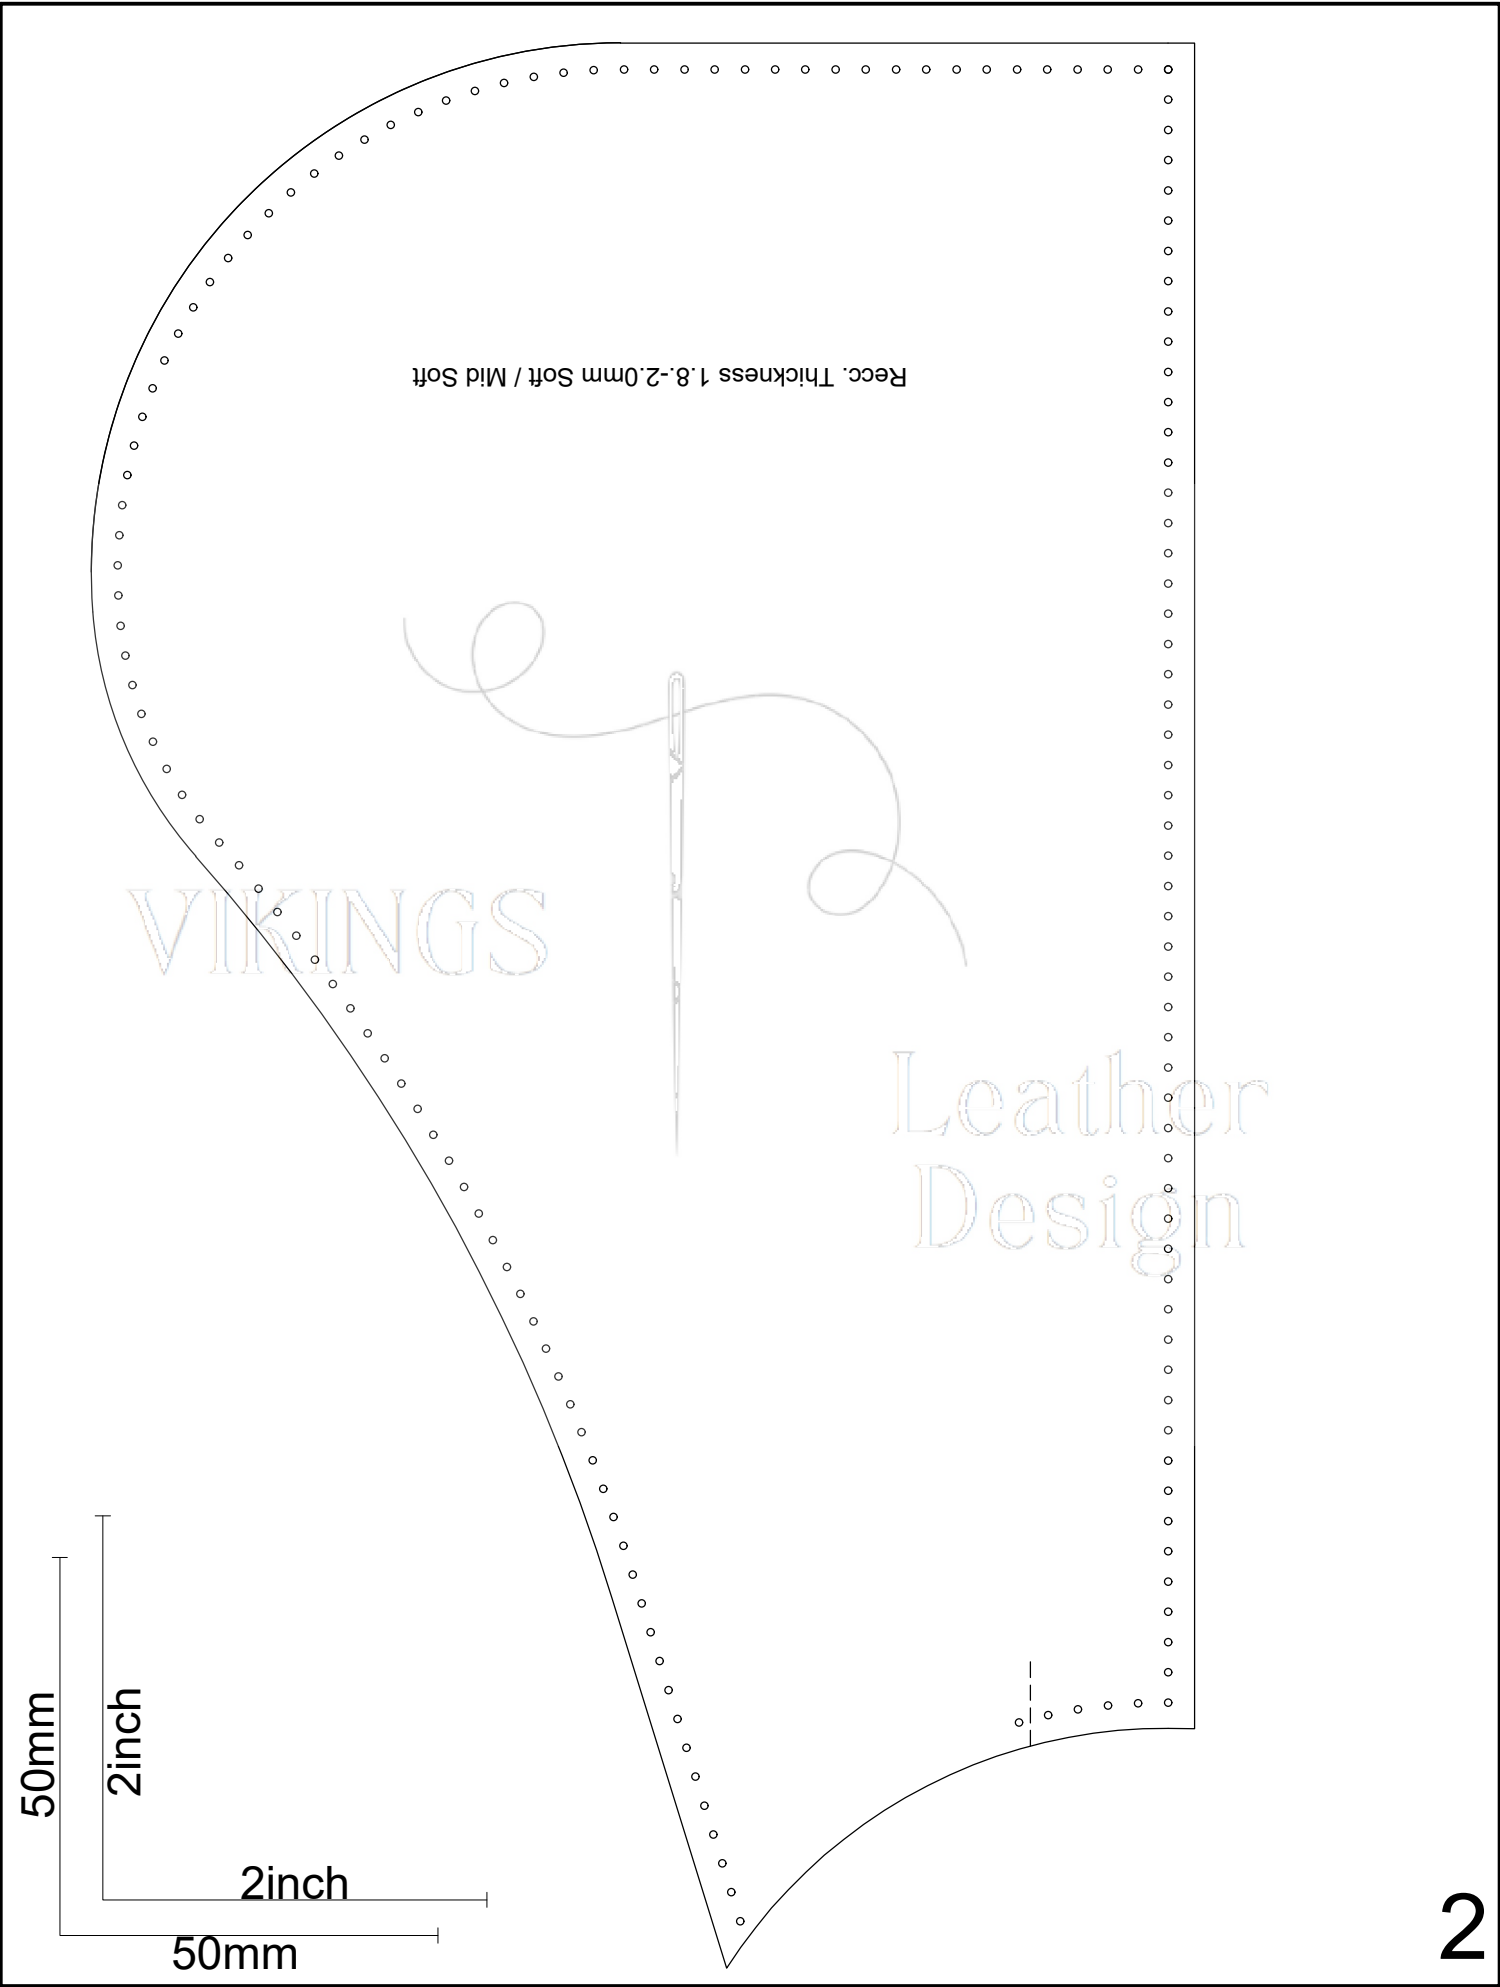

Recc. Thickness 1.8-2.0mm Soft / Mid Soft

VIKINGS


Leather  
Design

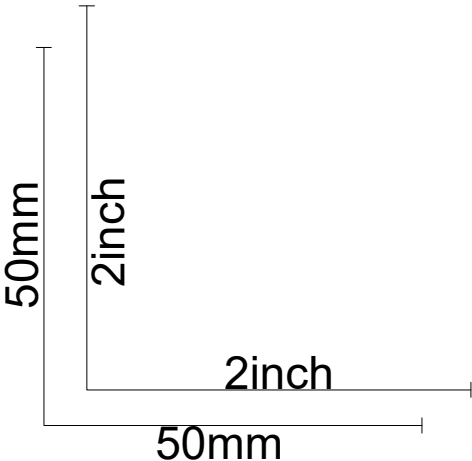

VIKINGS

Leather  
Design


Rec. Thickness 1.8-2.0mm Soft / Mid Soft




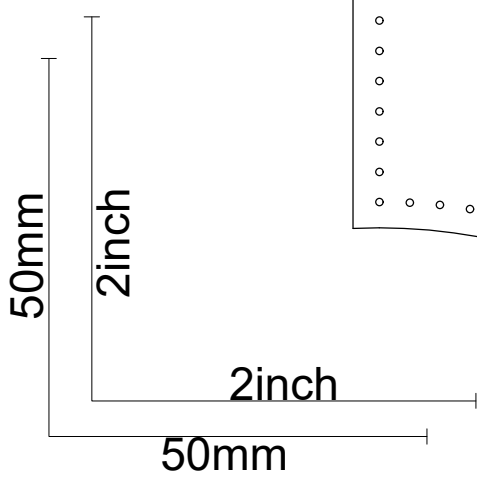


Rec. Thickness 1.8-2.0mm Soft / Mid Soft

VIKINGS


Leather  
Design

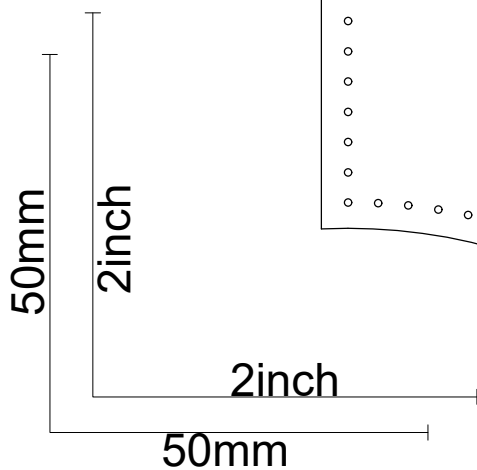

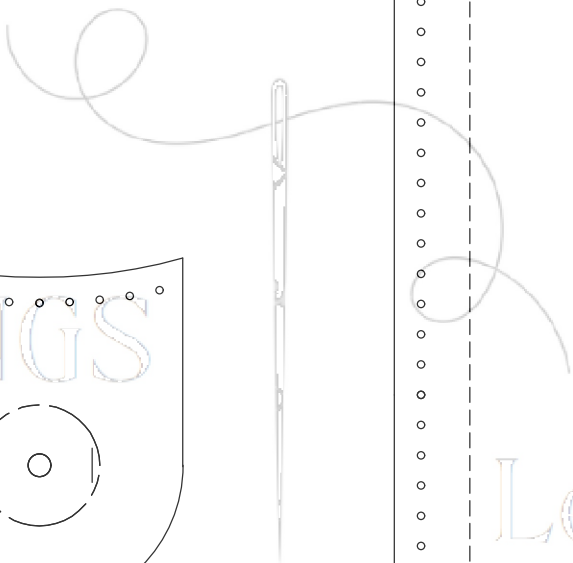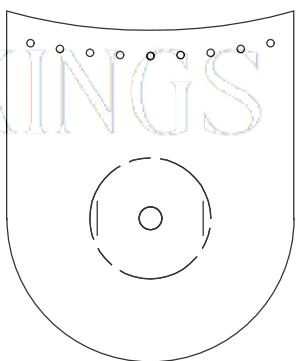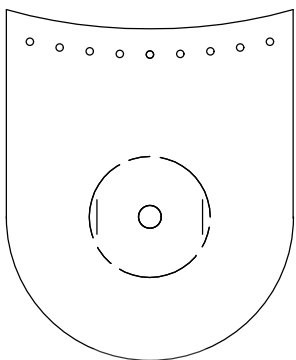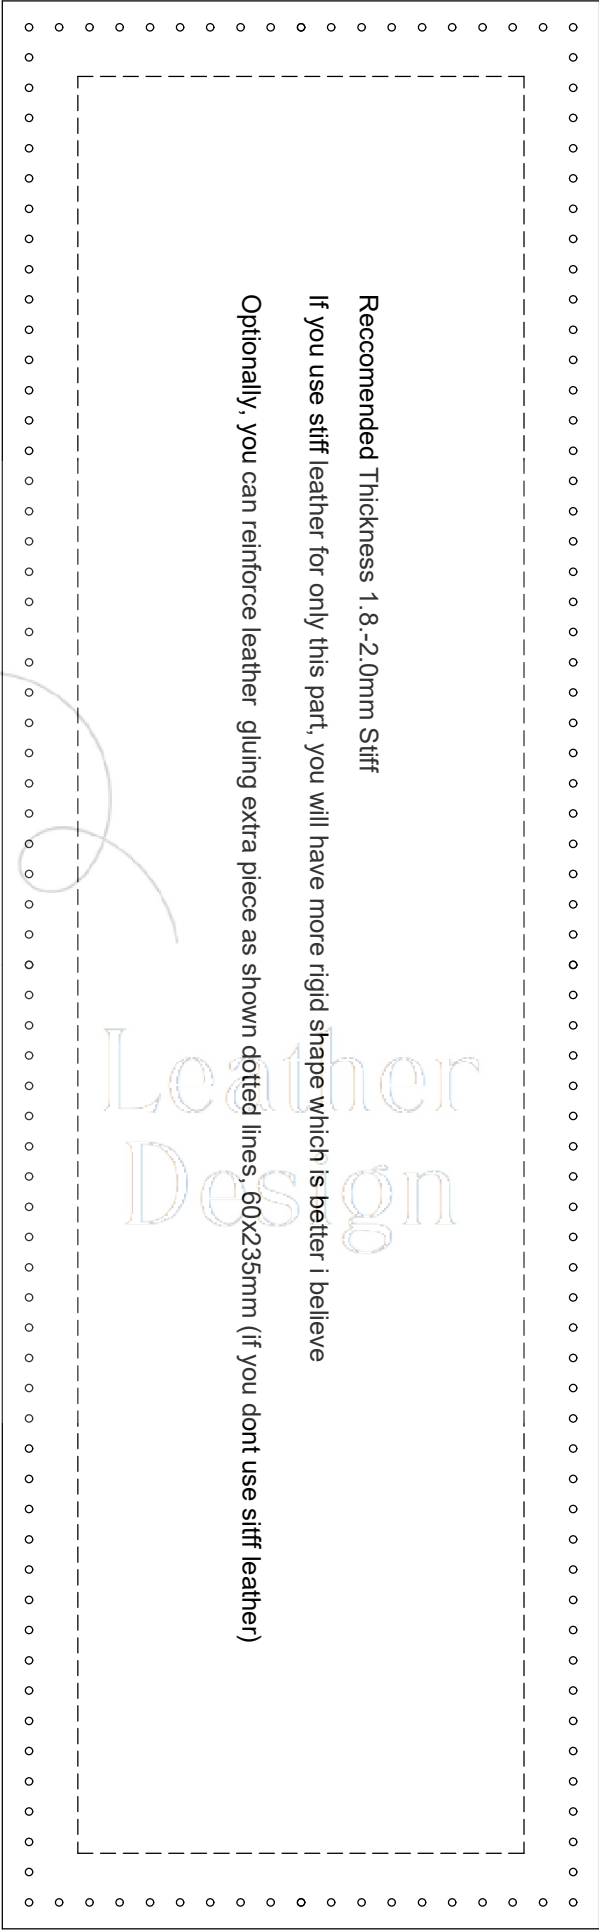


VIKINGS

Leather Design

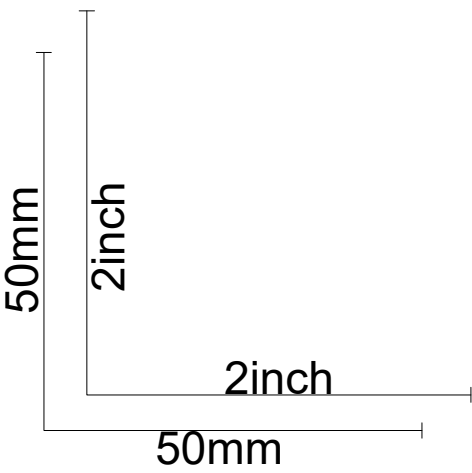



VIKINGS


Leather  
Design


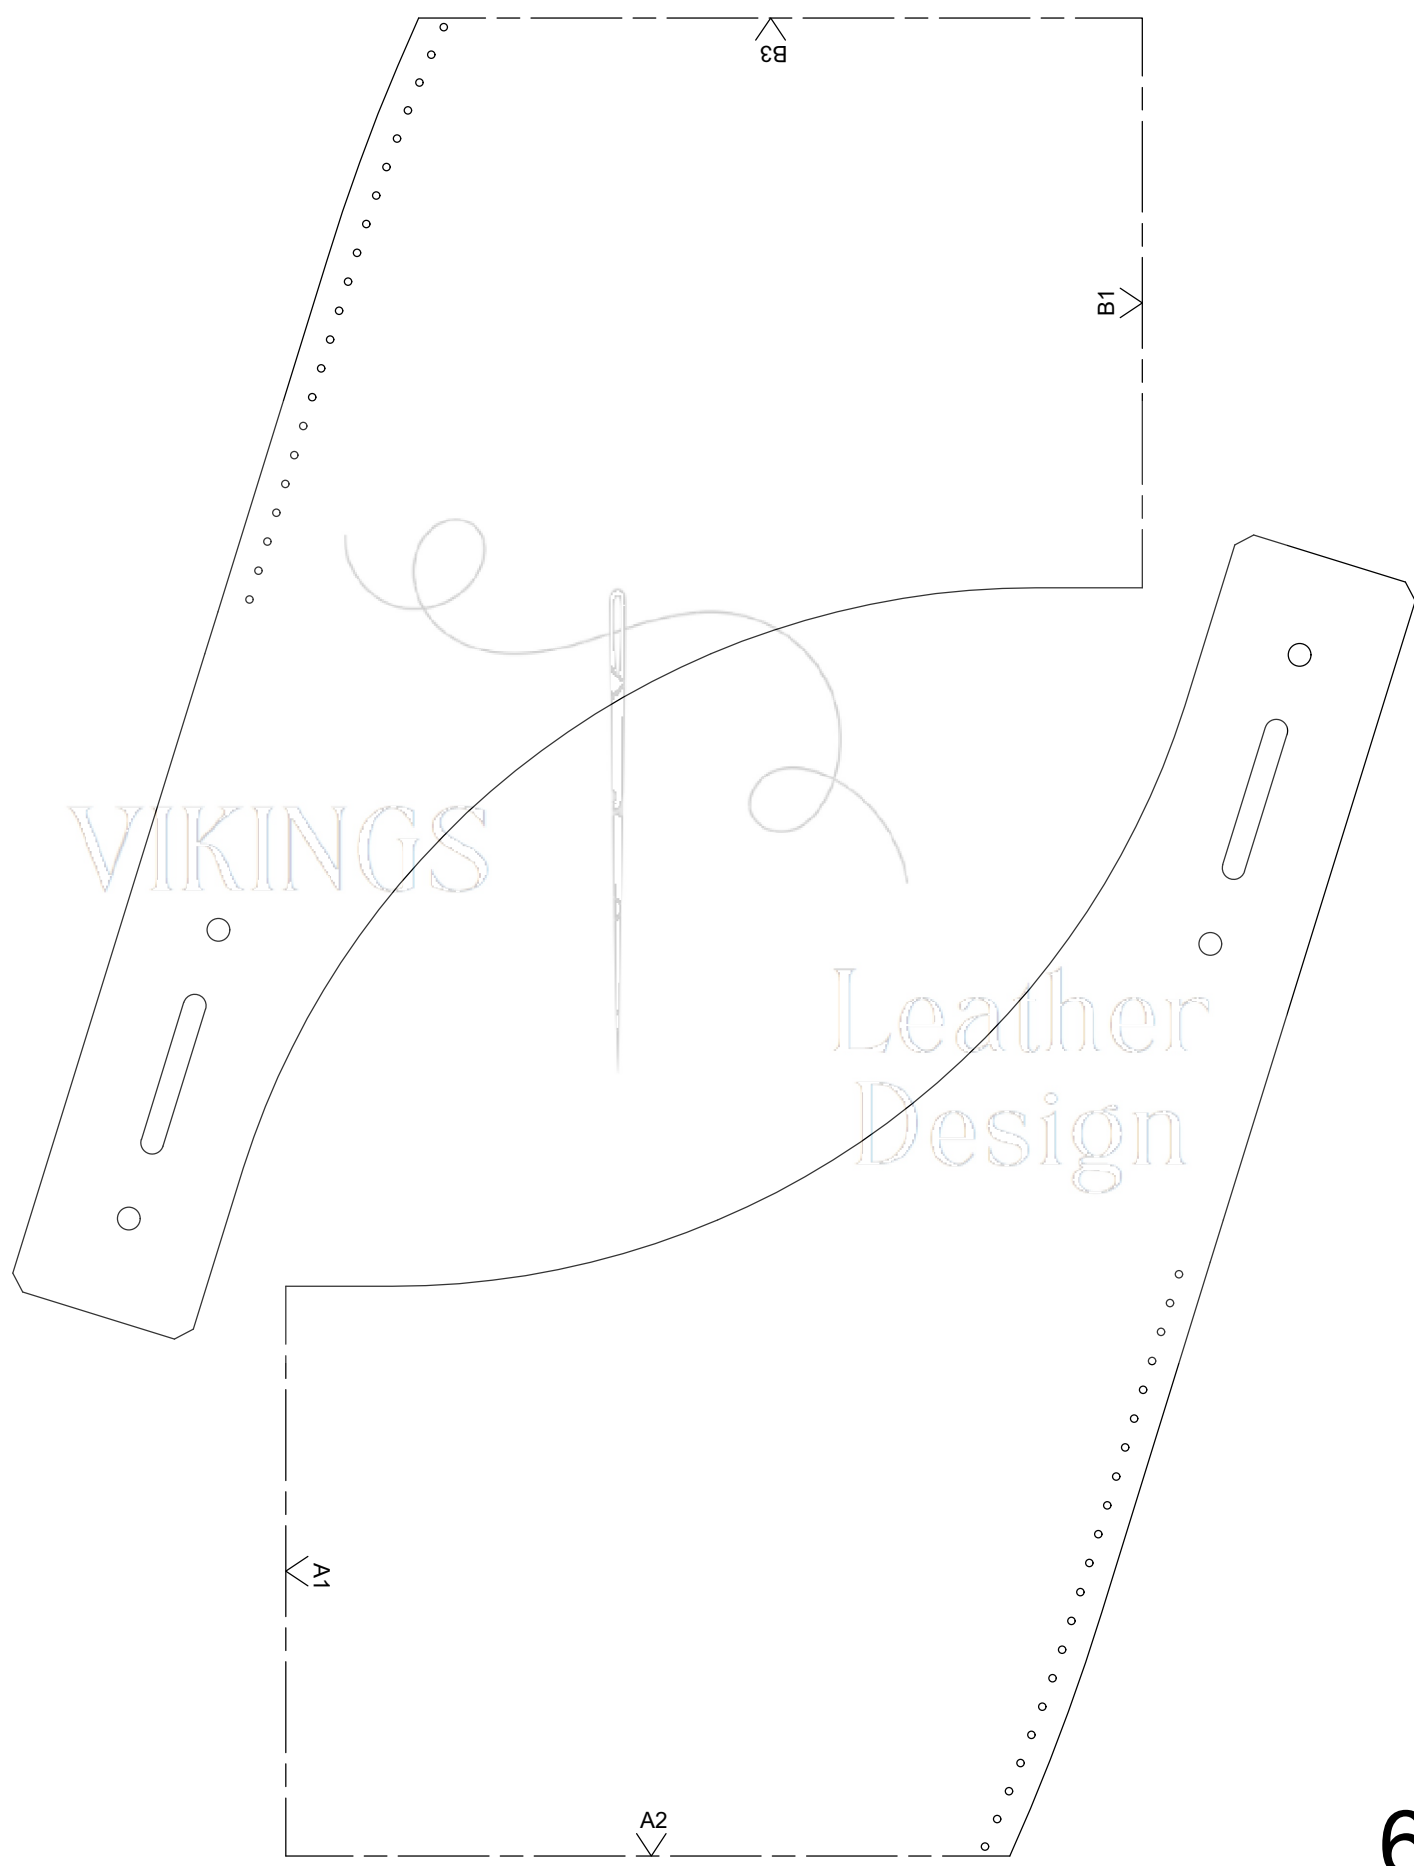




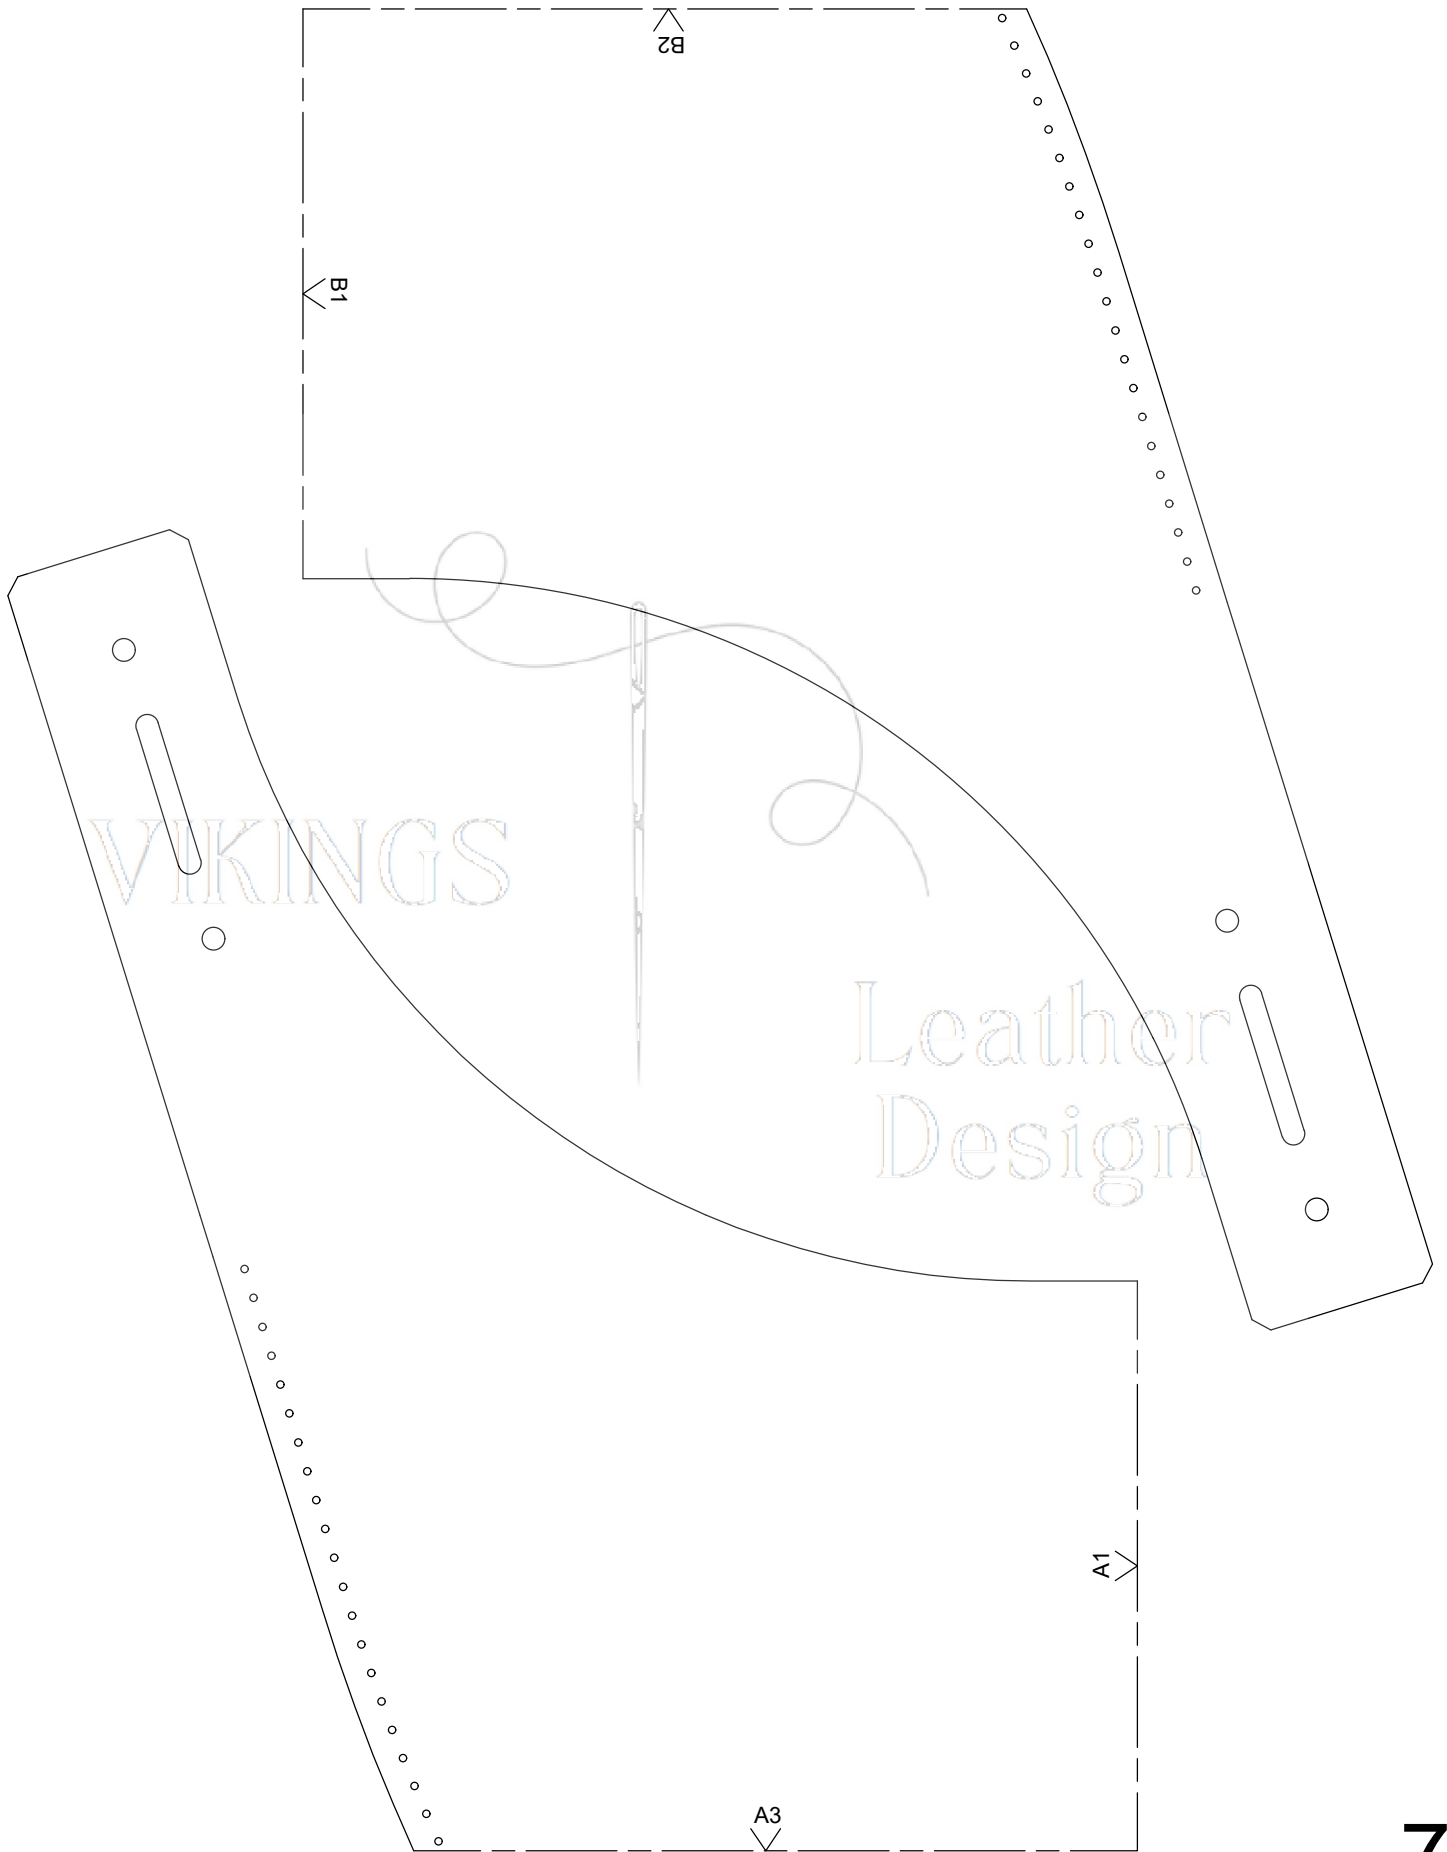

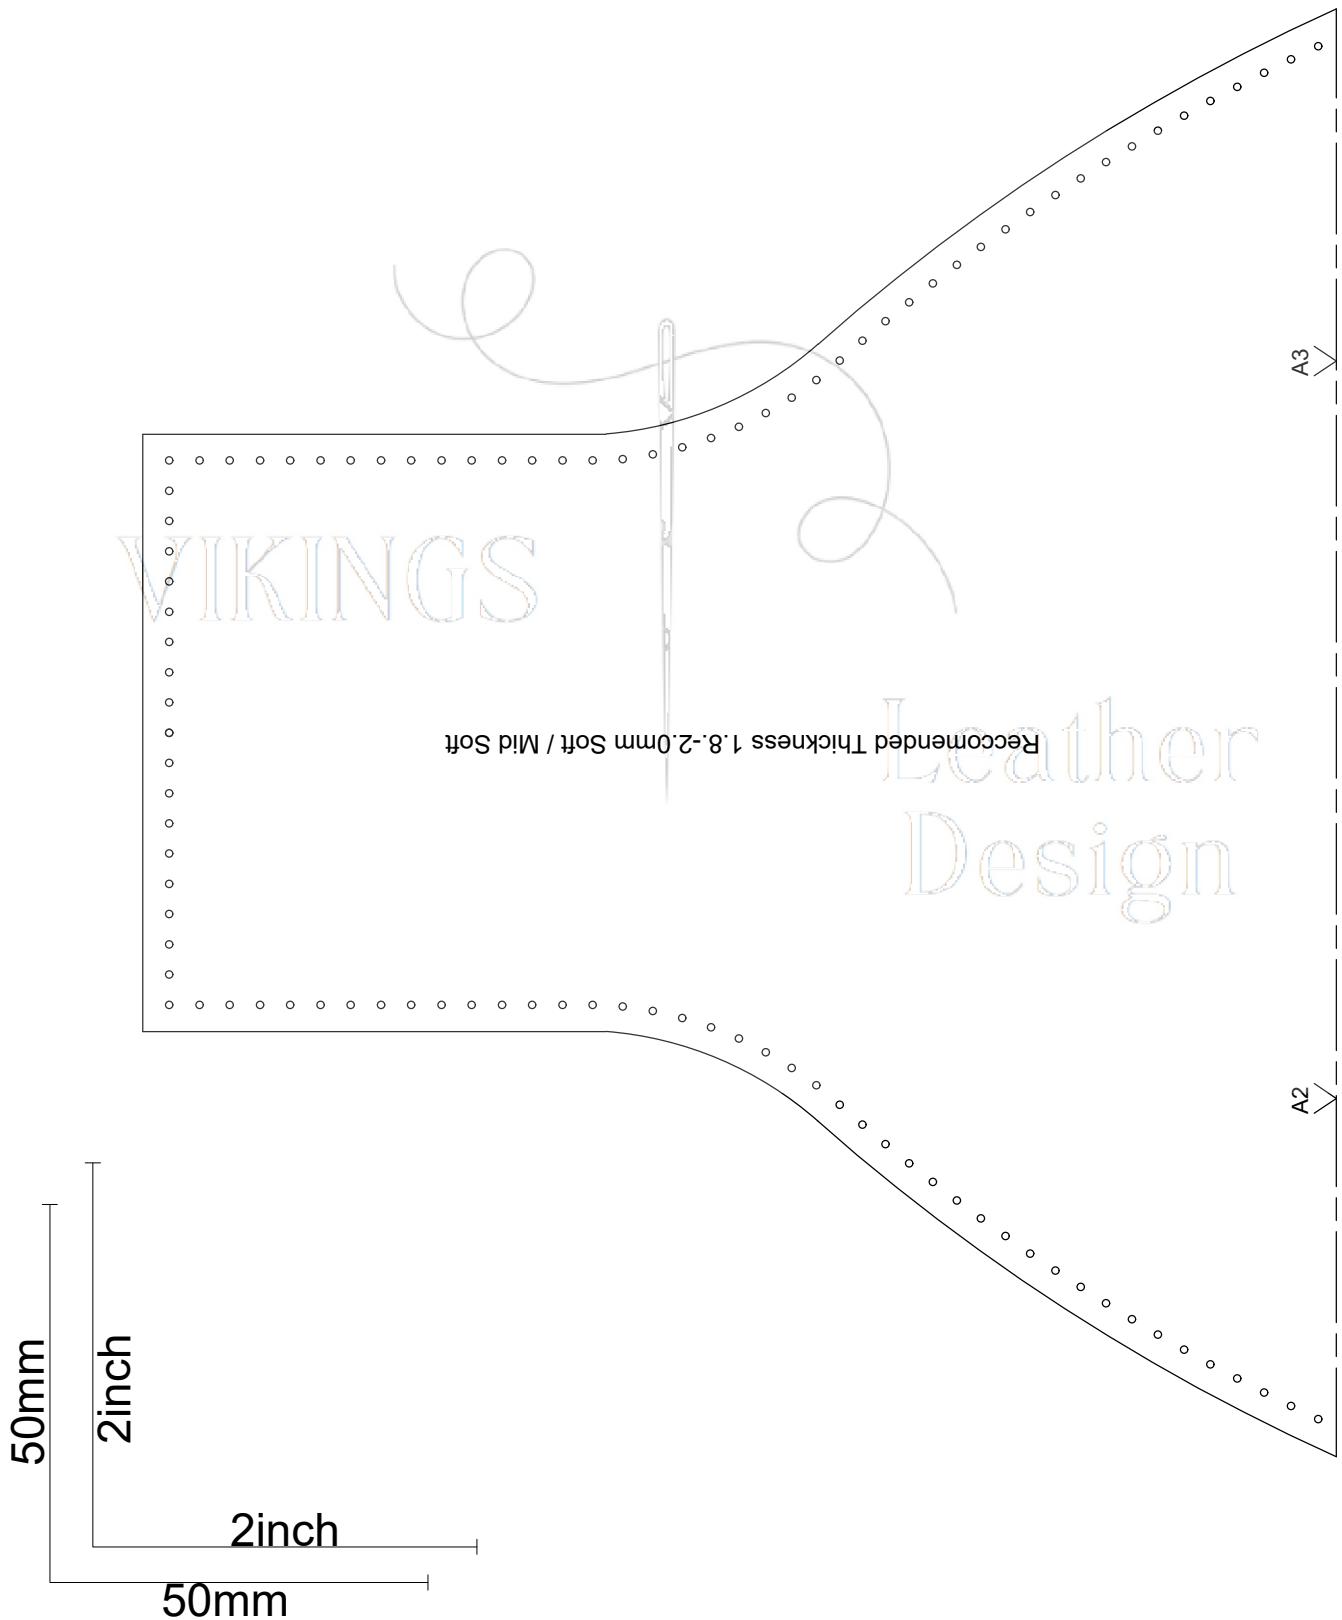


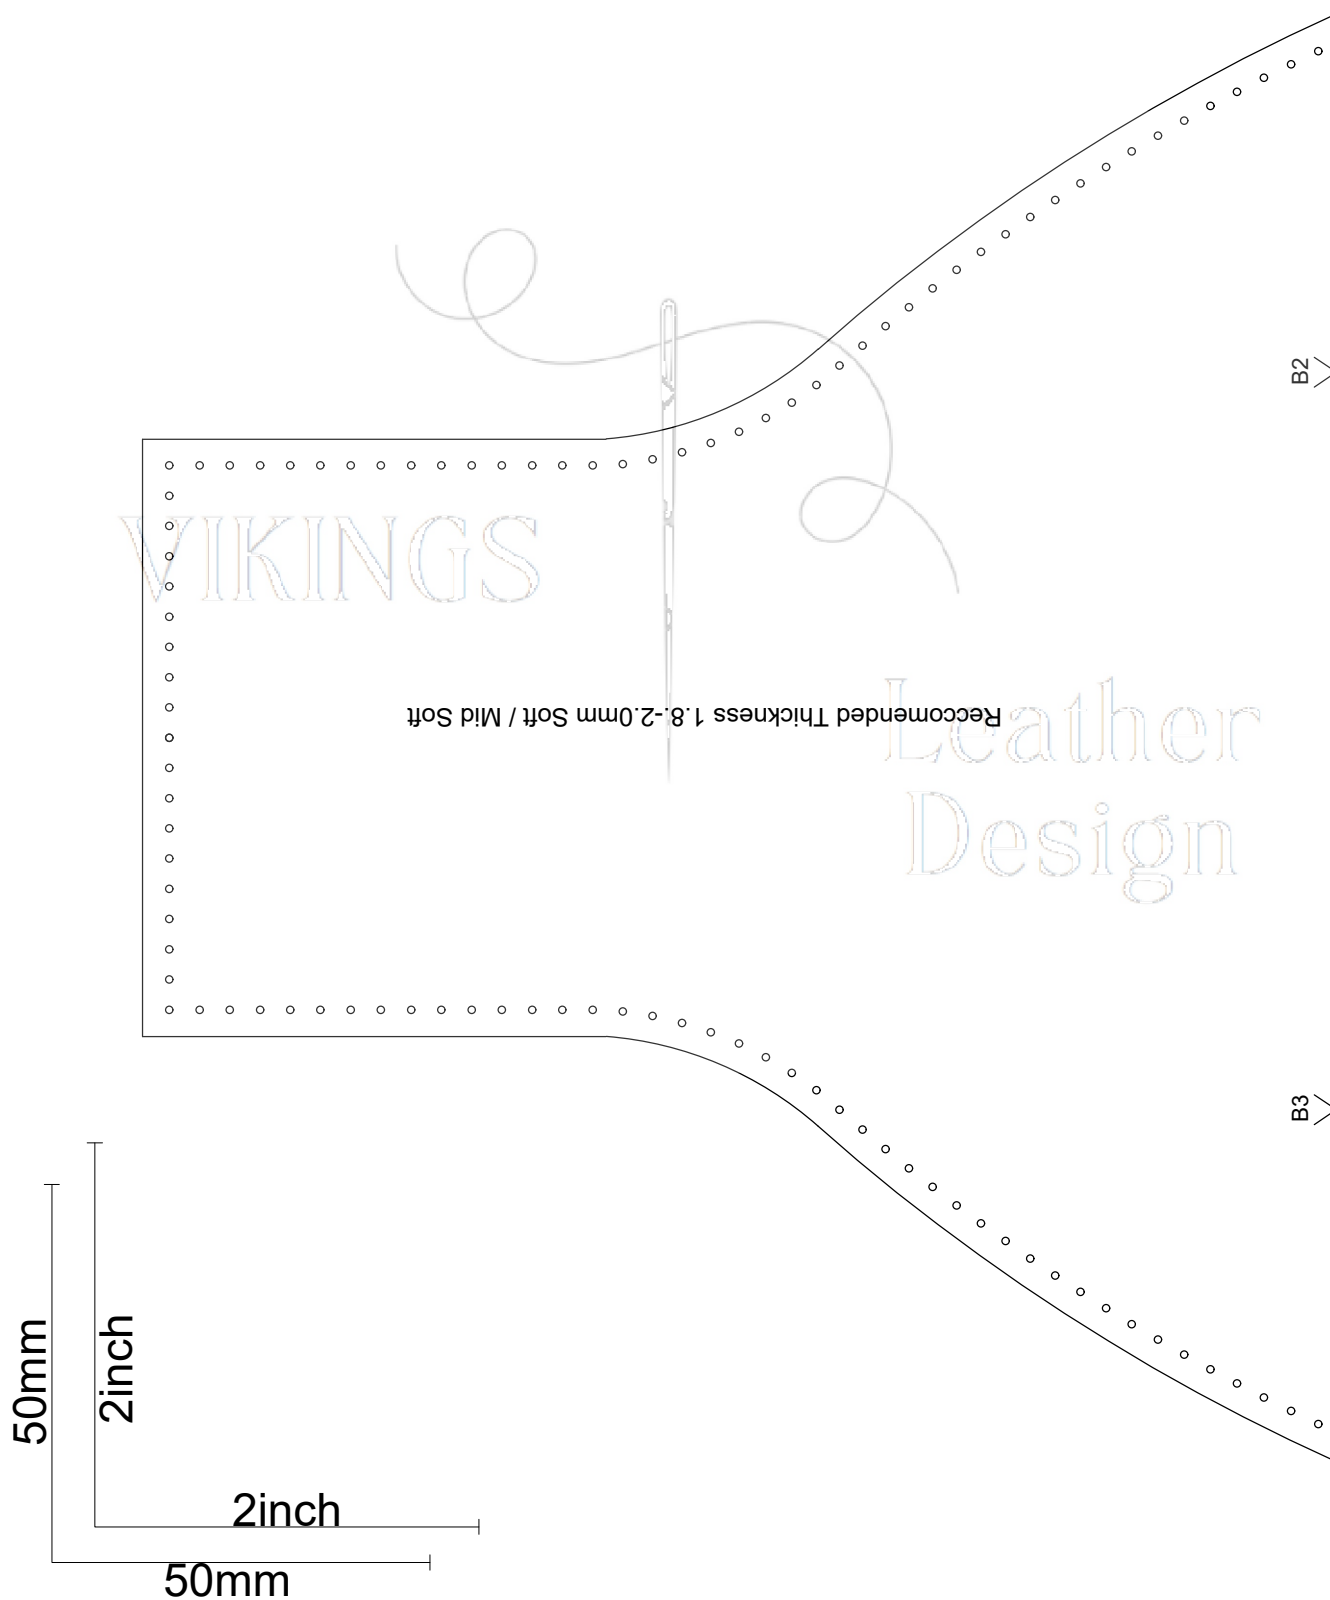

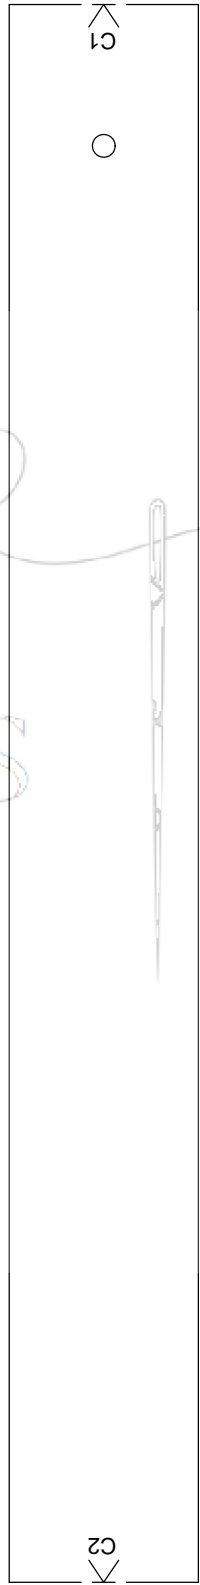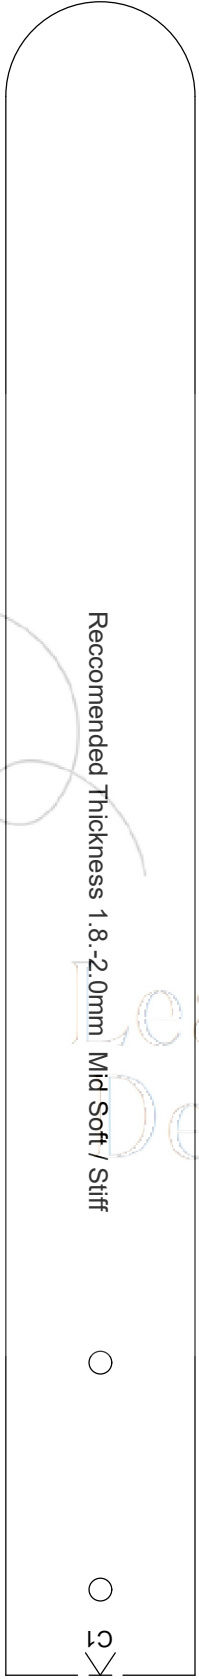

VIKINGS

Leather Design

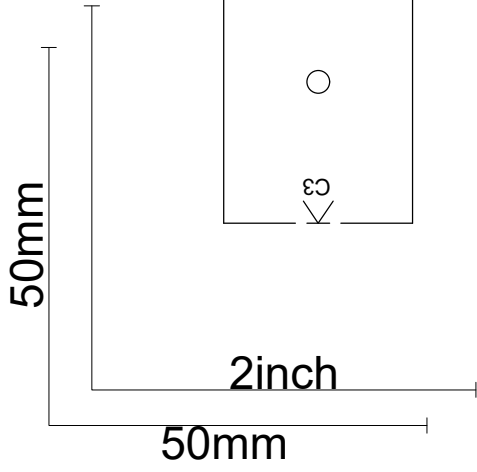

VIKINGS

Leather  
Design

