

TOOKA PATTERN

NAME	DIFFICULTY	DATE	ON SOCIAL
Passport Wallet	● ○ ○	August 29 , 2025	#tookapattern

DIMENSION :


- Main Body (L 24.5 × W 14 cm)
- Left & Right Pockets (L 14 × W 11.5 cm) x2
- Passport Holder (L 11 × W 9 cm)
- Card Slots Base (L 11 × W 9 cm)
- Bottom Card Slot (L 11 × W 6 cm)
- Top Card Slot (L 11 × W 5.5 cm)
- Vertical Card Slot (L 8.6 × W 6.5 cm)
- Pen Holder (L 5.5 × W 5 cm)



SUPPLIES :

- **Faux Leather :**
"If you're using faux leather, you'll need approximately 25 x 50 cm of leather."
 - **Natural Leather :**
"If you're using natural leather, you'll need 1.3 square feet of leather."
 - **Polyster Leather/ Waxed Thread :**
"You'll need approximately 160 centimeters of thread."
- **Plant-based Adhesive**
"Plant-based glue provides better adhesion and has less odor, making it more suitable for working in small spaces."
 - **Edge paint**
"Apply edge paint to the edges of the bag using a suitable edge painting tool."

PATTERN MEASUREMENT PLAN :

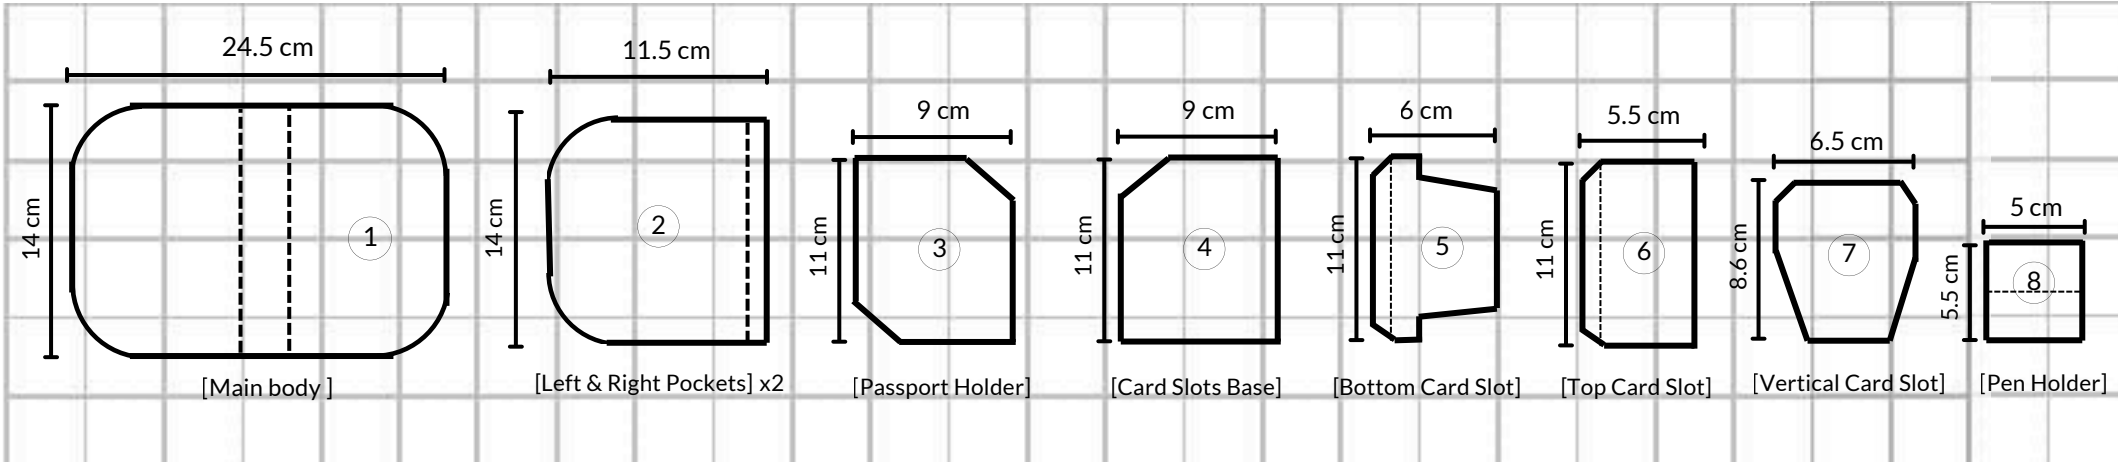

SEWING VIDEO TUTORIAL :



Copy paste the link to watch the video tutorial
https://youtu.be/c1gIRc41jm4?si=-bQFkoh9_uBXhCkr

SEWING TUTORIAL :

1-Print the pattern and cut out the main pieces with scissors.

2-Place the pattern pieces on your leather with a little space between them:

- For genuine leather, place the pattern on the grain side.
- For faux leather, place the pattern on the back side.

3-Use a gel pen or awl to carefully trace around the pattern.

4-Cut the leather along the gaps between the pieces using a sharp blade or cutter.

5-Skive the cut pieces using a skiving machine or by hand.

6-Recut the skived edges with a cutter so that the pen marks are trimmed off.

7-Place the lining patterns on your chosen lining material and cut them out.

8-Use a creaser to mark the edges of the passport holder piece, apply edge paint, and glue it onto the left pocket. Only stitch the right side.

9-Glue the lining to the back side of the bottom and top card slots.

10-Apply glue to the top edge of both cardholders, fold it over, and crease the edge.

11-Glue the bottom card slot onto the base piece and stitch the bottom edge.

12-Attach the top card slot on top of the bottom one as the second layer.

13-Glue the lining onto the back of the cardholder base, crease all around the edges, and paint the edges.

14-Stitch the top edge of the cardholder base.

15-Crease and edge-paint the vertical cardholder piece, then glue it onto the right pocket.

16-Place the prepared cardholders on top of the vertical piece, glue them, and stitch the left side to the right pocket.

17-Glue the linings to both left and right pockets, then glue, fold, and crease the edges.

18-For the pen holder, crease and edge-paint the sides, fold it along the dotted line in the pattern, and glue the sides together.

19-Attach the pen holder to the right pocket.

20-Stitch the side edges of both pockets.




21-Now both the left and right parts of the wallet are ready.

22-Glue them to the main body piece. Crease both the inner and outer edges and stitch all around.

23-Burnish and paint all edges for a clean finish.

PATTERN :


Print the following pattern on A3 paper.

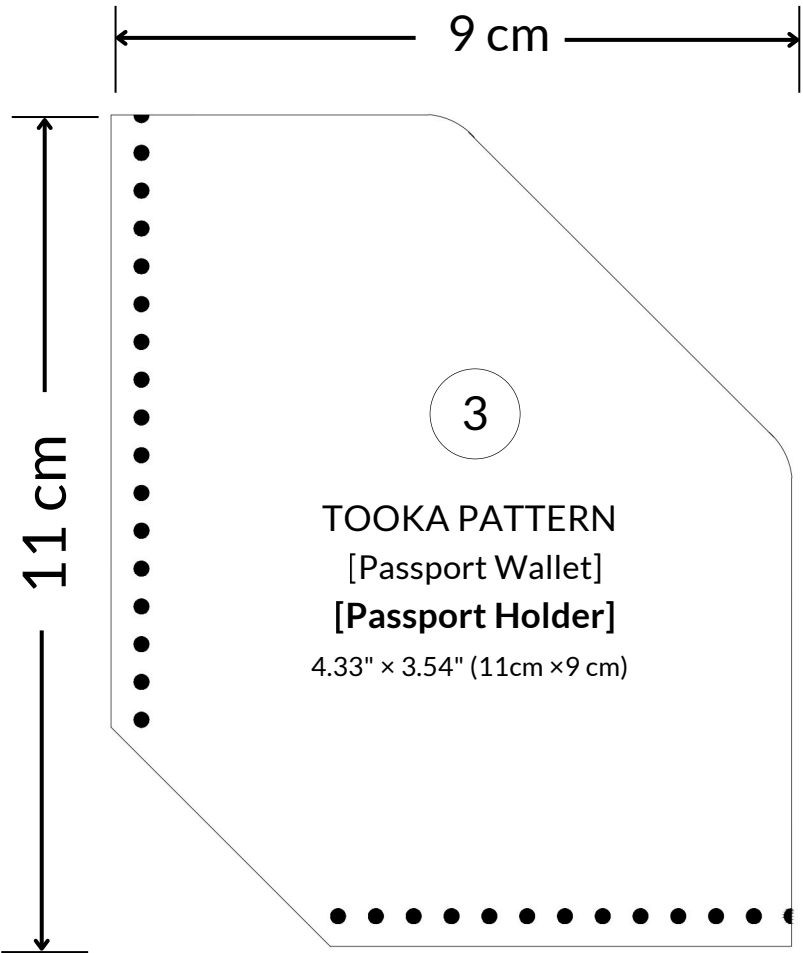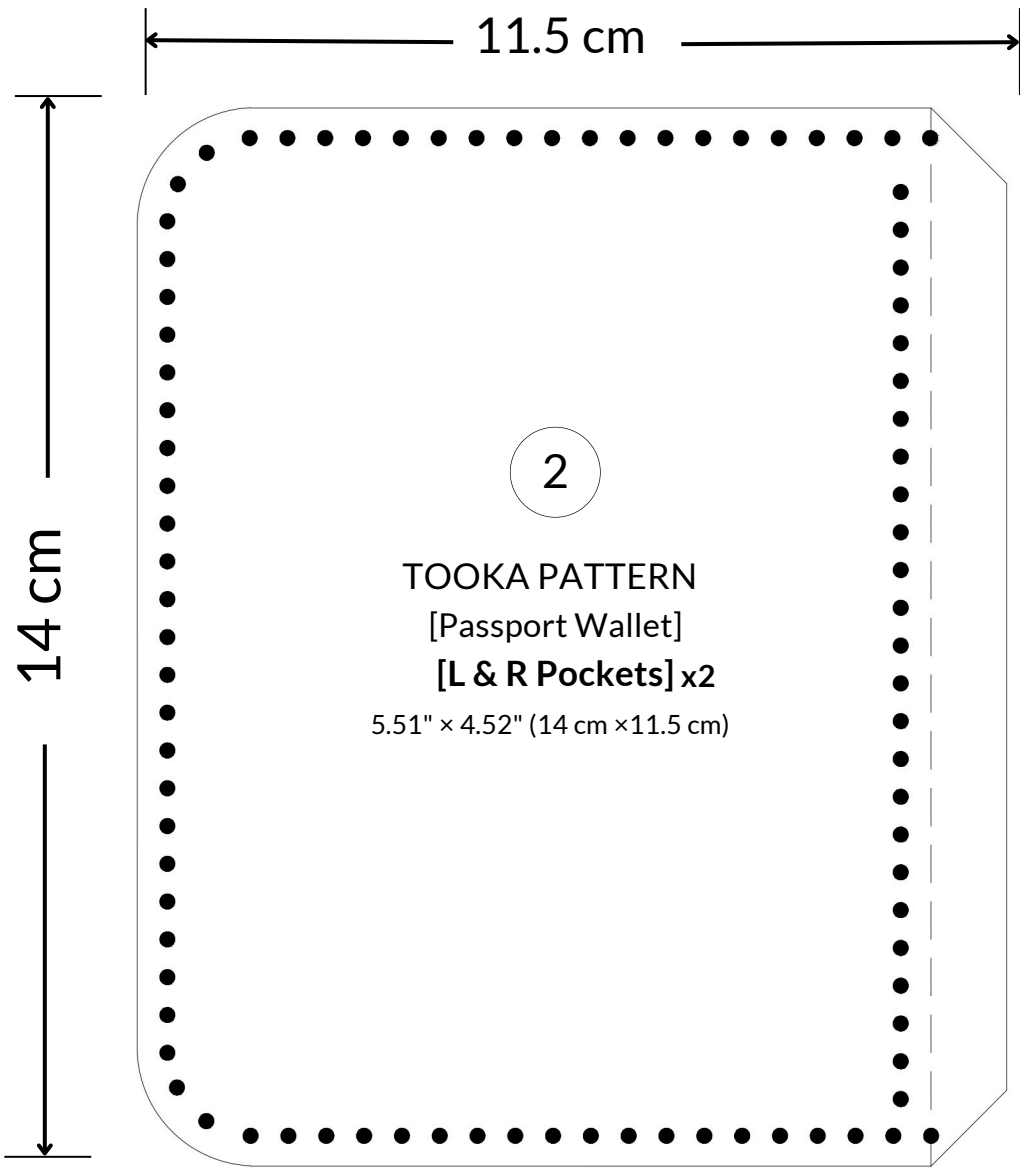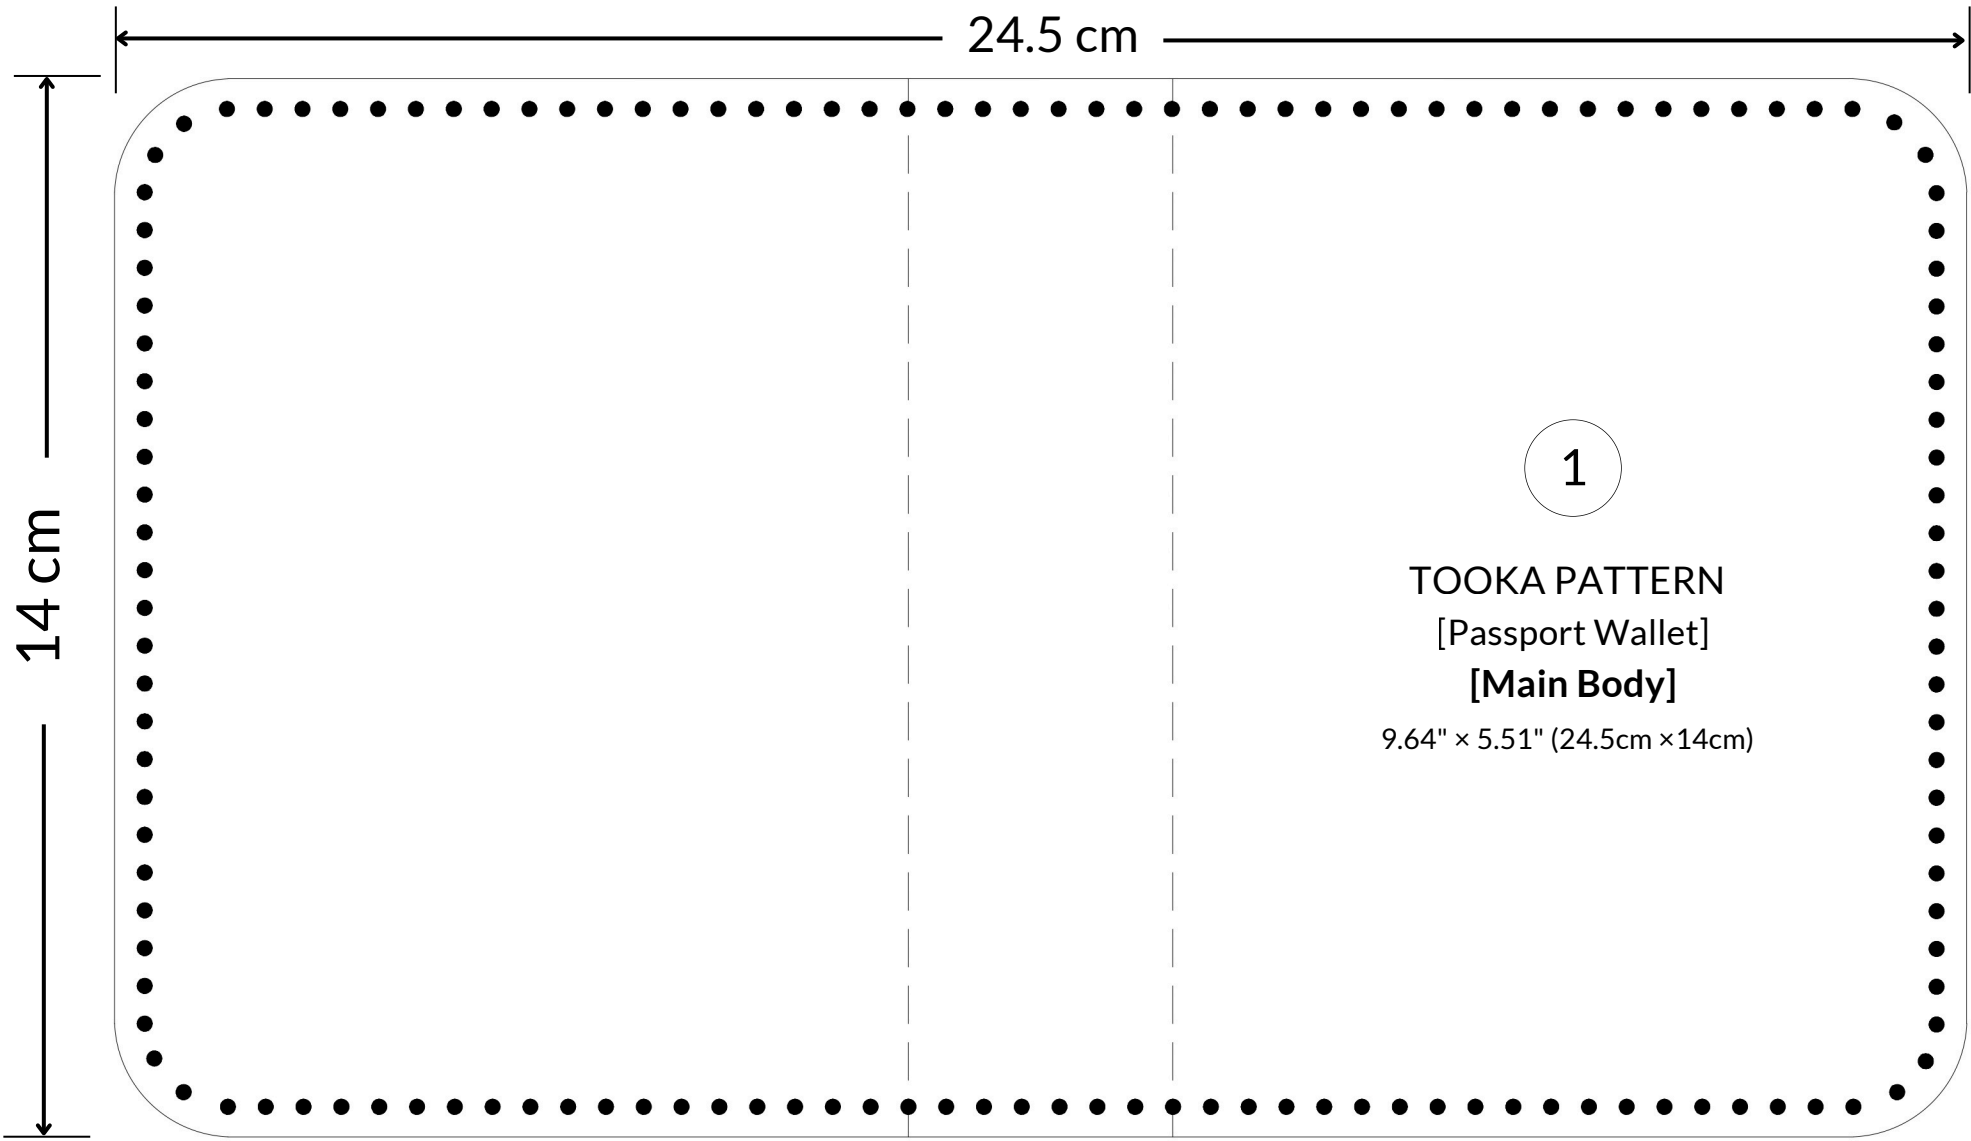

See the **Continuation of the Patterns** on the next page, friends!

PATTERN :





Print the following pattern on A3 paper.

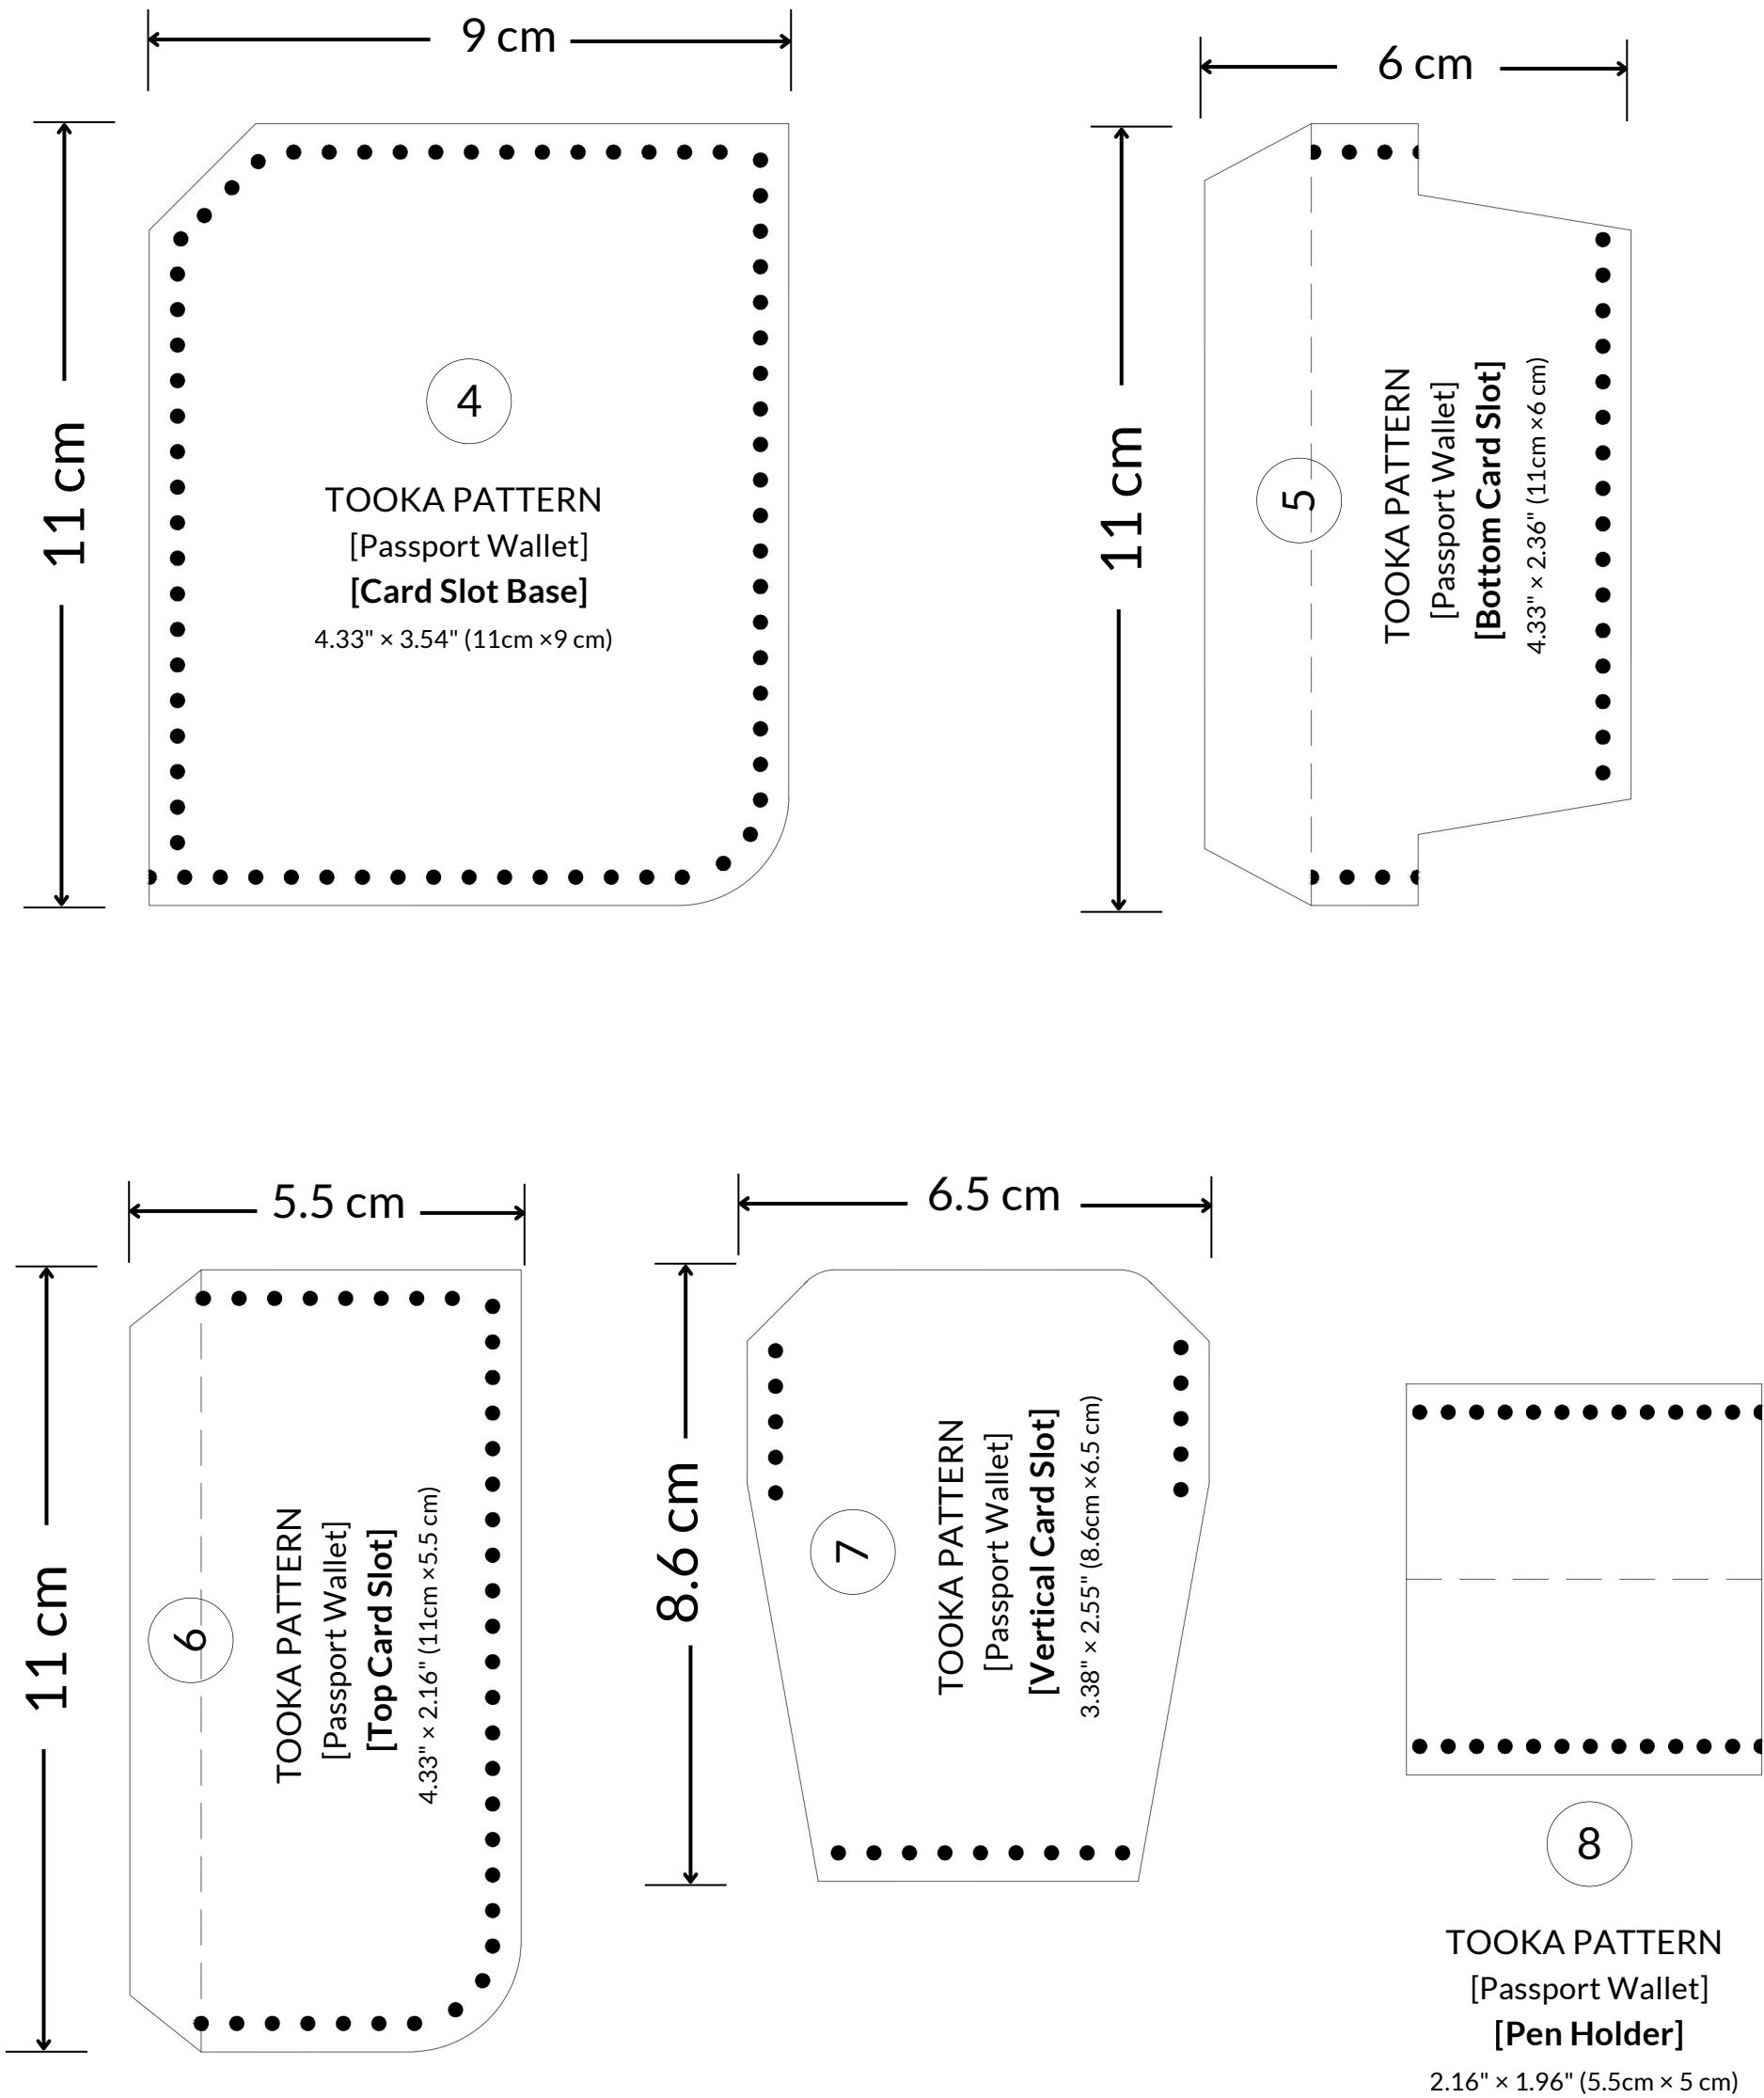

See the **Lining Patterns** on the next page, friends!

PATTERN :

Print the following pattern on A3 paper.

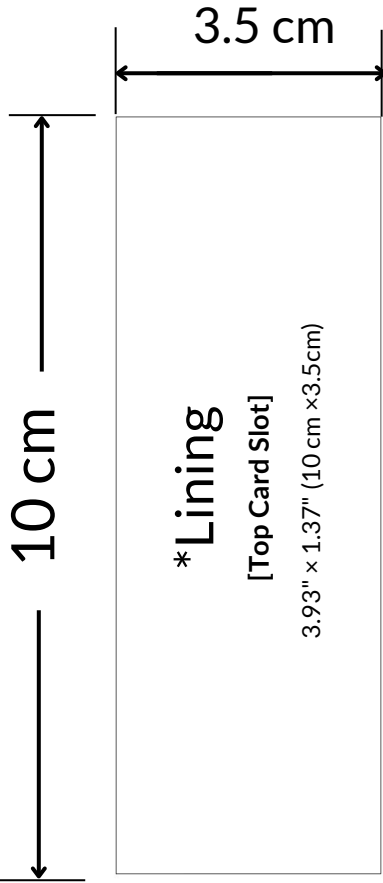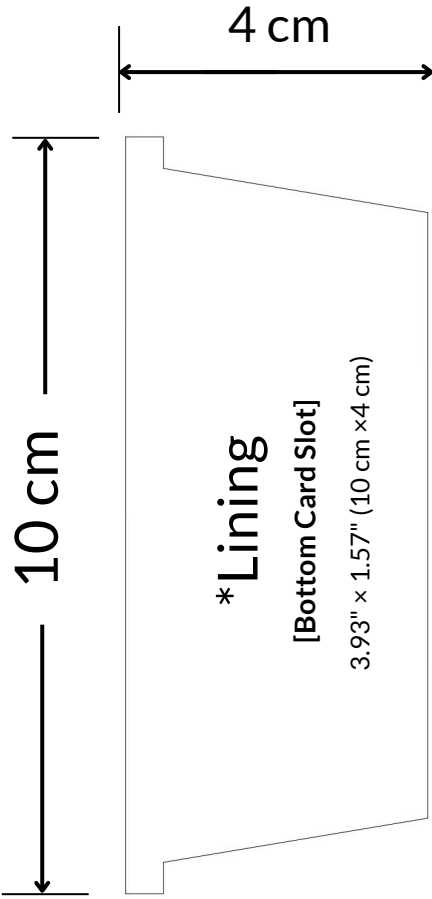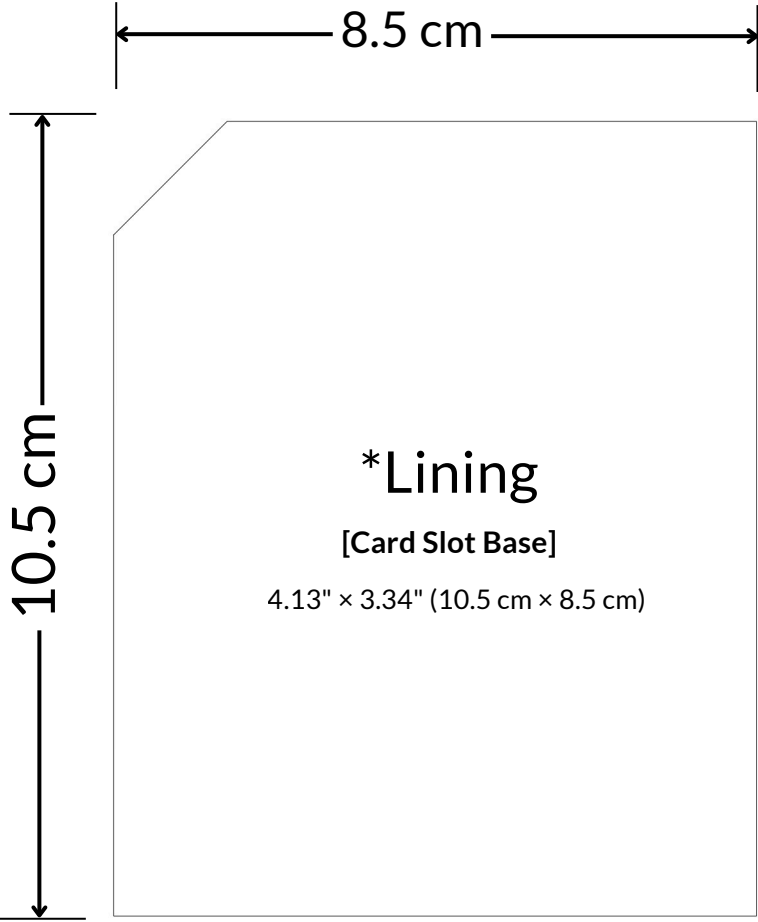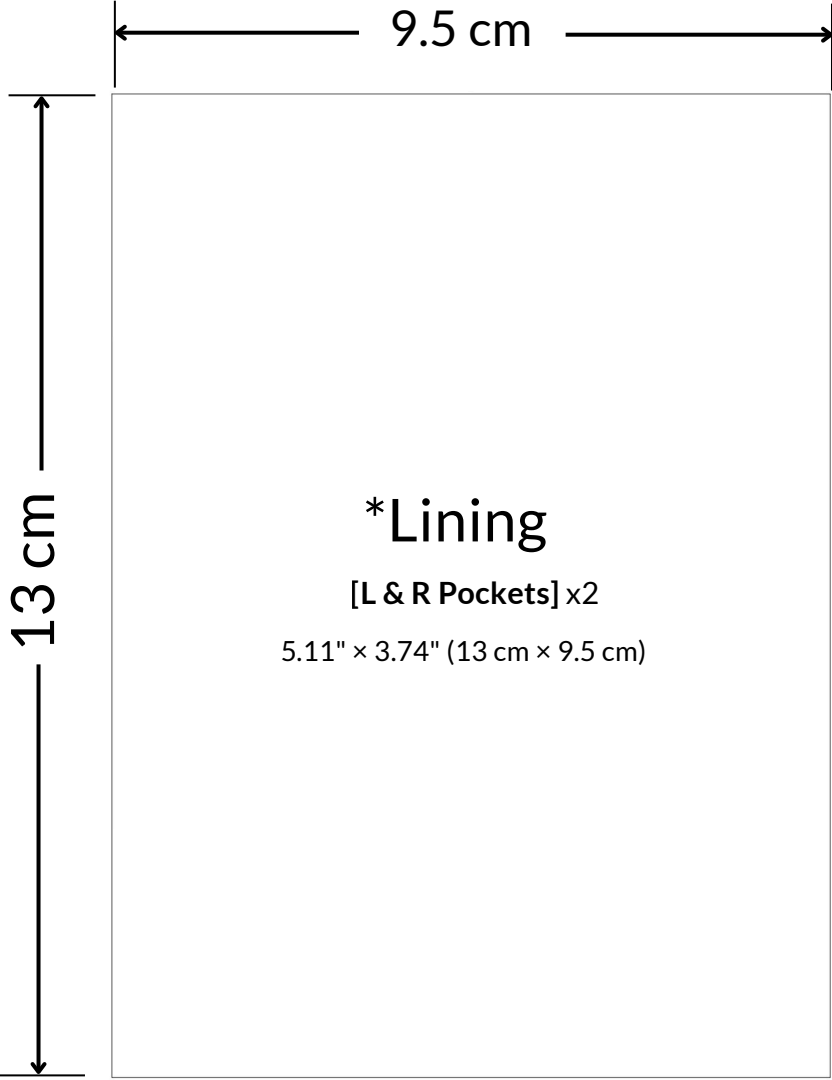

GOOD LUCK !

I hope I was able to help you.
Stay tuned, and I'll teach you how to make the **Wet Molding Wallet** next week!

Follow us on other social media platforms :



@t00kaleather



@tookaleather



@tookaleather