

SPRINGBOK

0 inch

2 inch

0 cm

2 cm

5 cm

Test Print at 100% Scale

RECOMMENDED LEATHER

4 oz. soft / medium temper leather

PRINTING PROCEDURE

1. Make sure you are printing the right pattern file for the printer you are using (Large-Format or Tiled for A4 / US Letter).
2. Print first sheet at 100% Scale (Actual Size).
3. Measure the scale with a ruler to double check the size is right. Reprint smaller or larger if needed (Example: 99% or 101%).

IF PRINTING THE TILED PATTERN

4. Trim rectangular border on each sheet.
5. Align trimmed sheets together to assemble the full pattern, lining up the edge diamonds.
6. Tape sheets as shown below. Cut out pattern.

a1	a2
b1	b2
c1	etc.


ASSEMBLY VIDEO

<https://youtu.be/deregplDuQ>

FOR MORE PATTERNS

www.springbokcraftco.com


Tiled for A4 / US Letter

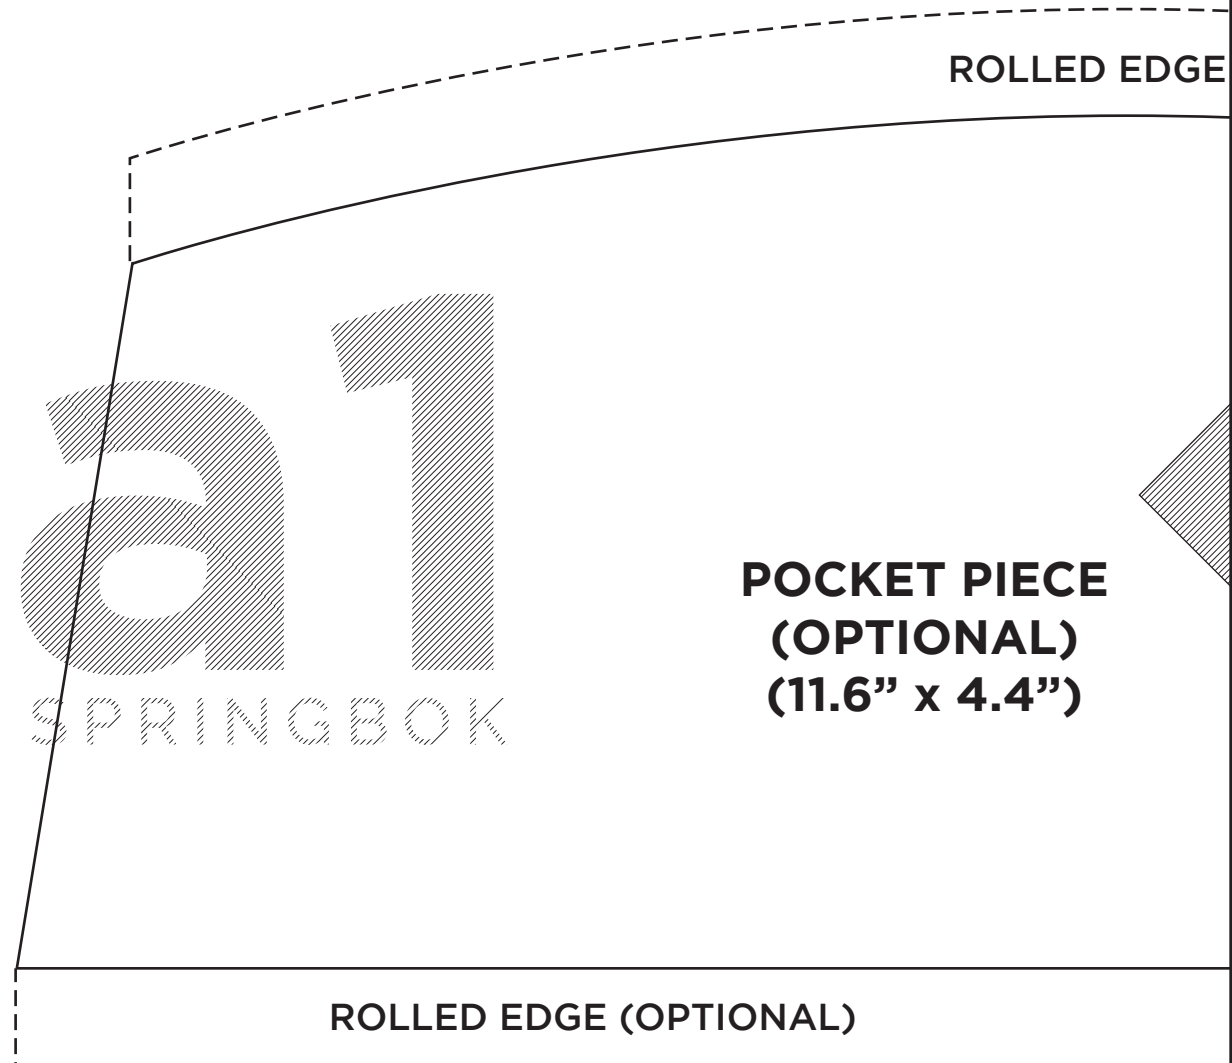

TRIM BORDER →


TABS
CUT 2 PIECES
(0.75"x 1.75")

(OPTIONAL)




← TRIM BORDER

D-RING KNOT LOOP | CUT 2 PIECES | 0.5" x 10"

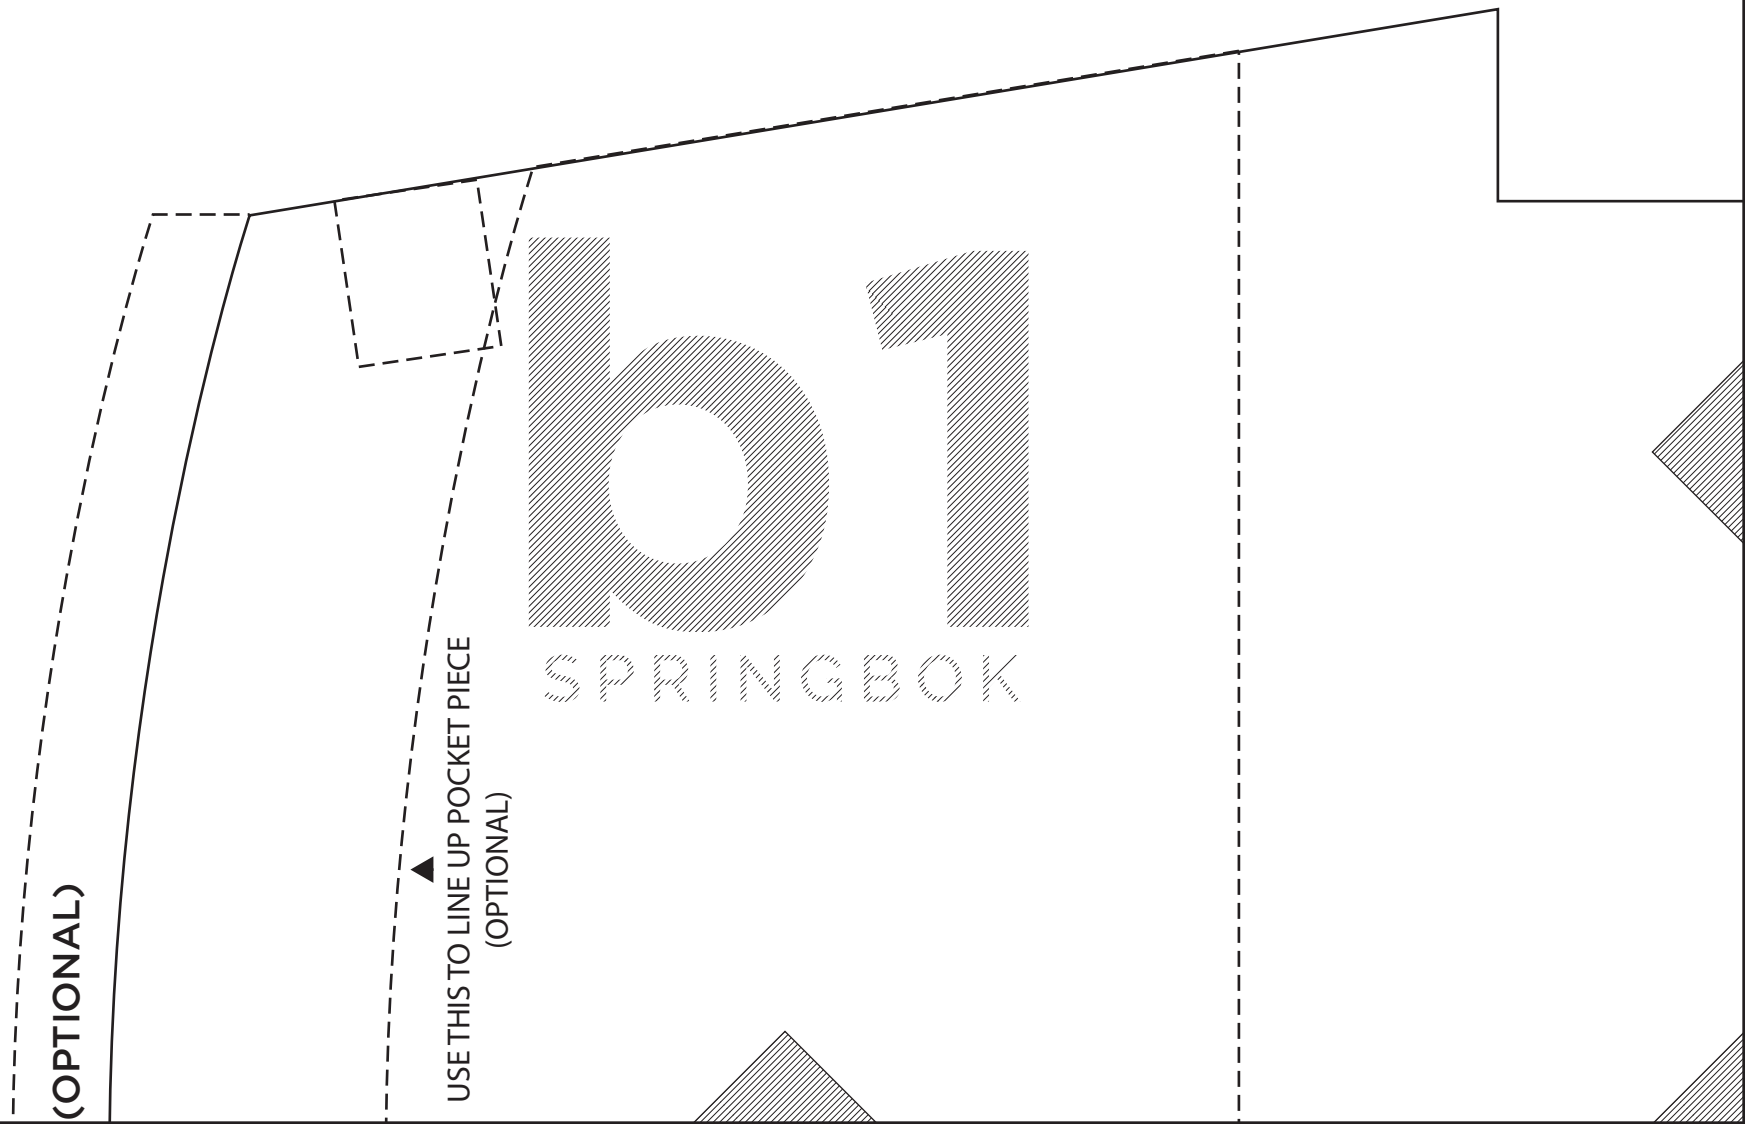


← TRIM BORDER



MAIN BODY
CUT 1 PIECE
(16.2" x 12")



(OPTIONAL)

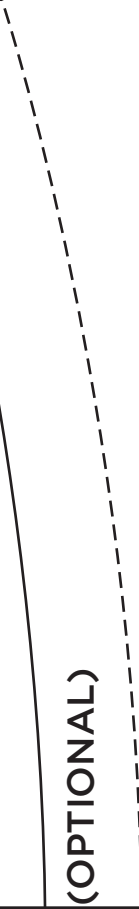

ROLLED EDGE

USE THIS TO LINE UP TABS

c1
SPRINGBOX

TRIM BORDER →



ROLLED EDGE

← TRIM BORDER