

TOOKA PATTERN

NAME	DIFFICULTY	DATE	ON SOCIAL
Wet Molding Wallet	● ○ ○	Sep 5 , 2025	#tookapattern

DIMENSION :


- Card Slot (L 14 × W 11 cm)
- Main Body (L 16 × W 7.5 cm)
- Inside of Flap (L 5.8 × W 3.5 cm)



SUPPLIES :

- **Faux Leather :**
"If you're using faux leather, you'll need approximately 30 x 50 cm of leather."
 - **Natural Leather :**
"If you're using natural leather, you'll need 0.5 square feet of leather."
 - **Polyster Leather/ Waxed Thread :**
"You'll need approximately 50 centimeters of thread."
- **Plant-based Adhesive**
"Plant-based glue provides better adhesion and has less odor, making it more suitable for working in small spaces."
 - **Edge paint**
"Apply edge paint to the edges of the bag using a suitable edge painting tool."
 - **Button :**
"Feel free to use a medium button for this project."

PATTERN MEASUREMENT PLAN :

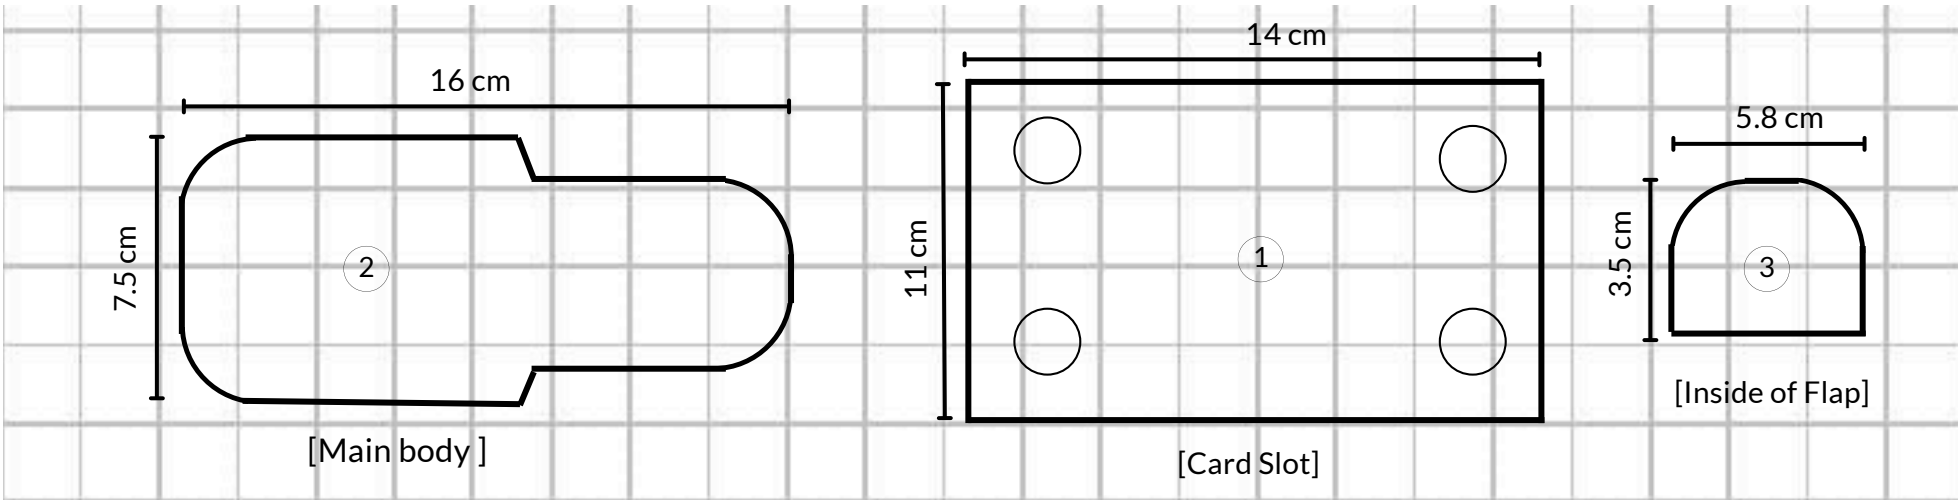

SEWING VIDEO TUTORIAL :



Copy paste the link to watch the video tutorial
https://youtu.be/3w94Z9TUq0o?si=10Ne1WuisF_sjff2


Written sewing tutorial on next page

SEWING TUTORIAL :

- 1-Print the pattern file and carefully cut out the main bag pieces using scissors.
- 2-Place the pattern pieces on the leather, leaving a bit of space between each one.
- 3-Use a gel pen or an awl to trace around each pattern piece precisely.
- 4-Using a sharp-blade cutter, cut along the lines, making use of the space between each piece.
- 5-Skive the cut pieces using a skiving machine or do it by hand.
- 6-After skiving, trim the edges again with a cutter so that the pen marks are removed and only clean leather remains.
- 7-Soak the leather piece for the card holder section in lukewarm water for about 30 minutes.
- 8-After soaking, remove it from the water and pat it dry with a cloth as much as possible.
- 9-Place the damp leather in the mold and leave it there for 24 hours to shape.
- 10-After removing the leather from the mold, trim around it—about 5mm outside the formed shape—to clean the edges.
- 11-Glue the inside flap piece to the main body.
- 12-Cover the snap button with leather.
- 13-Attach the button to both the main body and the card holder section using a press.
- 14-Glue the molded leather piece to the main body of the bag.
- 15-Use a creasing tool to mark a stitching guideline all around the edge and sew it.
- 16-Finally, burnish the edges and apply edge paint for a clean, finished look.

PATTERN :

Print the following pattern on A3 paper.

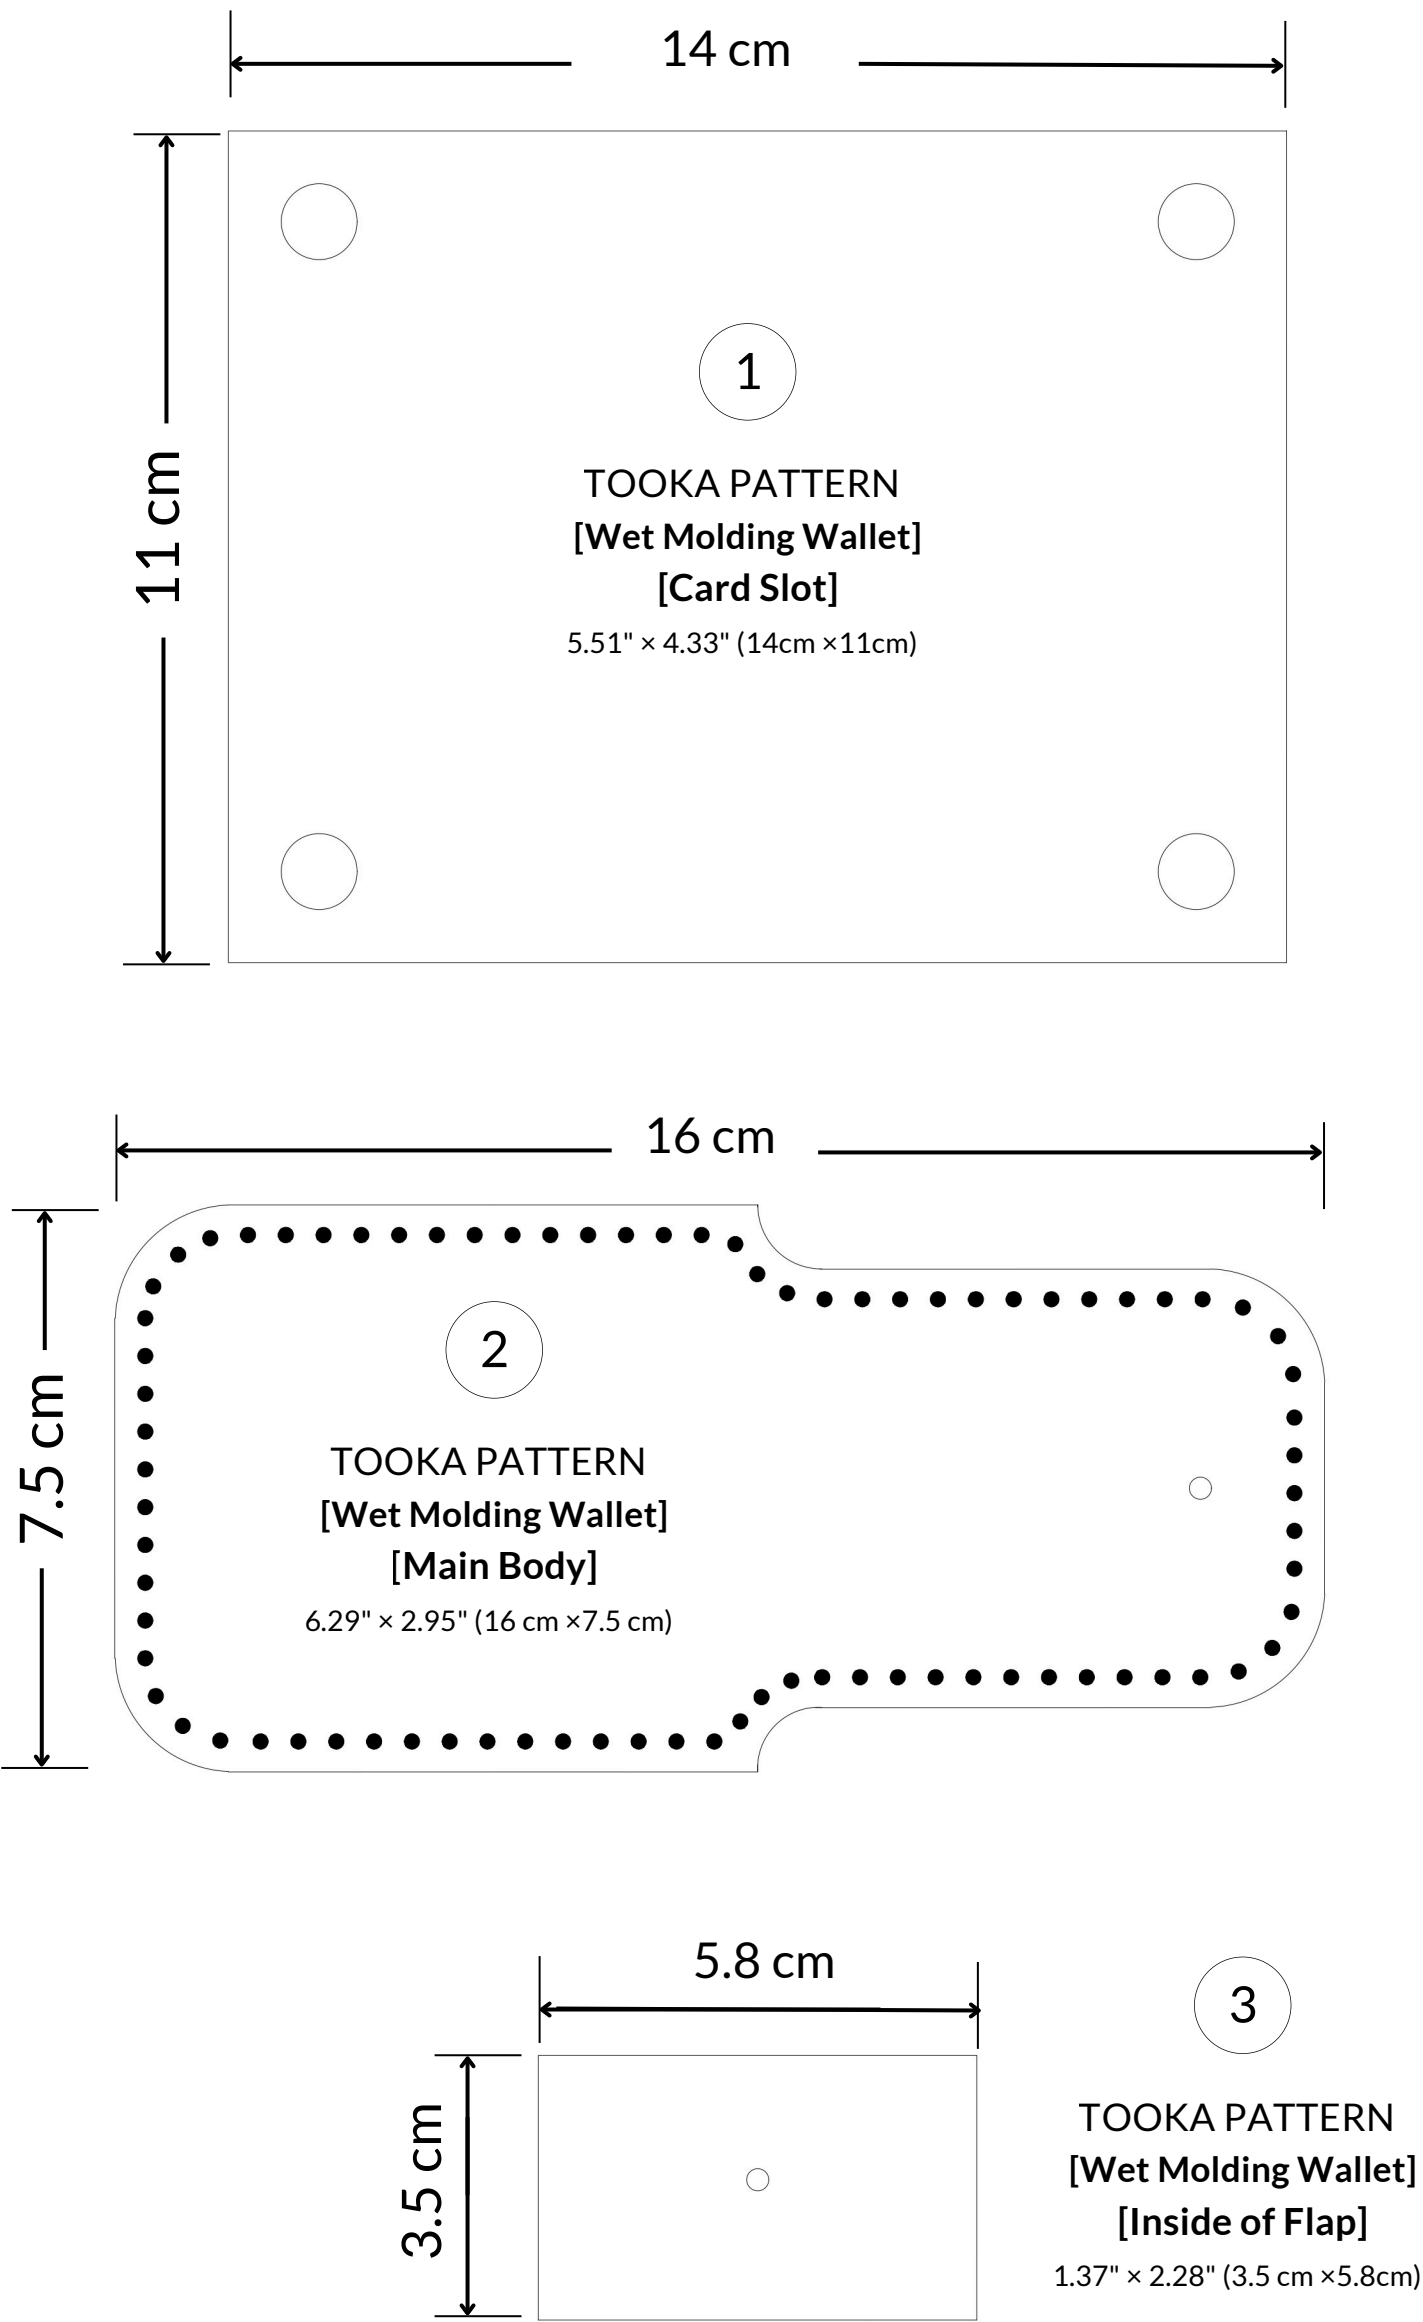

GOOD LUCK !

I hope I was able to help you.
Stay tuned, and I'll teach you how to make the **Long Wallet** next week!

Follow us on other social media platforms :



@t00kaleather



@tookaleather



@tookaleather