

TOOKA PATTERN

NAME	DIFFICULTY	DATE	ON SOCIAL
Bifold Wallet	● ○ ○	Oct 10 , 2025	#tookapattern


DIMENSION :

- Inner Body_ (L26.6 × W 10.5 cm)
- Binding Strip_ (L 27 × W 2 cm)
- Bottom Card Slot(H)_ (L 10.5 × W 6.2cm) x2
- Top Card Slot(H)_ (L10.5 × W6.2 cm) x2
- Base Card Slot_(L10.5 × W7.2 cm) x3
- Outer Body_(L29.6 × W13 cm)
- Top Card Slot(V)_ (L9.3 × W7.2 cm)
- Bottom Card Slot(V)_ (L9.3 × W7.2 cm)



- **Faux Leather :**
"If you're using faux leather, you'll need approximately 50 x 22 cm of leather."
 - **Natural Leather :**
"If you're using natural leather, you'll need 1.8 square feet of leather."
 - **Polyster Leather/ Waxed Thread :**
"You'll need approximately 115 centimeters of thread."
- **Plant-based Adhesive :**
"Plant-based glue provides better adhesion and has less odor, making it more suitable for working in small spaces."
 - **Edge paint :**
"Apply edge paint to the edges of the bag using a suitable edge painting tool."
 - **Four-Part Button :**
"Feel free to use a medium magnetic button for this project."

PATTERN MEASUREMENT PLAN :

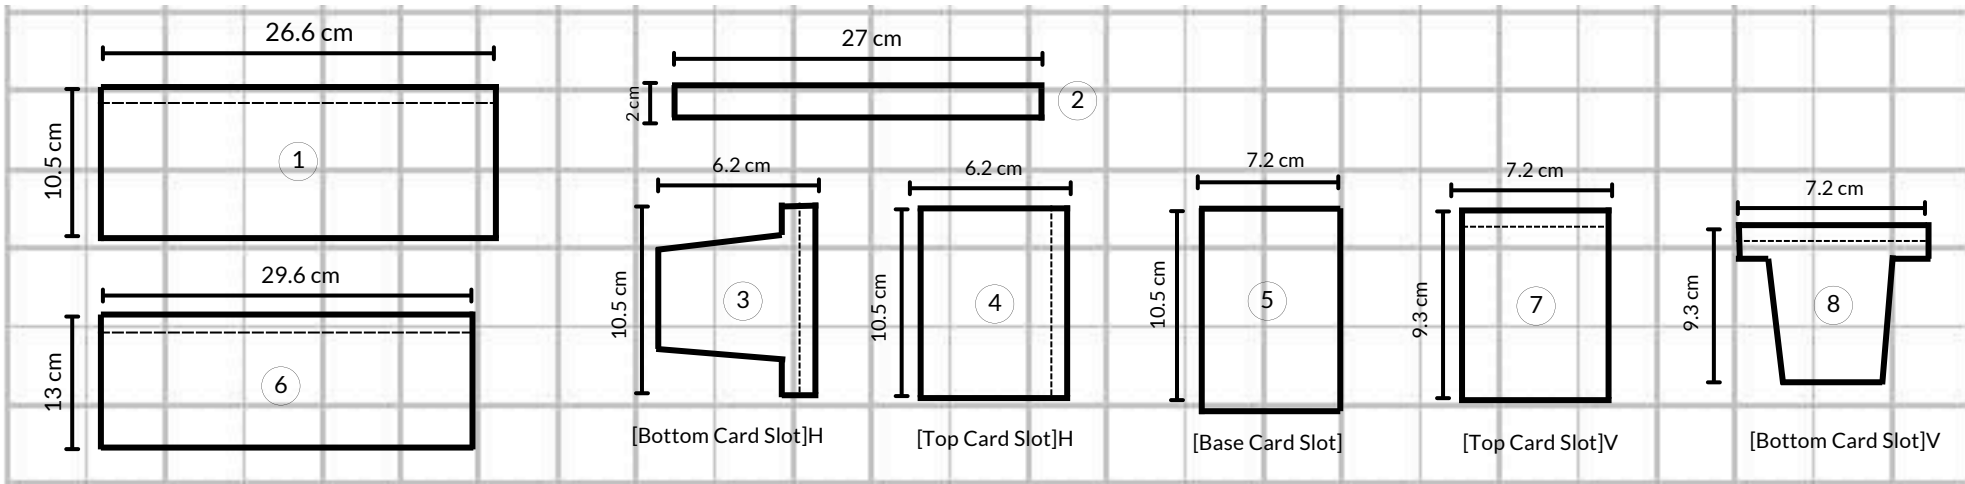

SEWING VIDEO TUTORIAL :



Copy paste the link to watch the video tutorial
https://youtu.be/mZmcmSpaibY?si=-XbcBXK_r_fr4Ta

SEWING TUTORIAL :

1-Print the pattern file and cut out the main bag pattern with scissors.

2-Place the patterns on the leather with a little space between them (for natural leather, place on the grain side / for synthetic leather, on the back side).

3-Trace around the pattern precisely with a gel pen or an awl.

4-Cut along the spaces between the leathers using a sharp cutter blade.

5-Skive the cut pieces with a skiving machine or by hand.

6-Trim the skived leathers again with a cutter so that the pen marks are discarded.

7-Attach the four-part button according to the pattern.

8-Cut the lining according to the pattern.

9-Glue the lining in place of the card slots, fold the edges, and crease them.

10-Step by step, glue and stitch the card slots onto the cardholder base.

11-Glue the base lining of the cardholder, crease the edge that forms the pocket, apply edge paint, and finally stitch.

12-Attach the cardholder section to the inner body.

13-Glue and stitch the binding strip (gand strip) to the top of the inner body.

14-Glue the inner body to the outer body.


15-Crease and burnish the inner and outer edges.

16-Stitch all around the wallet and apply edge paint.

Done!

PATTERN :




Print the following pattern on A3 paper.

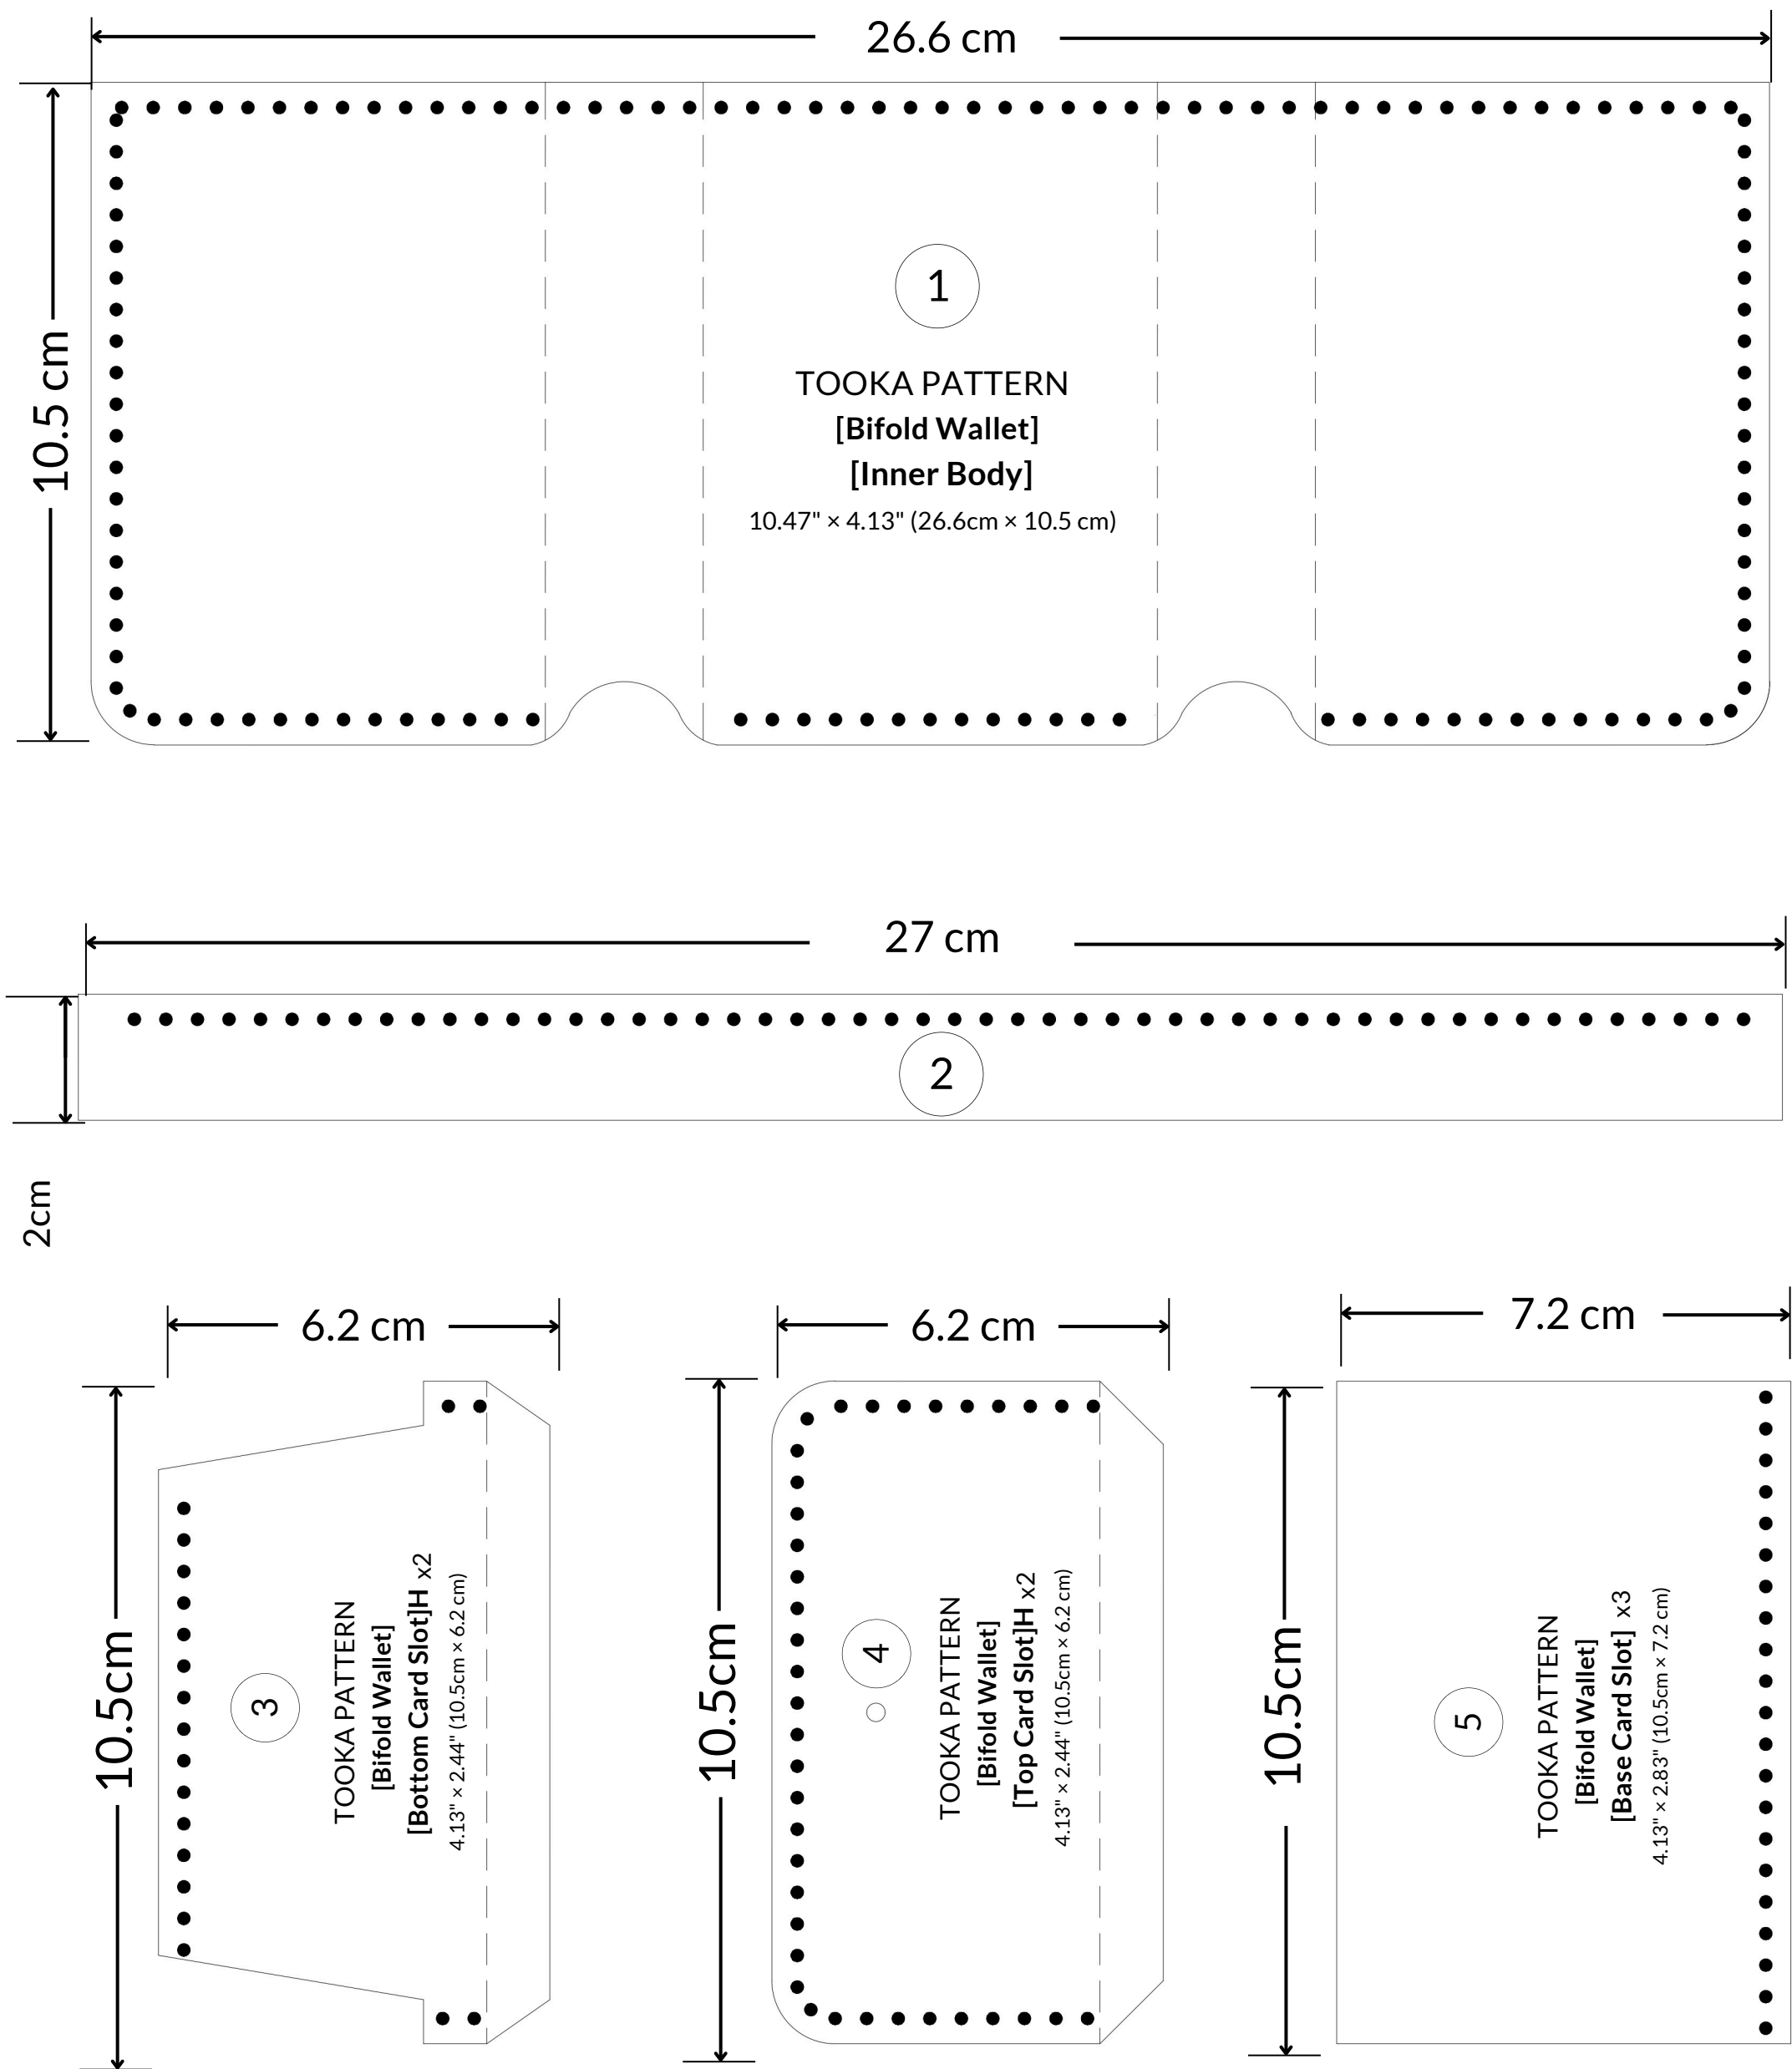

See the **Continuation of the Patterns** on the next page, friends!

PATTERN :

Print the following pattern on A3 paper.

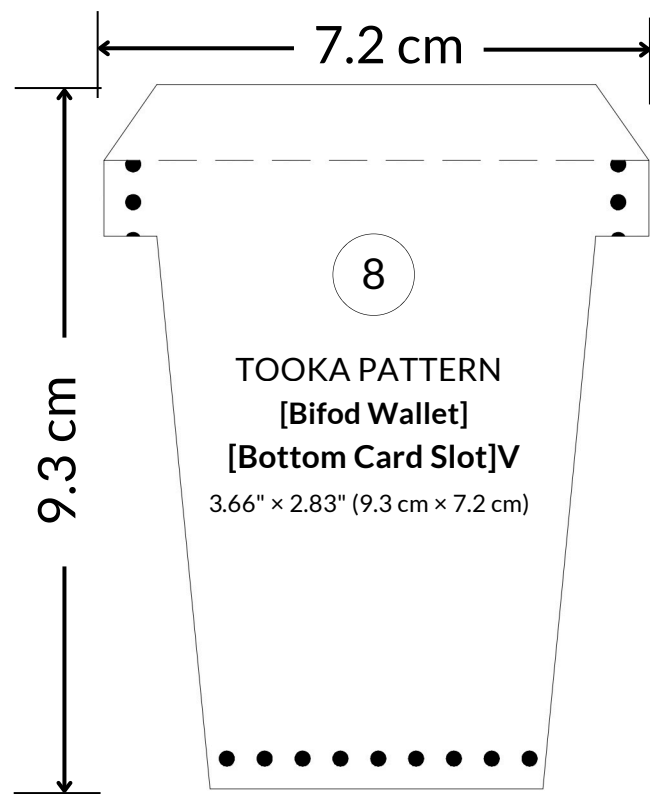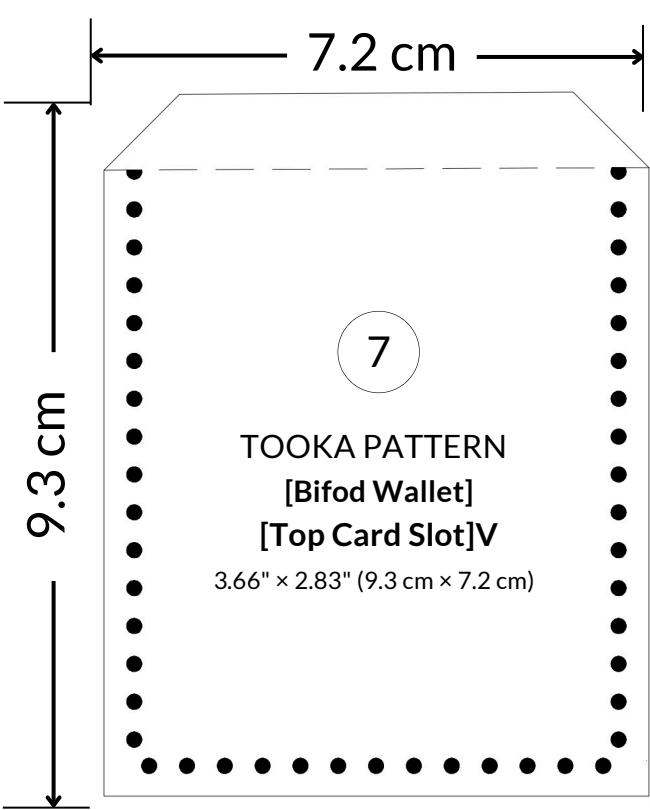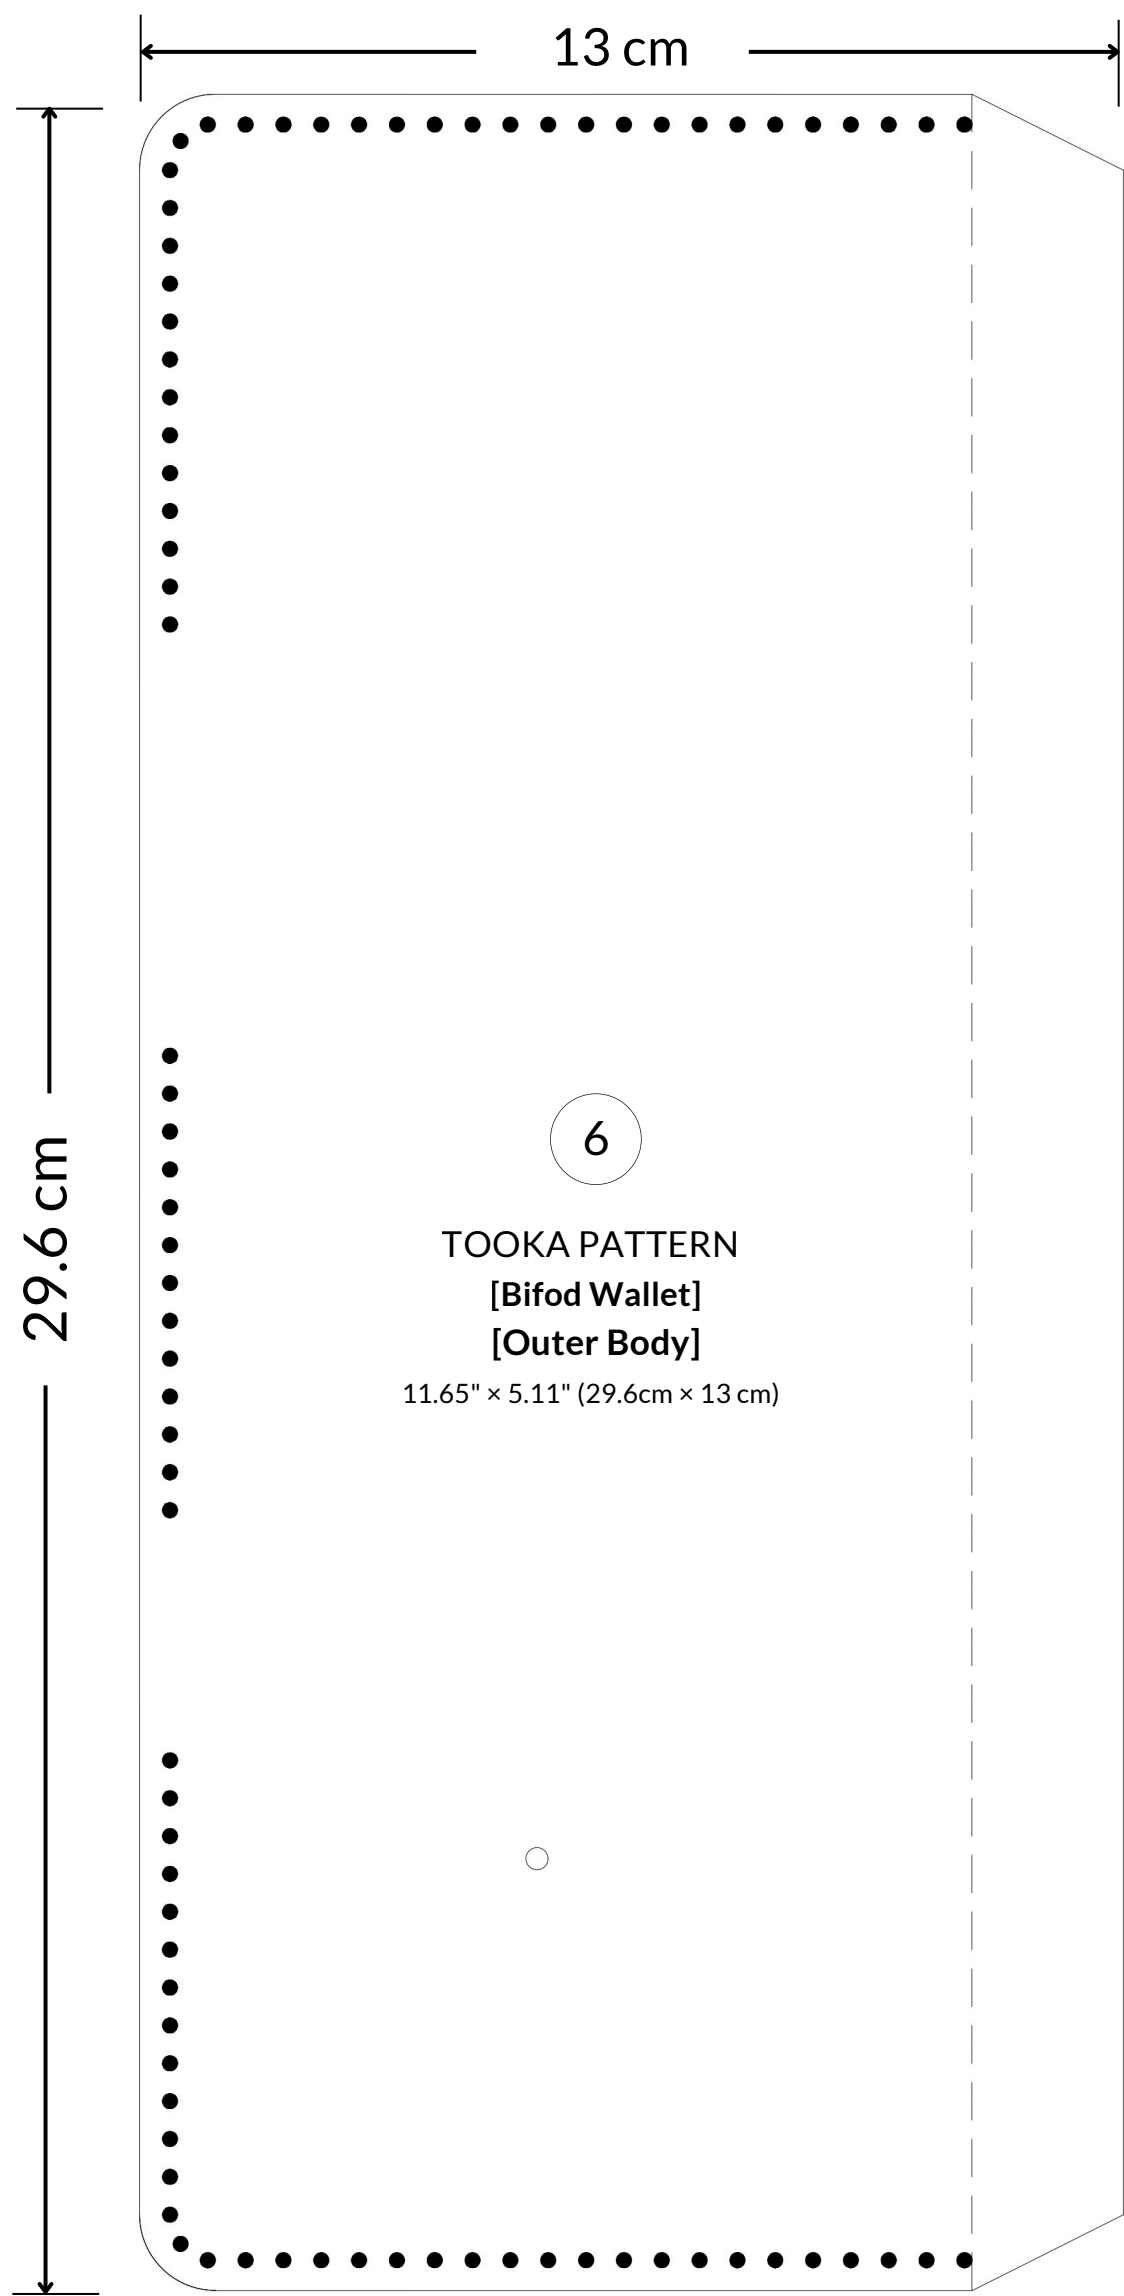

- *LINING PATTERN :**
- For bottom horizontal cardholder: 9.5 × 4.8
 - For top horizontal cardholder: 9.5 × 4.2
 - For top vertical cardholder: 7.3 × 6.2
 - For bottom vertical cardholder: 7.8 × 6.2
 - For cardholder base: 9.5 × 6.8

GOOD LUCK !

I hope I was able to help you.
Stay tuned, and I'll teach you how to make the **Waist Bag** next week!

Follow us on other social media platforms :

