

TOOKA PATTERN

NAME	DIFFICULTY	DATE	ON SOCIAL
Card Wallet	● ○ ○	Oct 3 , 2025	#tookapattern


DIMENSION :

- Main Body (L 25.4 × W 11 cm)
- Card Slot Base (L 11 × W 7.2 cm)x2
- Bottom Card Slot (L 11 × W 6.2cm)x2
- Top Card Slot (L11 × W6.2 cm)
- Coin Pocket (L11 × W7.2 cm)
- Flap (L10 × W5.5 cm)
- Inner Pocket Flap (L10 × W3 cm)
- Inner Flap (L11 × W5 cm)



- **Faux Leather :**
"If you're using faux leather, you'll need approximately 50 x 22 cm of leather."
 - **Natural Leather :**
"If you're using natural leather, you'll need 1.1 square feet of leather."
 - **Polyster Leather/ Waxed Thread :**
"You'll need approximately 100 centimeters of thread."
 - **Hidden magnetic snap :**
"We use a hidden magnet with a 1.5 cm diameter."
- **Plant-based Adhesive :**
"Plant-based glue provides better adhesion and has less odor, making it more suitable for working in small spaces."
 - **Edge paint :**
"Apply edge paint to the edges of the bag using a suitable edge painting tool."
 - **Four-Part Button :**
"Feel free to use a medium magnetic button for this project."

PATTERN MEASUREMENT PLAN :

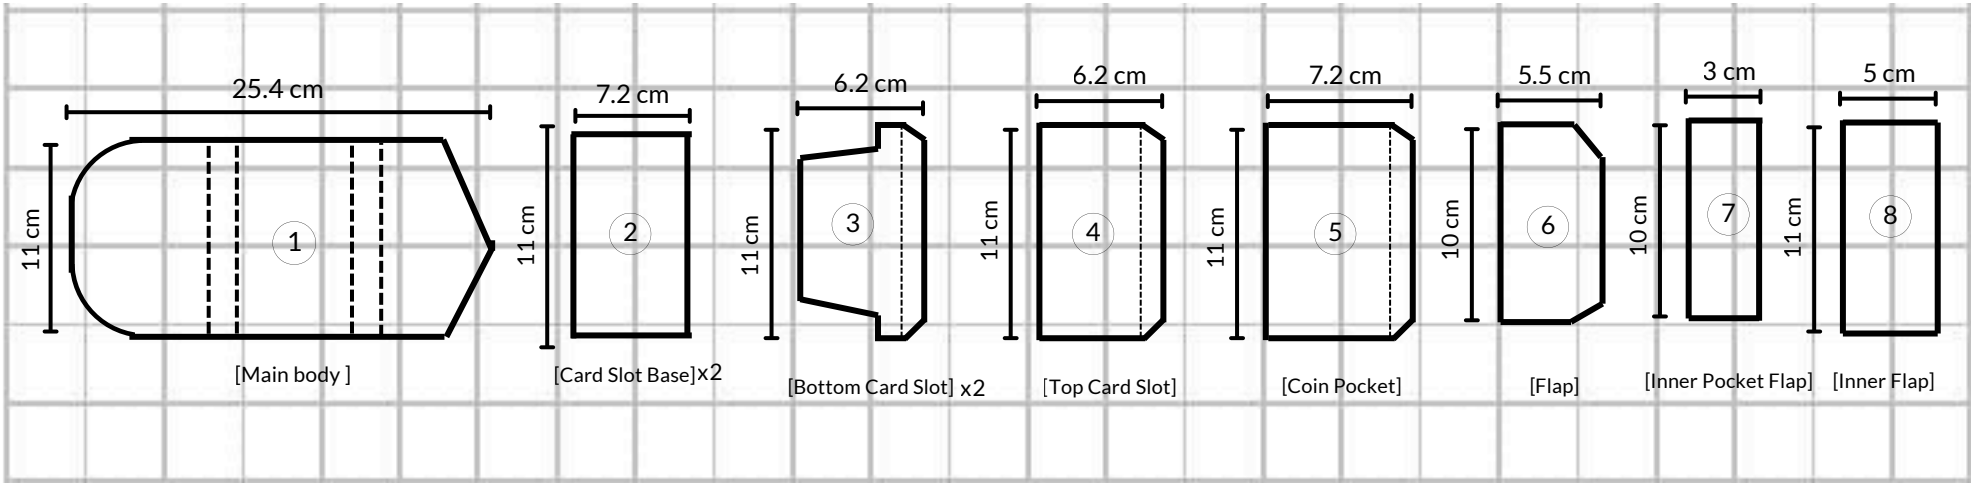

SEWING VIDEO TUTORIAL :



Copy paste the link to watch the video tutorial
https://youtu.be/6RxzqRhOWqU?si=IBid_4cFvswOozUU

SEWING TUTORIAL :

1-Print the pattern file and cut out the main bag pattern with scissors.

2-Place the patterns on the leather with some space between them (on the grain side for natural leather / on the back side for synthetic leather).

3-Using a gel pen or an awl, carefully trace around the pattern.

4-With a sharp-bladed cutter, cut along the spaces between the leather pieces.

5-Skive the cut pieces using a skiving machine or by hand.

6-Cut the skived pieces again with the cutter so that the pen marks remain in the waste.

7- Install the hidden magnet on the inner flap and the main body.

8-For the card slots, glue lining on the top and bottom, fold the edges, crease them, then attach them step by step onto the base of the card holder and stitch them.

9-Fold the coin pocket, crease it, glue it onto its base, and stitch.

10-Glue the coin pocket flap onto its inner body, crease all around, and paint the edges.

11-Cover the snap button (**four-part button**) as I taught you before, and press it onto the coin pocket flap.

● Click on this link to watch the video: https://youtu.be/gHrmA8VjsbY?si=r-Mbgd_1radnbsJr

12-Now glue and stitch the flap onto the coin pocket base.

13-Attach the prepared card holder section and the prepared coin pocket to the main body.





14-Glue the inner flap body to the main body.

15-Crease the inner and outer edges of the wallet, burnish the edges, paint them, and then stitch.

And it's done.

PATTERN :





Print the following pattern on A3 paper.

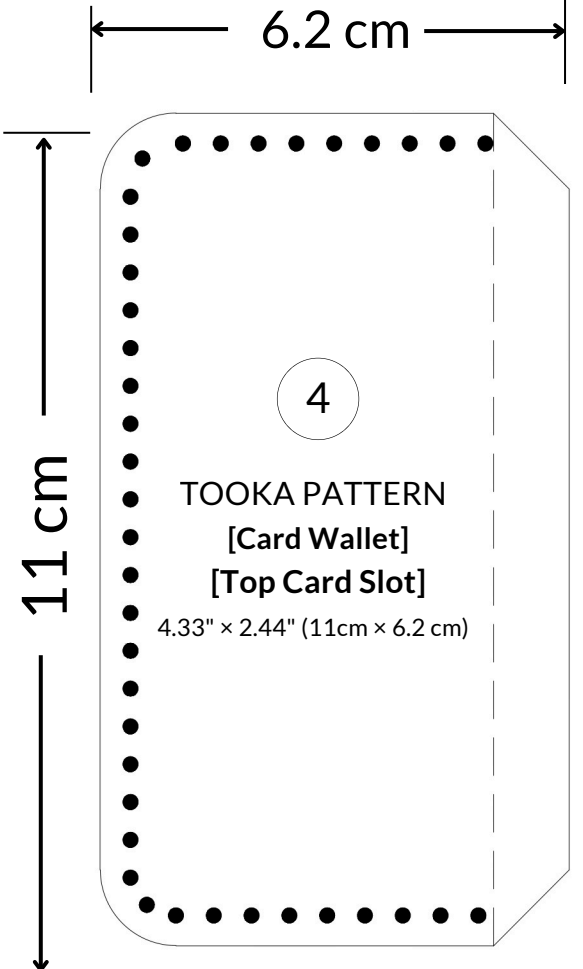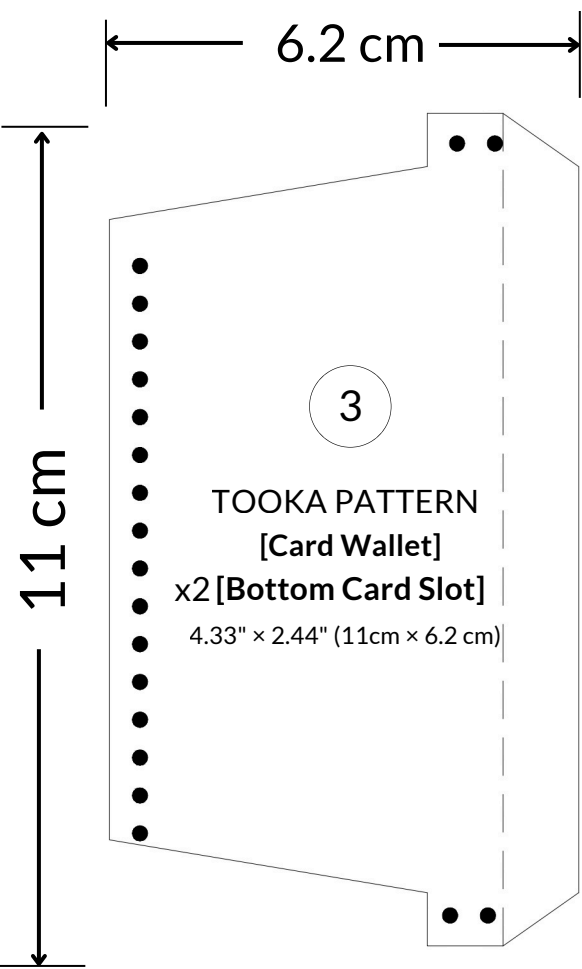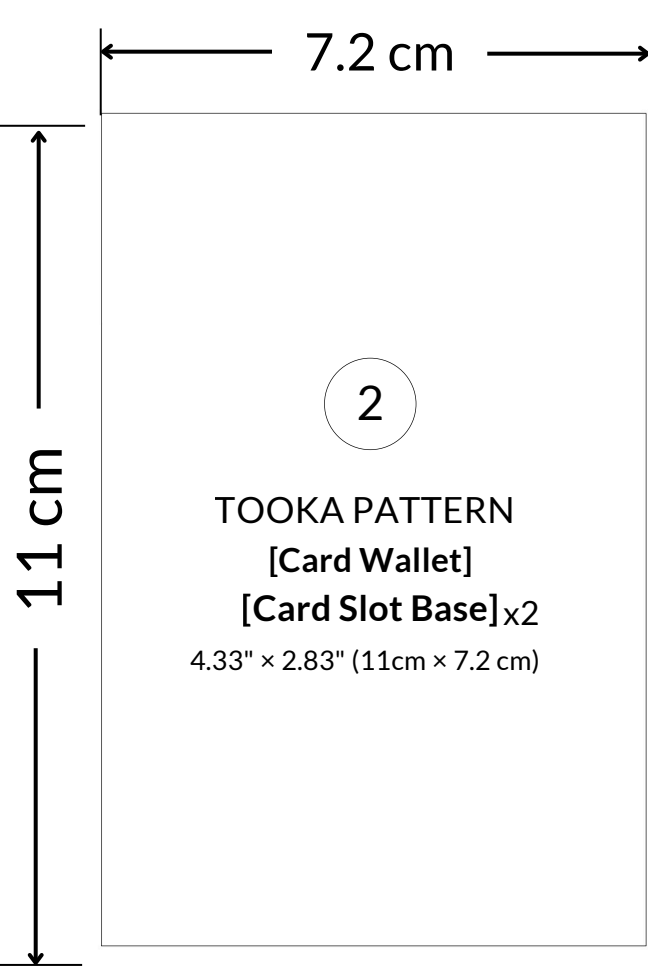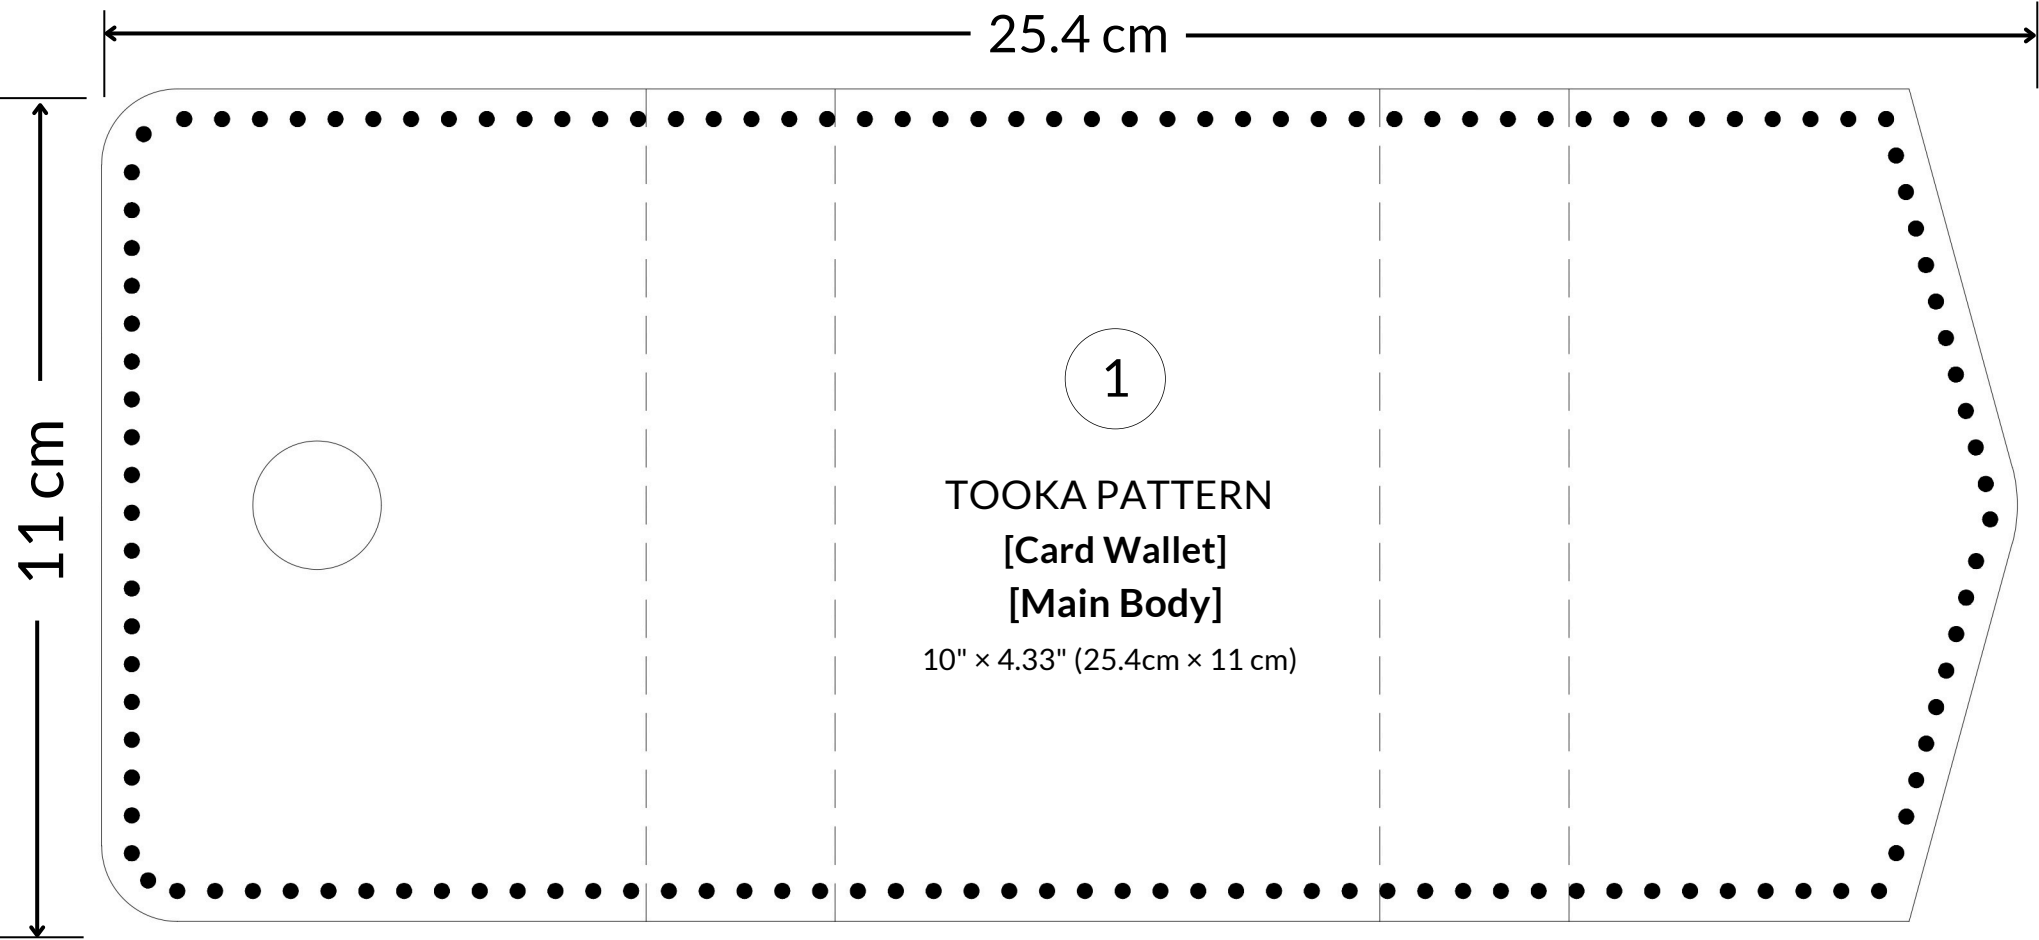

See the **Continuation of the Patterns** on the next page, friends!

PATTERN :

Print the following pattern on A3 paper.

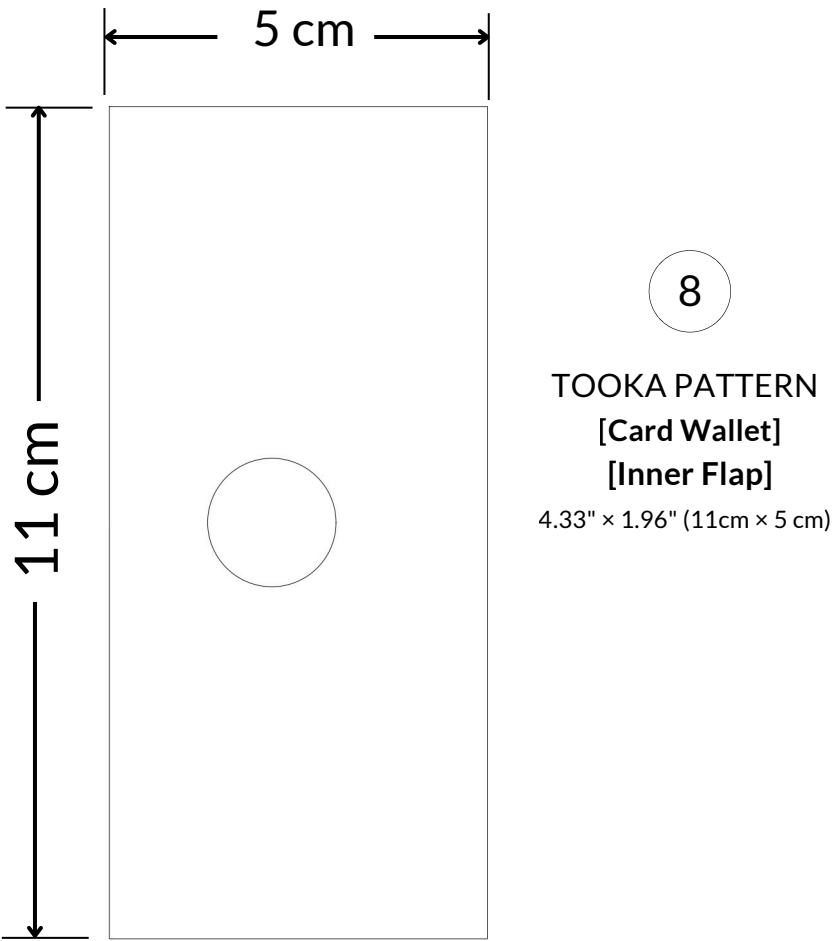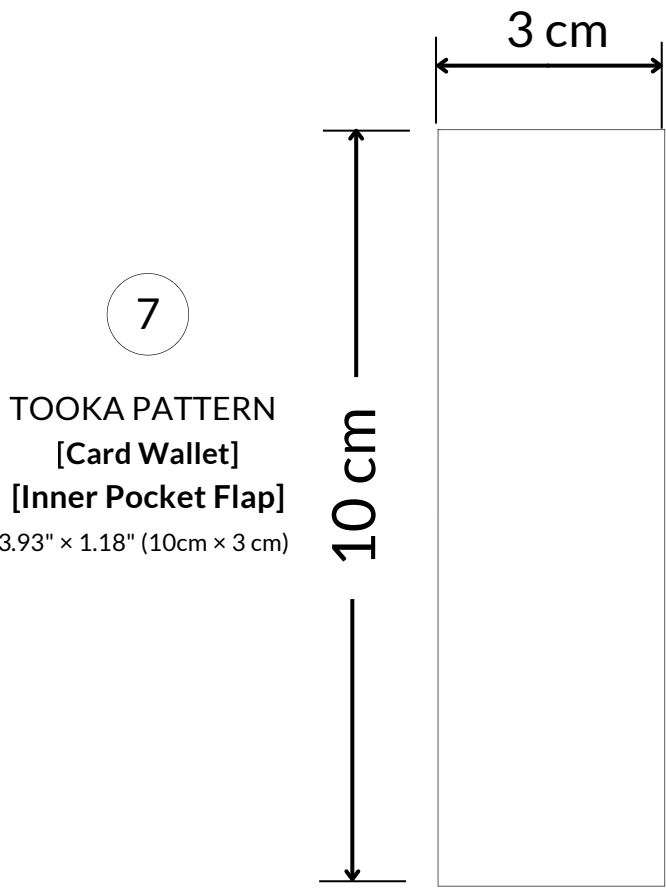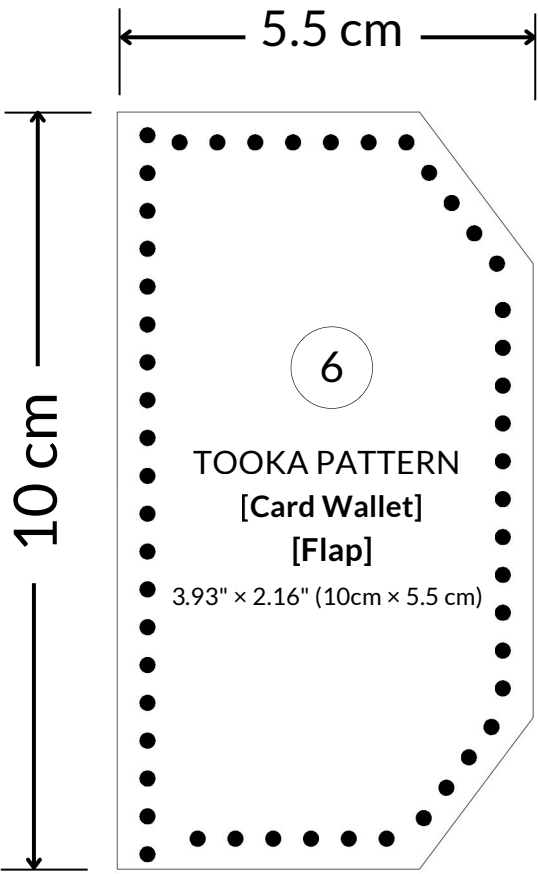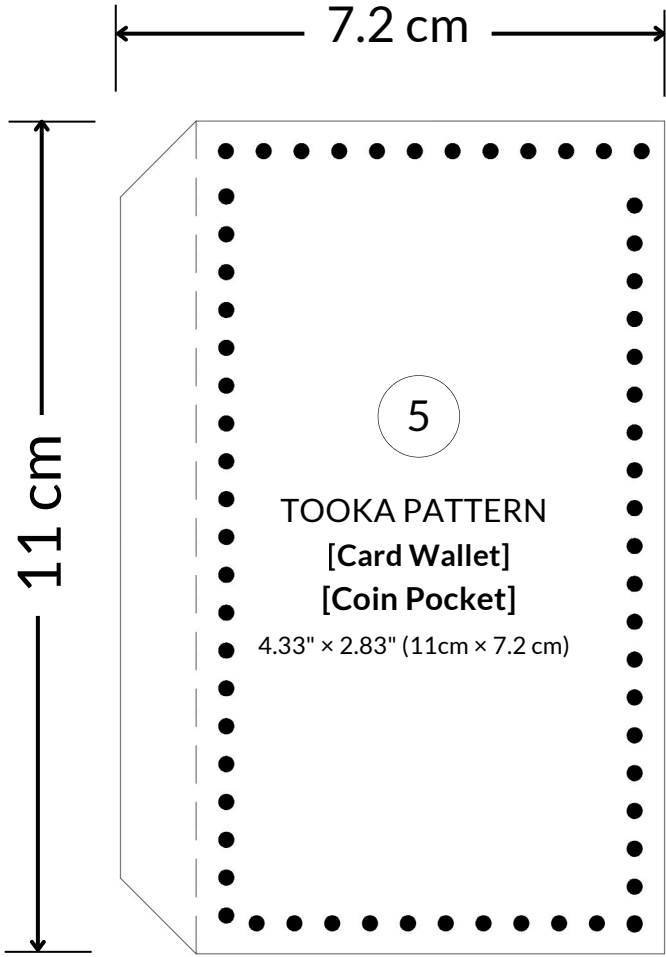

*LINING PATTERN :

For the cardholder base lining: 10 x 6.8
For the Top cardholder lining: 10 x 4.2
For the bottom cardholder linings: 10 x 4.8

GOOD LUCK !

I hope I was able to help you.
Stay tuned, and I'll teach you how to make the **Bifold Wallet** next week!

Follow us on other social media platforms :



@t00kaleather



@tookaleather



@tookaleather