

TOOKA PATTERN

NAME	DIFFICULTY	DATE	ON SOCIAL
Slim Card Wallet	● ○ ○	Sep 15 , 2025	#tookapattern


DIMENSION :

- Main Body (L 11 × W 8 cm) x2
- Card Slot Base(L 11 × W 6.5 cm)
- Photo Slot (L 11 × W 7.5 cm)
- Bottom Card Slot (L 9.3 × W 6.5 cm)x2
- Top Card Slot (L 8.4 × W 6.5 cm)



- **Faux Leather :**
"If you're using faux leather, you'll need approximately 12 x 50 cm of leather."
- **Natural Leather :**
"If you're using natural leather, you'll need 0.6 square feet of leather."
- **Polyster Leather/ Waxed Thread :**
"You'll need approximately 50 centimeters of thread."
- **Plant-based Adhesive :**
"Plant-based glue provides better adhesion and has less odor, making it more suitable for working in small spaces."
- **Edge paint :**
"Apply edge paint to the edges of the bag using a suitable edge painting tool."
- **Transparent plastic sheet :**
"Cut a transparent plastic sheet to 9.5 × 5.5 cm for the photo slot."

PATTERN MEASUREMENT PLAN :

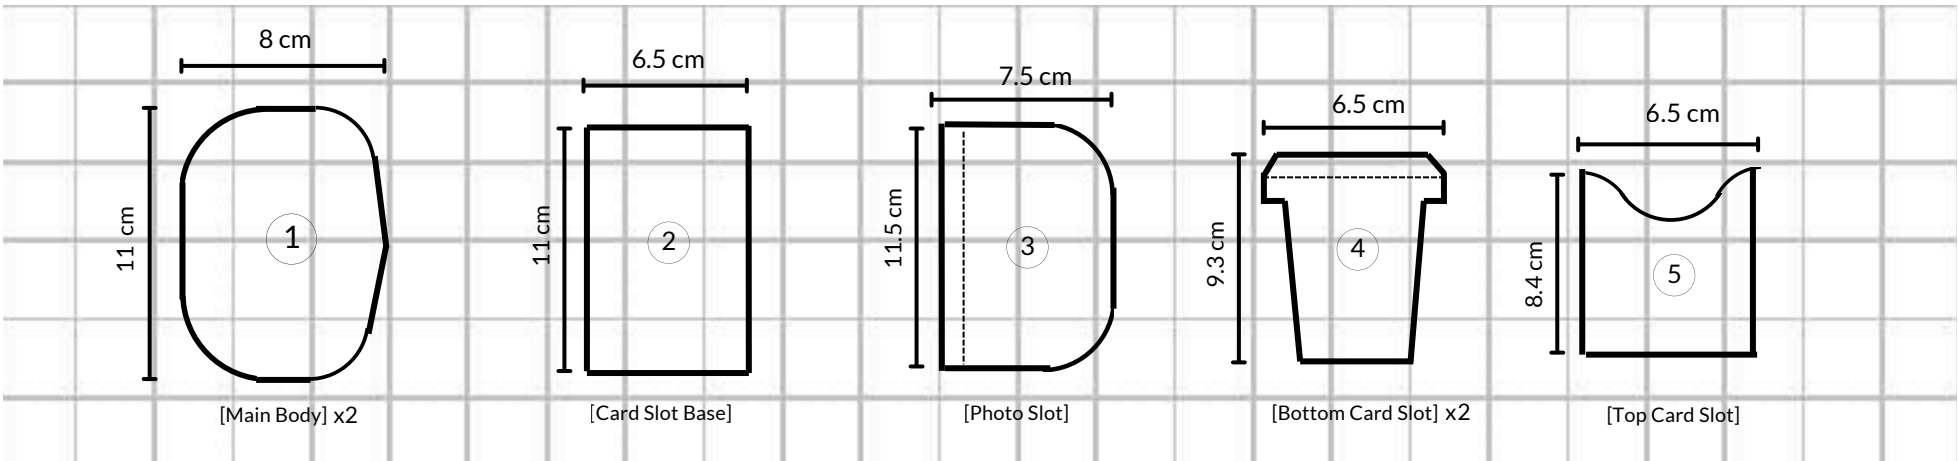

SEWING VIDEO TUTORIAL :



Copy paste the link to watch the video tutorial
<https://youtu.be/s8sUJaVT1Ac?si=Ob0AvtBUG9IHdfVO>

SEWING TUTORIAL :

1-Print the pattern and cut out the main bag pieces using scissors.

2-Place the patterns slightly apart on the leather (on the grain side for natural leather / on the back side for synthetic leather).

3-Trace around the patterns precisely with a gel pen or an awl.

4-Use a sharp-bladed cutter to cut out the leather, leaving space between pieces.

5-Skive the cut pieces using a skiving machine or by hand.

6-Trim the skived pieces again with a cutter, ensuring the pen marks are removed in the trimming.

7-Place the lining patterns on your chosen lining material and cut them out.

8-Glue the top and bottom lining pieces of the card slots.

9-Fold and crease the bottom card slots.

10-Crease and edge-paint the top cardholder edge.

11-Crease and edge-paint the inner edges of the photo slot.

12-Glue the transparent plastic sheet in place.

13-Fold and crease the edges of the photo slot.

14-Stack and glue the top and bottom card slots step by step on the card slot base, then sew the bottom edge.

15-Crease, edge-paint, and stitch the edges of the card slot base.

16-Attach the cardholder panel to the main body of the wallet.


17-Glue the photo slot onto the second main body.

18-Attach both main body pieces together and crease both sides of the edges.

19-Burnish and edge-paint the wallet edges, then sew all around to finish.

PATTERN :





Print the following pattern on A3 paper.

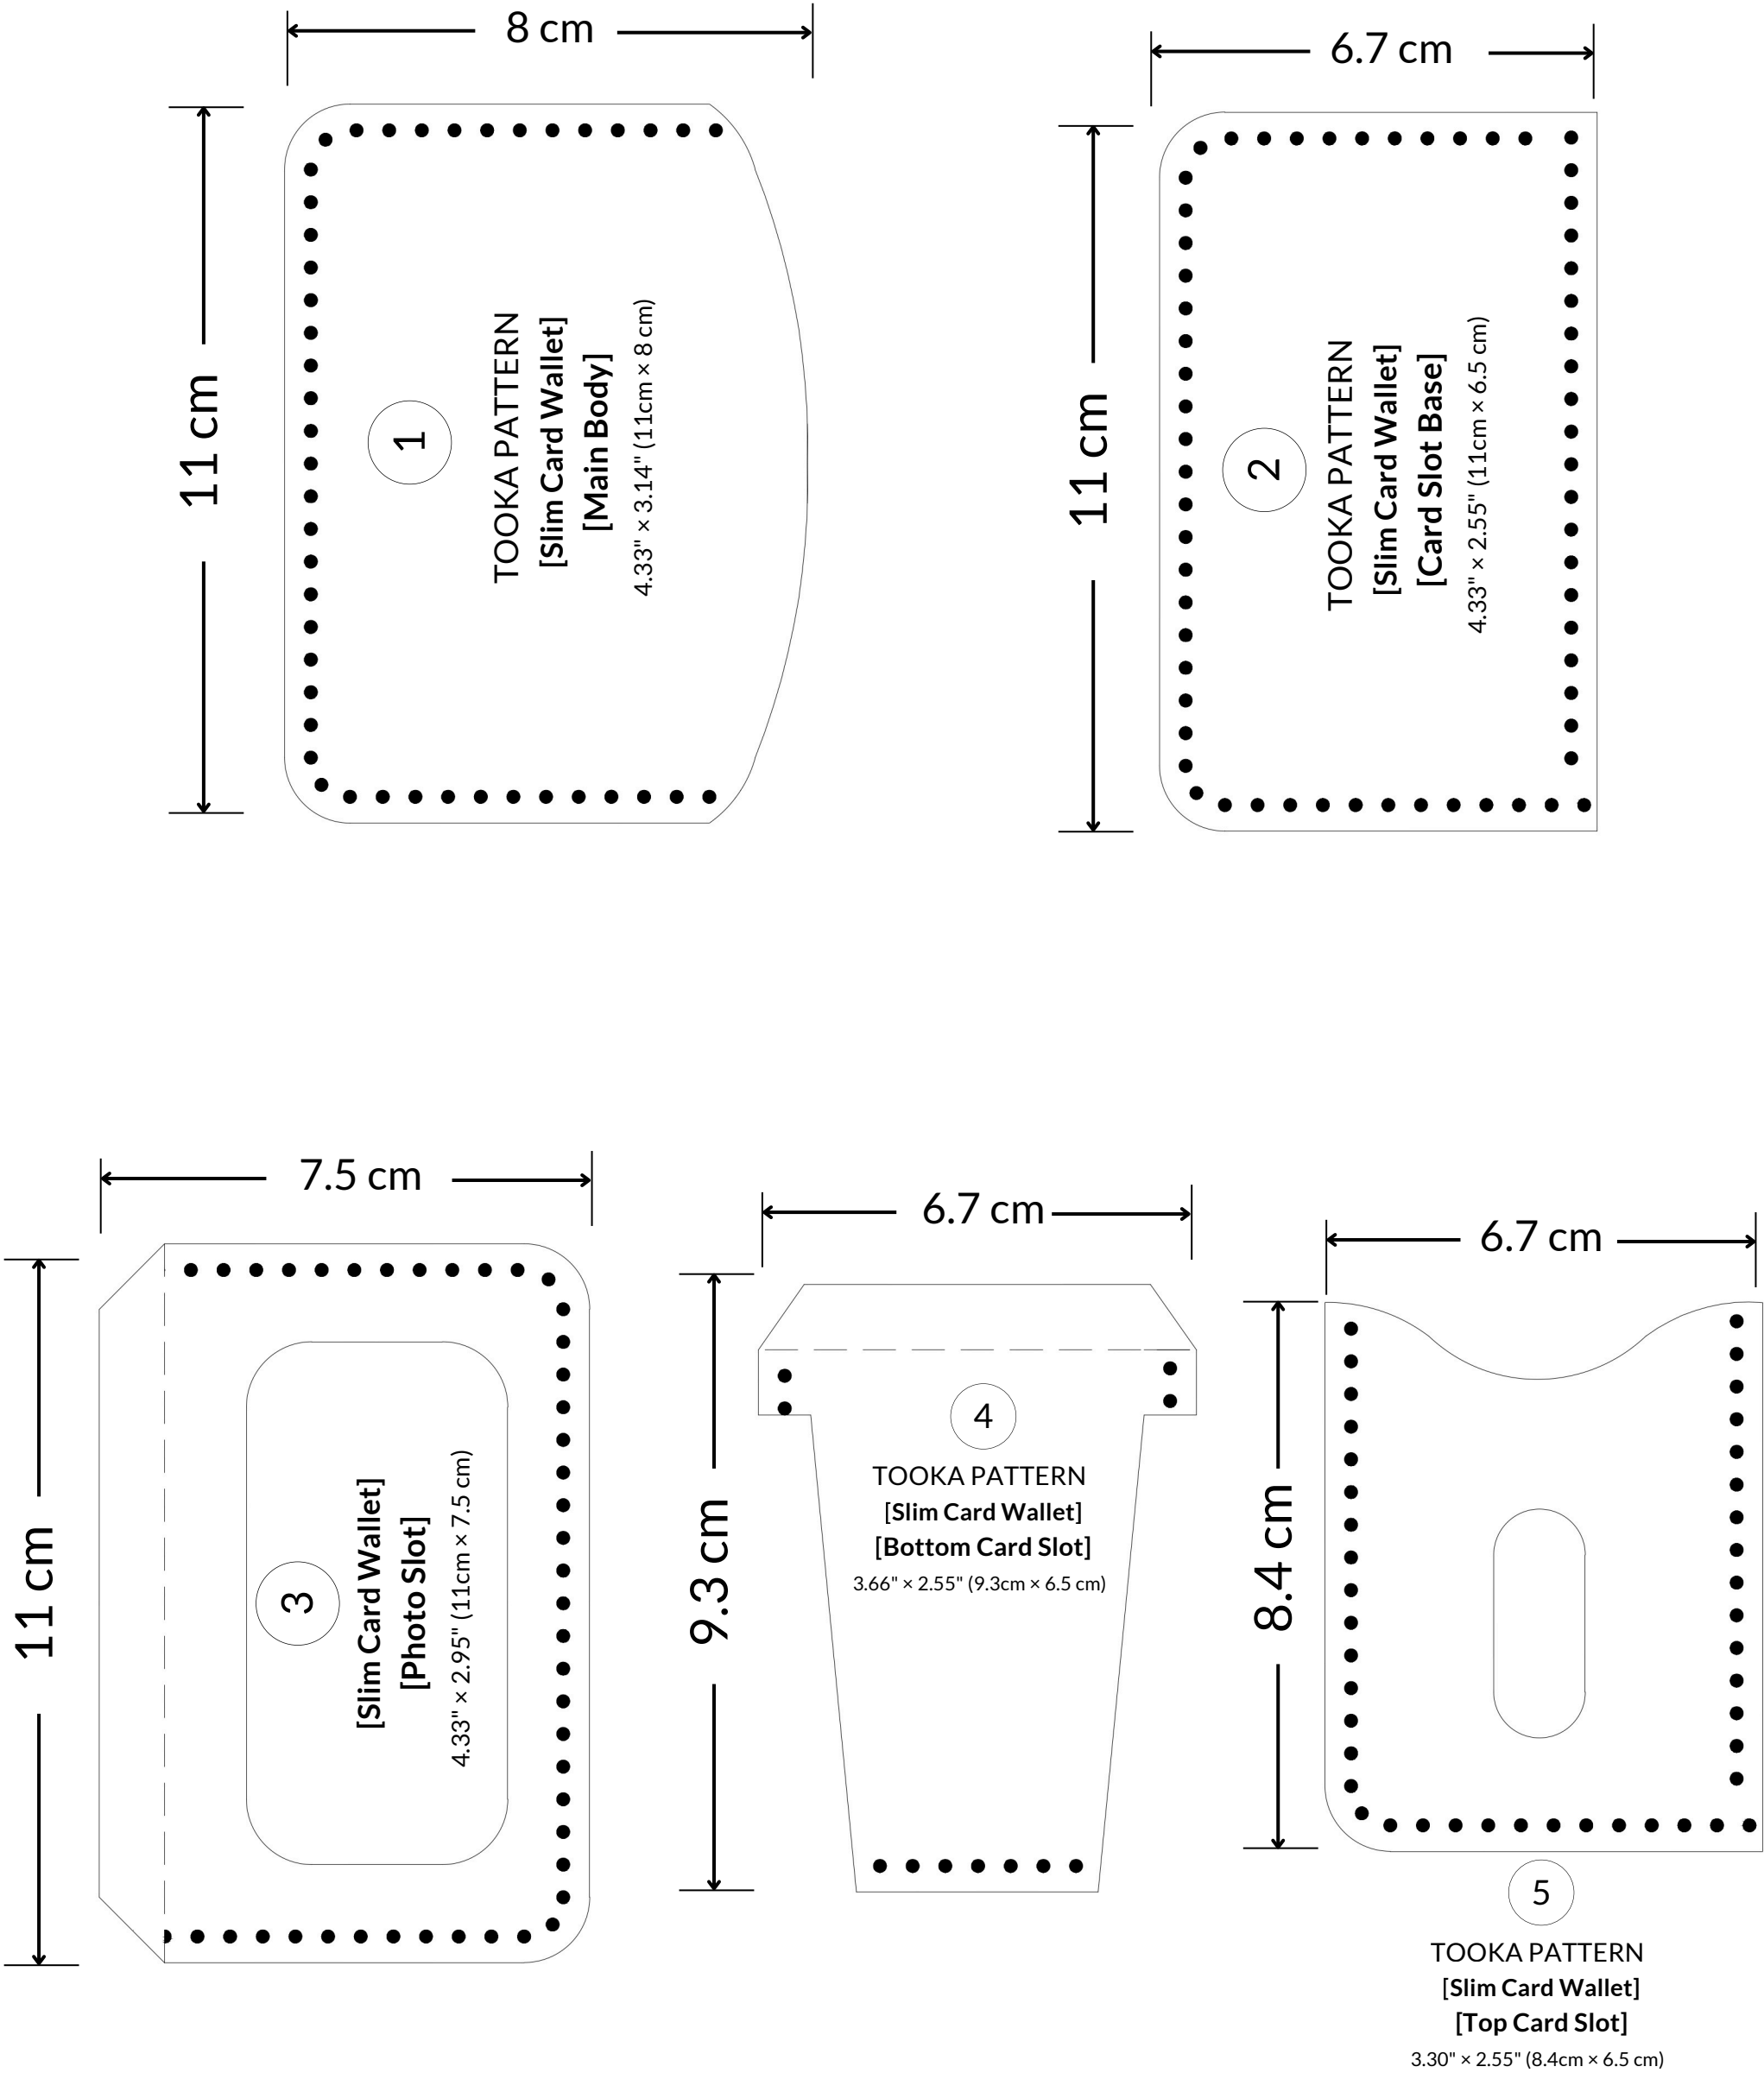

See the **Lining Pattern** on the next page, friends!

PATTERN :

Print the following pattern on A3 paper.

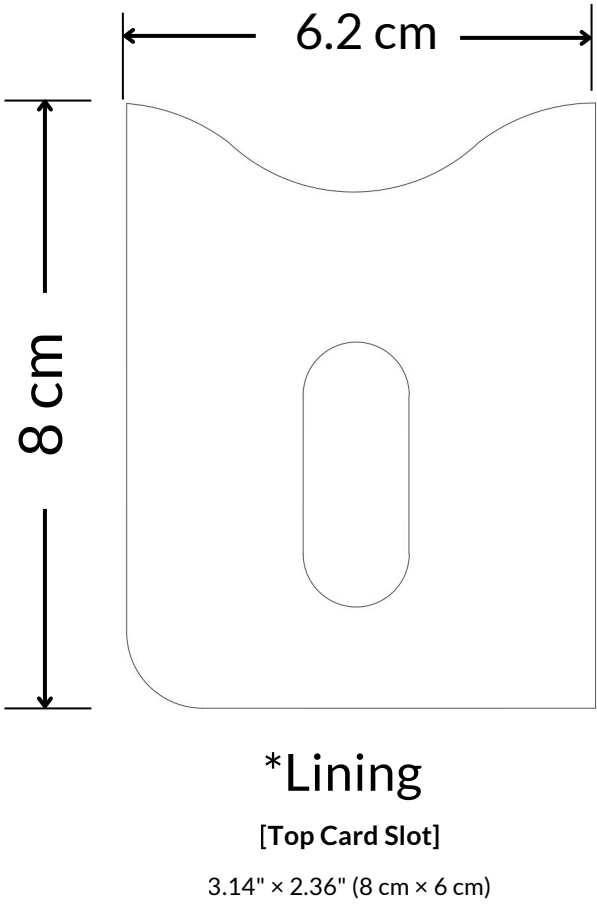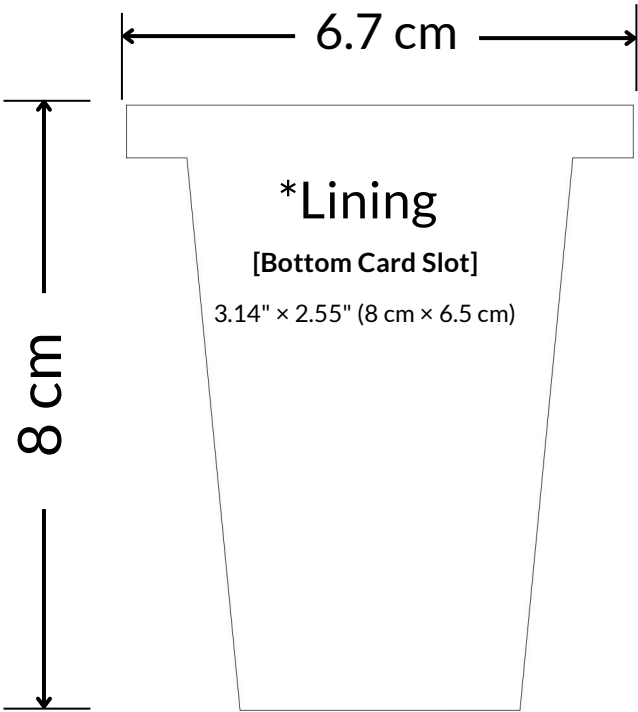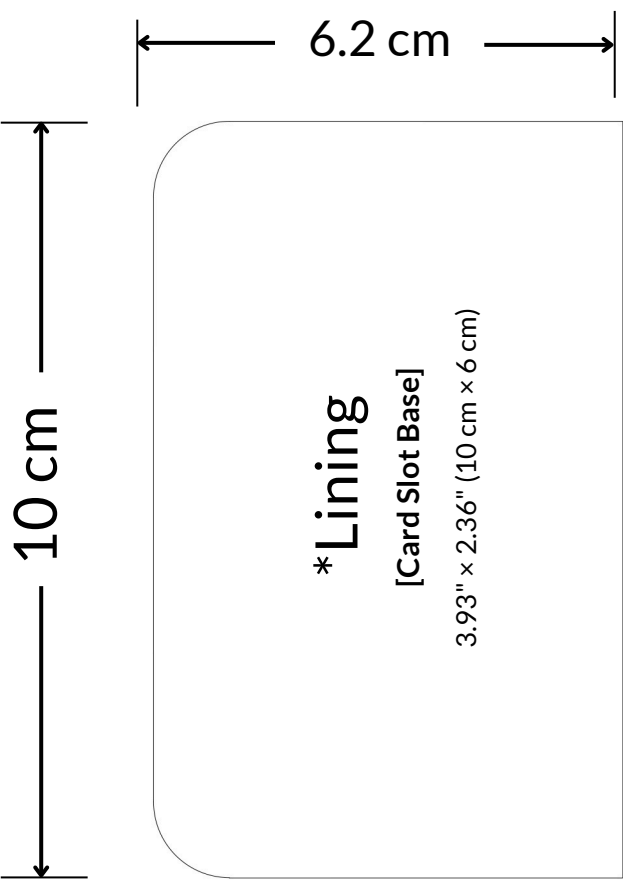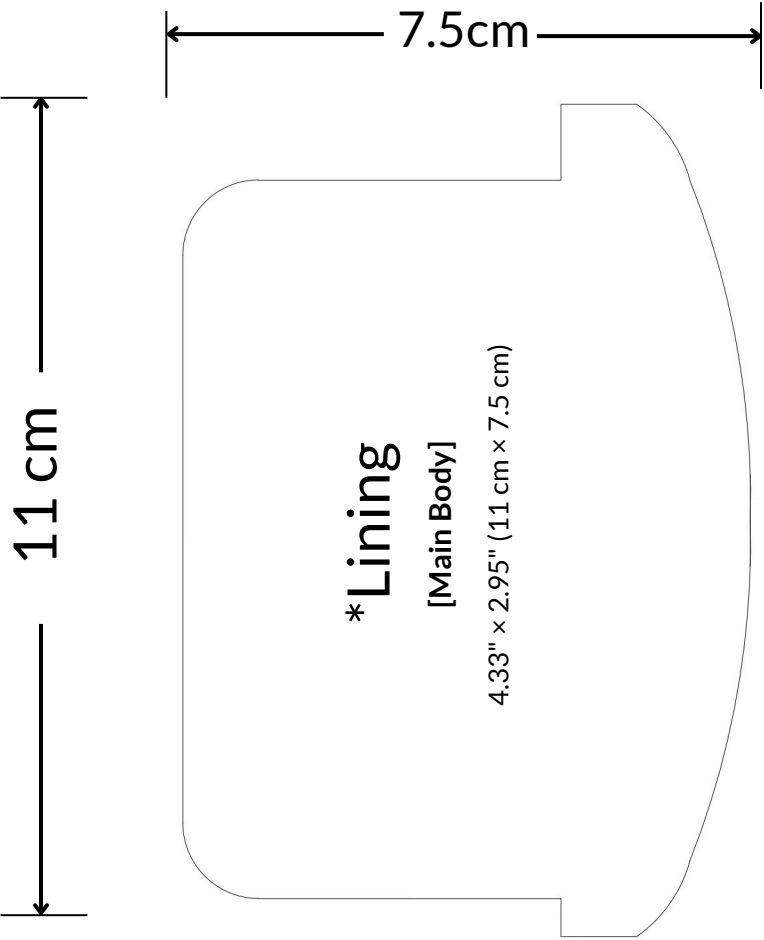

GOOD LUCK !

I hope I was able to help you.
Stay tuned, and I'll teach you how to make the **Pencil Case** next week!

Follow us on other social media platforms :



@t00kaleather



@tookaleather



@tookaleather